

vtech®

Parent's Guide

Toot-Toot Animals

Pet Salon



91-003369-004 UK

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years




To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTech® Toot-Toot Animals Pet Salon!** This compact purse unfolds to present a playful Pet Salon with a vanity, dressing room and ramp along with a Toot-Toot Animals dog. Let your little one play pretend stylist to the pretty poodle, with the included bath, hair dryer and brush to get her ready to tackle the day.

2 SmartPoint™
Locations

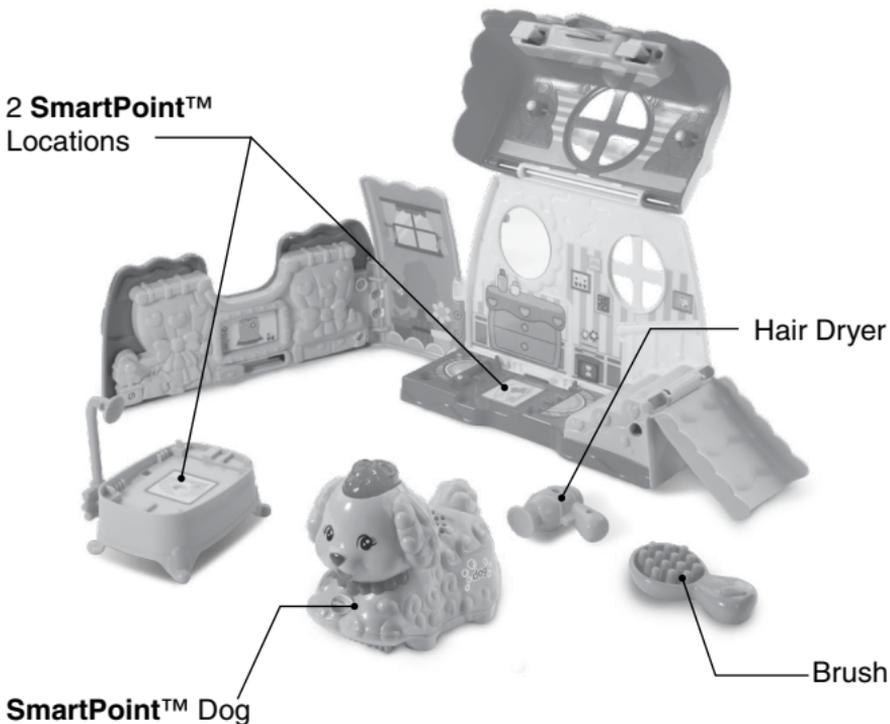

INCLUDED IN THIS PACKAGE



One **Toot-Toot Animals Pet Salon**

One **SmartPoint™** dog

One bath with **SmartPoint™**



One brush

One hair dryer



One shower head

One step

One label sheet


One parent's guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.


NOTE: Please keep user's manual as it contains important information.

Please note that the step is under the bath as shown below, do not discard.

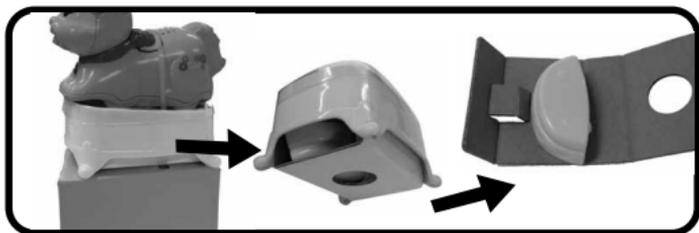

Unlock the packaging lock:


- ① Rotate the packaging lock anticlockwise 90 degrees.
- ② Pull out the packaging lock.

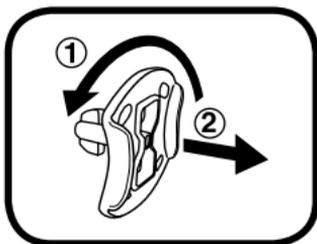

GETTING STARTED

BATTERY INSTALLATION – DOG

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the dog. Use a coin or a screwdriver to loosen the screw.
3. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
4. Replace the battery cover and tighten the screw to secure.

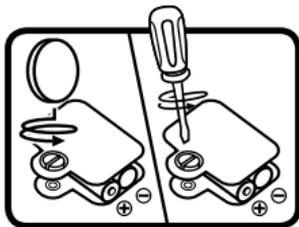

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.


For more information, please visit:





www.recycle-more.co.uk

www.recyclenow.com

LABEL APPLICATION

Please stick the labels to the play set as indicated on the following page.

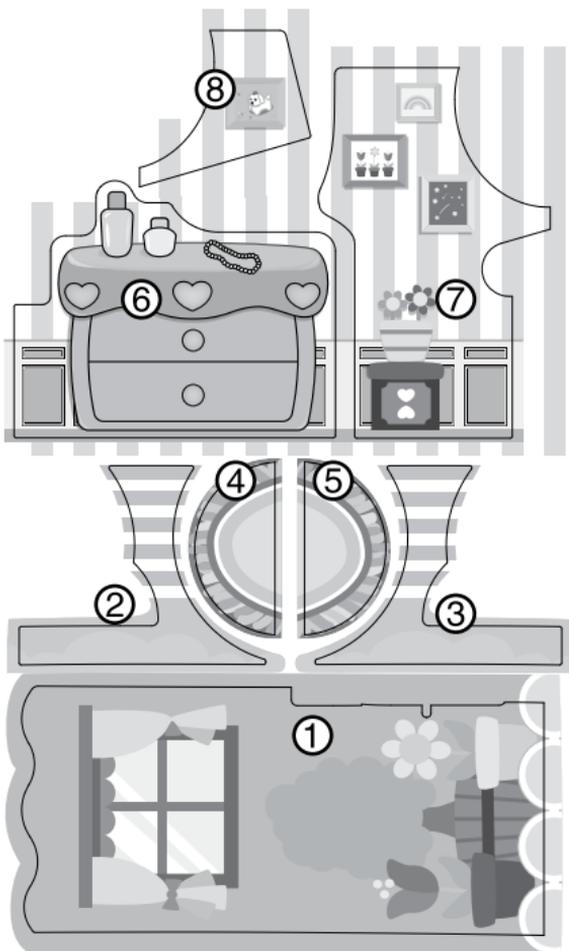


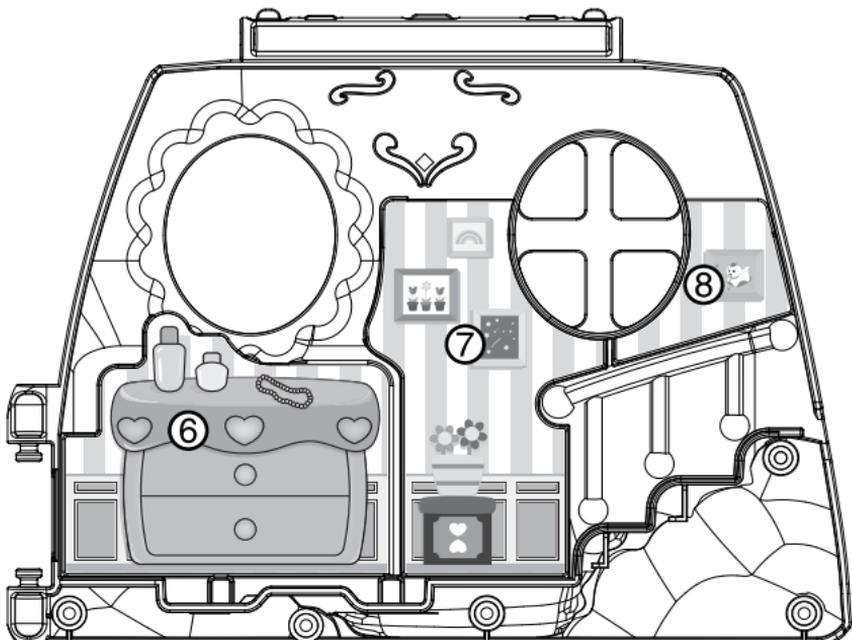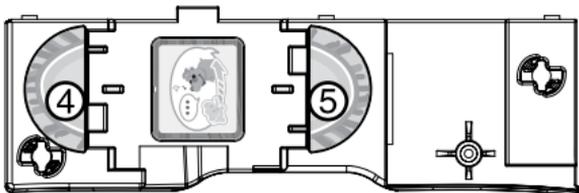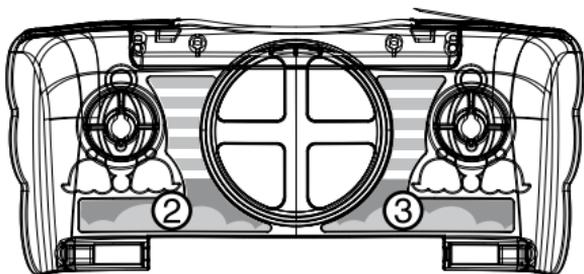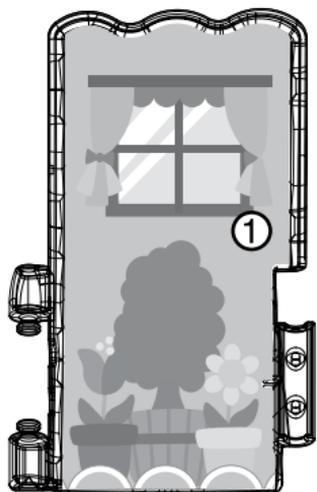

ASSEMBLY INSTRUCTIONS

With the **VTech® Toot-Toot Animals Pet Salon**, safety comes first. To ensure your child's safety, adult assembly is required.


1. Insert the **Step** into the **Purse**, as shown below.

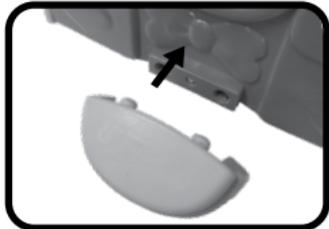


2. With the **Bath** right-side up, insert the **Shower Head** into the **Bath**, as shown below.



3. Open the **Toot-Toot Animals Pet Salon** by squeezing the tab behind the silver heart and lifting up, as shown below.

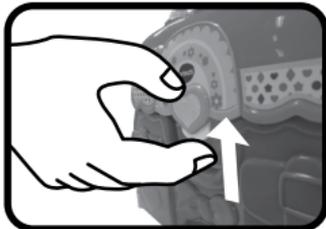


Note: Do not pull the door outward when trying to open. It will cause the lid to stick and remain closed.

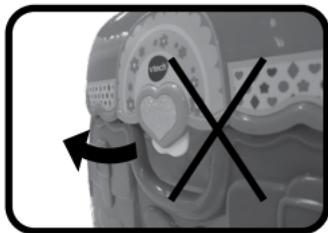

PRODUCT FEATURES – DOG

1. On/Off Switch

To turn the unit **ON**, slide the **On/Off Switch** to the **ON** (⏻) position. You will hear a song, a phrase and sounds. The light will flash with the sounds. To turn the unit **OFF**, slide the **On/Off Switch** to the **OFF** (●) position.

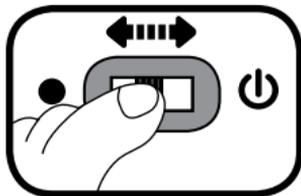

2. Automatic Shut Off


To preserve battery life, the **VTech® Toot-Toot Animals Pet Salon dog** will automatically power down after approximately 60 seconds without input.

The unit can be turned on again by pressing the light up button, pushing the dog quickly or triggering a **SmartPoint™** location.

Note: This product is in TRY-ME mode in the packaging. After opening the package, turn the animal off and on again to proceed with normal play. If the unit powers down while playing, we suggest changing the batteries.

ACTIVITIES – DOG


1. Press the **Light Up Button** to hear dog sounds, sing-along songs and phrases. The light will flash with the sounds.

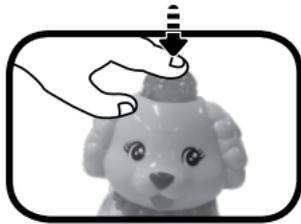

2. Push the dog to hear fun sounds and melodies. While a melody is playing, push the dog again to add in fun sounds on top of the melody. The light will flash with the sounds.



3. For added fun, the dog interacts with the **VTech® Toot-Toot Animals Pet Salon**. Simply put the dog on one of the two **SmartPoint™** locations on the **Toot-Toot Animals Pet Salon** to see the light flash and hear greetings, fun sounds, short tunes and phrases. You can also

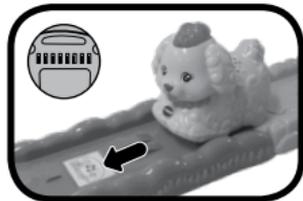

play with your animal on other **Toot-Toot Animals** play sets (each sold separately).

PRODUCT FEATURES – PET SALON


1. SmartPoint™ Locations

The **Pet Salon** includes two **SmartPoint™** locations that interact with the included **SmartPoint™** dog or other **Toot-Toot Animals** characters (each sold separately). Simply place the animal on a **SmartPoint™** location to hear fun sounds, phrases and music.

ACTIVITIES – PET SALON

1. SmartPoint™ Vanity

Place the dog on the **SmartPoint™** in front of the **Vanity** to trigger a fun response. The light on the dog will flash with the sounds.

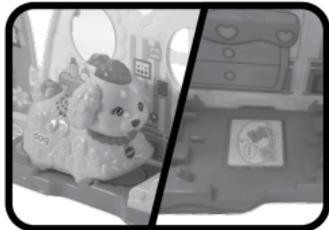

2. SmartPoint™ Bath

Place the dog on the **SmartPoint™** in the **Bath** to trigger a fun response. The light on the dog will flash with the sounds.



3. Accessories

Enjoy helping the dog get ready. For added role-play, pretend to dry or brush the dog with the **Brush** and **Hair Dryer** accessories.



4. Changing Room

Slide the slider for clothes-changing fun.



5. On-the-Go Fun

Carry the dog around with you in the purse. All the pieces can be stored inside!



SING-ALONG SONGS

1. Brush your teeth,
Wash your hair,
Check the wardrobe for what to wear.
2. Oh what, oh what should we do for fun?
Let's go, let's go for a run!
3. For, I'm a very good doggie!
For, I'm a very good doggie!
For, I'm a very good doggie!
My owner sure loves me.

Melody List

1. Goodnight Ladies
2. Blow the Man Down
3. Muffin Man
4. Incy Wincy Spider
5. Jack and Jill
6. Little Bo-Peep

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit will now be ready to play again.
5. If the unit still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.

**CLASS 1
LED PRODUCT**



PRODUCT REGISTRATION

Visit www.vtech.co.uk/clubvtech/login
to register your VTech product

By joining the VTech Club you can also enter competitions, find out about news and events, seek expert advice for parents and let your kids play fun learning games and activities.



PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor). Please include details of the fault together with your name and address.
9. To keep an online record of your warranty, please register your product online at www.vtech.co.uk/warranty

Vtech Electronics EU PLC, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, West Hallam, DE7 6HE

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk

