

vtech[®]

Instruction Manual

Animal Rhymes Storytime



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech **Baby**

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school


4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

This cute animal friend's book is great fun for little ones to interact with and explore. The light up sun introduces some of the animals on the page and their sounds. The music button plays upbeat melodies so little ones can groove and move as they play.

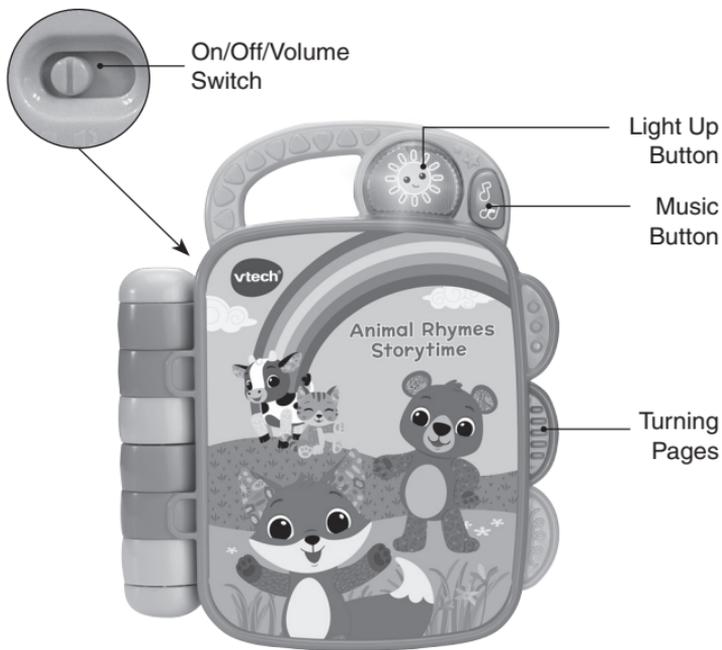

INCLUDED IN THE PACKAGE

- Animal Rhymes Storytime
- Quick Start Guide


WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

Unlock the Packaging Locks:

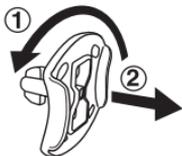


- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks and discard.

INSTRUCTIONS

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **Off**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

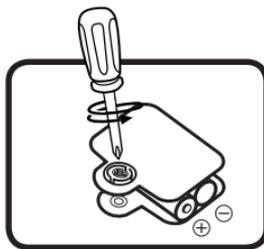

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheelee bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle


www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES

1. On/Off/Volume Switch

To turn the unit **On**, slide the **On/Off/Volume Switch** to the Low volume **◀** or High volume **▶** position. You will hear a sound, a phrase and a song. To turn the unit **Off**, slide the **On/Off/Volume Switch** to the **Off** **●** position.

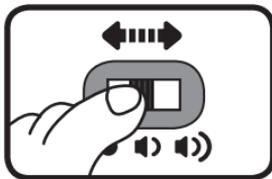

2. Automatic Shut-Off

To preserve battery life, the **Animal Rhymes Storytime** will automatically power down after approximately 35 seconds without input. The unit can be turned on again by pressing any button or turning the book pages.


NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

ACTIVITIES


1. Light Up Button

When the book is closed, press the **Light Up Button** to hear a phrase, a short tune and a sound. When the book is open, press the **Light Up Button** to learn about animals and hear their sounds. The light will flash with the sound.

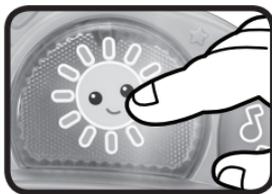

2. Music Button

Press the **Music Button** to hear music, fun sounds and short tunes. The light will flash with the sound.

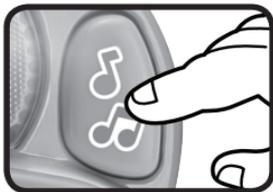

3. Turning Book Pages

Turn the **Pages** to hear animal songs related to the graphics on the pages as well as open-ended questions, short tunes and animal sounds. Close the book to hear a rainbow song or a short tune. The light will flash with the sound.



MELODIES

1. Did You Ever See a Lassie?
2. A-Tisket, A-Tasket
3. Twinkle, Twinkle Little Star
4. Ride a Cockhorse to Banbury Cross
5. Yankee Doodle
6. Sailing, Sailing
7. Teddy Bears' Picnic
8. Boys and Girls Go Out to Play
9. Listen To the Mockingbird
10. Bicycle Built for Two
11. Happy Farmer
12. Old MacDonald Had a Farm
13. Hey, Diddle, Diddle
14. Pussy Cat, Pussy Cat
15. Little Bo Peep



SONG LYRICS

Song 1

Let's sing the colours of the rainbow,
Red, orange, yellow, green, blue and purple.

Song 2

Row, row, row the boat,
Down the forest stream.
Look through the trees, what do you see?
It's a big brown bear.

Song 3

Row, row, row the boat,
Down the forest stream.
Look through the trees, what do you see?
It's a quick red fox.

Song 4



Row, row, row the boat,
Down the forest stream.
Look through the trees, what do you see?
It's a tall brown fawn.

Song 5

Row, row, row the boat,
Down the forest stream.
Look through the trees, what do you see?
It's a smart blue owl.

Song 6

There is a farmer who has a dog,
And Bingo is its name-o.
Woof-woof-woof-woof-woof,
Woof-woof-woof-woof-woof,
Woof-woof-woof-woof-woof,
And Bingo is its name-o.



Song 7

There is a farmer who has a cow,
And Bingo is its name-o.
Moo-moo-moo-moo-moo,
Moo-moo-moo-moo-moo,
Moo-moo-moo-moo-moo,
And Bingo is its name-o.

Song 8

There is a farmer who has a cat,
And Bingo is its name-o.
Meow-meow-meow-meow-meow,
Meow-meow-meow-meow-meow,
Meow-meow-meow-meow-meow,
And Bingo is its name-o.



Song 9

There is a farmer who has a sheep,
And Bingo is its name-o.
Baa-baa-baa-baa-baa,
Baa-baa-baa-baa-baa,
Baa-baa-baa-baa-baa,
And Bingo is its name-o.





CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play with again.
5. If the unit is not working properly, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department, and a service representative will be happy to help you.



CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.



**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au



TM & © 2023 VTech Holdings Limited.
All rights reserved.
IM-567800-001
Version:0