

vtech[®]
Baby

User's Manual

Feed Me Dino



© 2014 VTech
Printed In China
91-002947-001 (UK)

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



To learn more about this and other VTech® products, visit www.vtechuk.com

INTRODUCTION

Thank you for purchasing the **VTech® Feed Me Dino** learning toy!

Learn about colours, shapes, numbers and food with the **Feed Me Dino** by **VTech®**. Put the colourful play pieces in the dino's mouth, and watch as he eats and recognises each piece! This dino is hungry, so feed him a healthy treat!



INCLUDED IN THIS PACKAGE

 
- One VTech® Feed Me Dino
- 8 colourful food pieces
- One user's manual

WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this instruction manual as it contains important information.

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw.
3. Install 2 new 'AA' (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

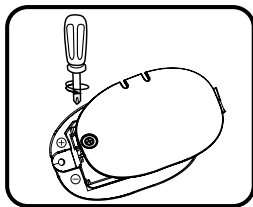

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.

- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

 
 

For more information, please visit:


www.recycle-more.co.uk

www.recyclenow.com

PRODUCT FEATURES

1. ON/OFF/VOLUME CONTROL SWITCH

 
To turn the unit **ON**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **LOW VOLUME** () or **HIGH VOLUME** () position. To turn the unit **OFF**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **OFF** () position.

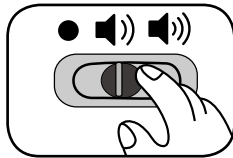





 2. PULL CORD

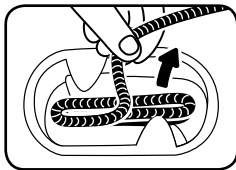To convert the unit from a push toy to a pull toy, remove the pull cord from the storage compartment on the bottom of the **Feed Me Dino**. For your child's safety we suggest you store the pull cord in the compartment until your child is walking.



3. MODE SELECTOR SWITCH

Slide the **MODE SELECTOR SWITCH** to the **COUNTING MODE** () or the **MEAL MODE** () position to choose a mode of play.

4. MOTION SENSOR

 
 
The **MOTION SENSOR** is located inside the dino. Push or pull the **Feed Me Dino** to hear fun melodies. Continue to push the dino to hear fun sounds as the melody plays.

5. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Feed Me Dino** will automatically power-down after approximately 45 seconds without input. The unit can be turned on again by pressing any button. Pushing or pulling the **Feed Me Dino** will not turn the unit back on.


ACTIVITIES

1. Slide the **ON/OFF/VOLUME CONTROL SWITCH** to LOW VOLUME (🔊) or HIGH VOLUME (🔊) to turn the unit on. You will hear a playful sing-along song with fun sounds and talking phrases. The **LIGHT-UP QUESTION BUTTON** will flash with the sounds.
2. Press one of the **5 SHAPE BUTTONS** to learn numbers and counting in COUNTING MODE or colours and shapes in MEAL MODE. The **LIGHT-UP QUESTION BUTTON** will flash with the sounds.
3. Insert one of the 8 **FOOD PIECES** into the **FOOD PIECE SLOT** to learn numbers and counting in COUNTING MODE and food and their colours in MEAL MODE. The **LIGHT-UP QUESTION BUTTON** will flash with the sounds.
4. Turn the **SPINNING DISC** to hear a variety of fun sing-along songs. The **LIGHT-UP QUESTION BUTTON** will flash with the sounds.

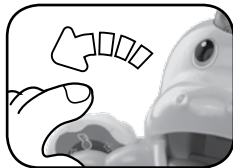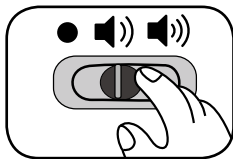



 5. Press the **LIGHT-UP QUESTION BUTTON** to start a counting game in **COUNTING MODE** and feeding game in **MEAL MODE**.

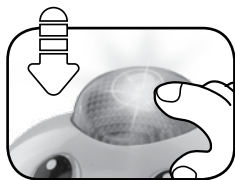

- a) In **COUNTING MODE**, the **Feed Me Dino** will ask to be fed a certain number of **FOOD PIECES**. Insert the number requested in the **FOOD PIECE SLOT** to answer the question. You will hear encouraging phrases and short tunes by inserting the correct number of **FOOD PIECES**. The **LIGHT-UP QUESTION BUTTON** will flash with the sounds.
- b) In **MEAL MODE**, the **Feed Me Dino** will ask to be fed a specific **FOOD PIECE**. Insert the **FOOD PIECE** requested in the **FOOD PIECE SLOT** to answer the question. You will hear encouraging phrases and short tunes by inserting the correct **FOOD PIECE**. The **LIGHT-UP QUESTION BUTTON** will flash with the sounds.
6. Pull or push the **Feed Me Dino** to activate the motion sensor and to hear fun melodies. Continue pushing or pulling the **Feed Me Dino** or turning the **SPINNING DISC** while a melody is playing to hear fun sounds play along with the melody. The **LIGHT-UP QUESTION BUTTON** will flash with the sounds.



MELODY LIST:

1. The Alphabet Song
2. Mulberry Bush
3. Pease Porridge Hot
4. Three Blind Mice
5. Three Little Kittens
6. Hey, Diddle Diddle
7. Turkey in the Straw
8. London Bridge
9. Mary had a Little Lamb
10. Humpty Dumpty
11. Old MacDonald had a Farm
12. Row, Row, Row Your Boat
13. Skip to My Lou
14. Hickory Dickory Dock
15. This Old Man
16. Daring Young Man on the Flying Trapeze
17. Sugarplum Fairy
18. Bingo
19. Teddy Bear's Picnic
20. Little Bo Beep



SING-ALONG SONG LYRICS

SING-ALONG SONG 1

I'm a hungry dinosaur,
Time to eat.
Please feed me a healthy treat.

SING-ALONG SONG 2

I'm so hungry.
Come feed me.
1-2-3-4,
Fruits and veggies are so great,
5-6-7 and 8.

SING-ALONG SONG 3

1-2-3-4,
Fruits and veggies are so great,
5-6-7 and 8.

SING-ALONG SONG 4

Apples make me feel good!
Like I knew they would.

SING-ALONG SONG 5

Bananas help make me strong,
to sing this song!

SING-ALONG SONG 6

Blueberries are sweet.
I love to eat.

SING-ALONG SONG 7

Peas helped to build this healthy strong Dino.

SING-ALONG SONG 8

Carrots make me feel good!
Like I knew they would.



SING-ALONG SONG 9

Mushrooms help make me strong,
to sing this song!



SING-ALONG SONG 10

Grapes are sweet.
I love to eat.

SING-ALONG SONG 11

Potatoes helped to build this healthy strong Dino.

CARE & MAINTENANCE

- 
1. Keep the unit clean by wiping it with a slightly damp cloth.
 2. Keep the unit out of direct sunlight and away from any direct heat source.
 3. Remove the batteries when the unit will not be in use for an extended period of time.
 4. Do not drop the unit on hard surfaces.
- 

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.



IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.





PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

Join the VTech club online at www.vtechuk.com