


vtech®

User's Manual

SWITCH&GO®
DINOS 
Bronco the Triceratops

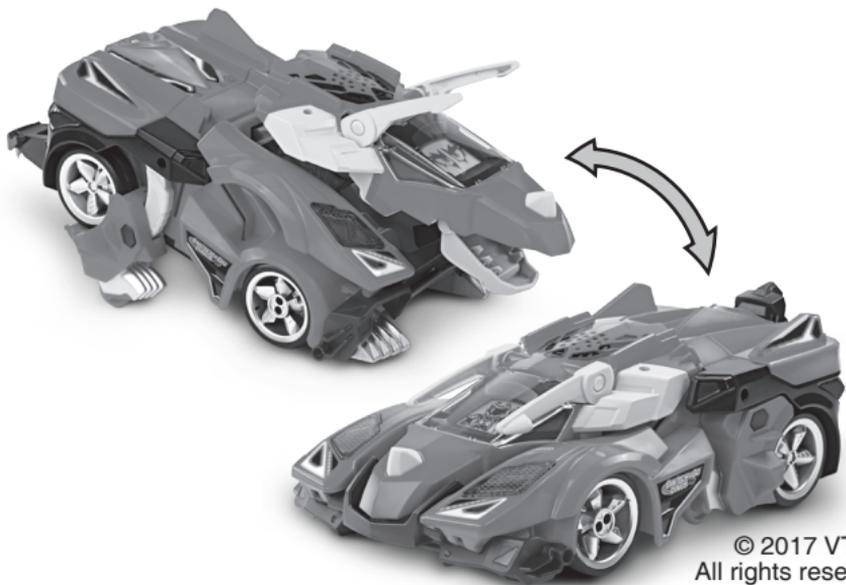

© 2017 VTech
All rights reserved
Printed in China
91-002928-007 

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school


4-10 years




To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Hi! I'm **Bronco the Triceratops**. Use my remote control to switch me and make me race. Hit the turbo boost, and I'll take off! Let's go!

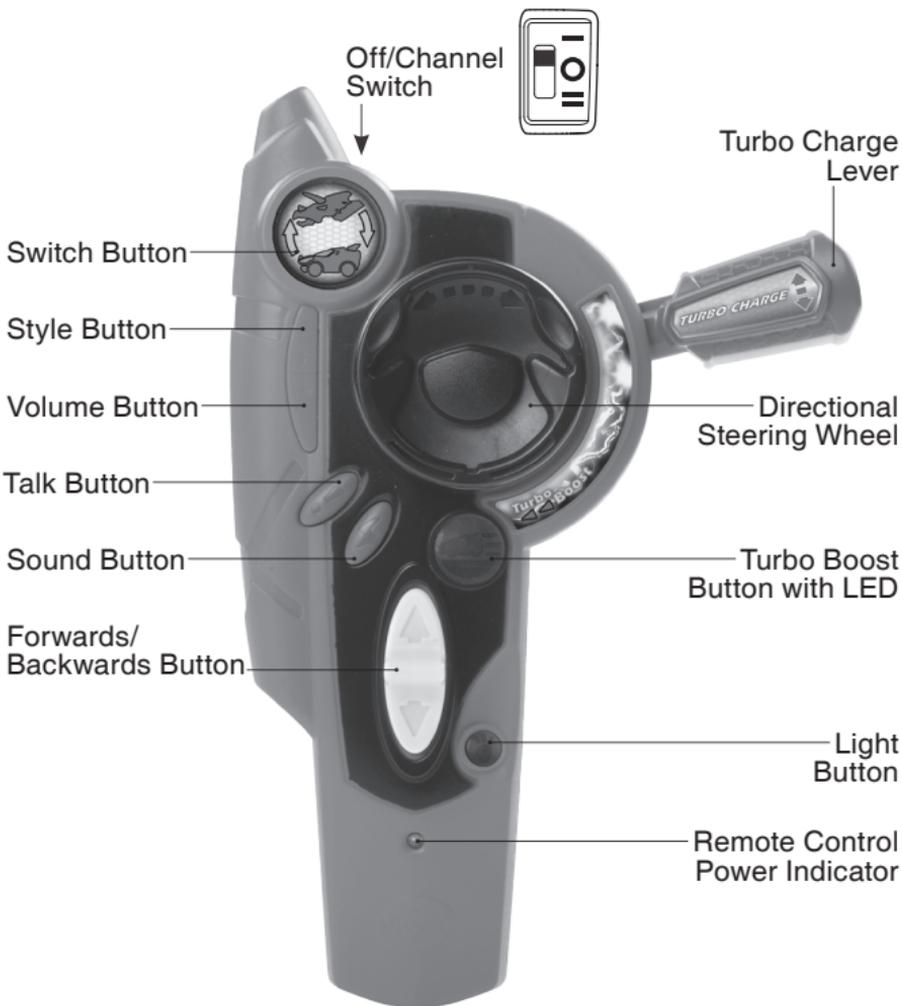

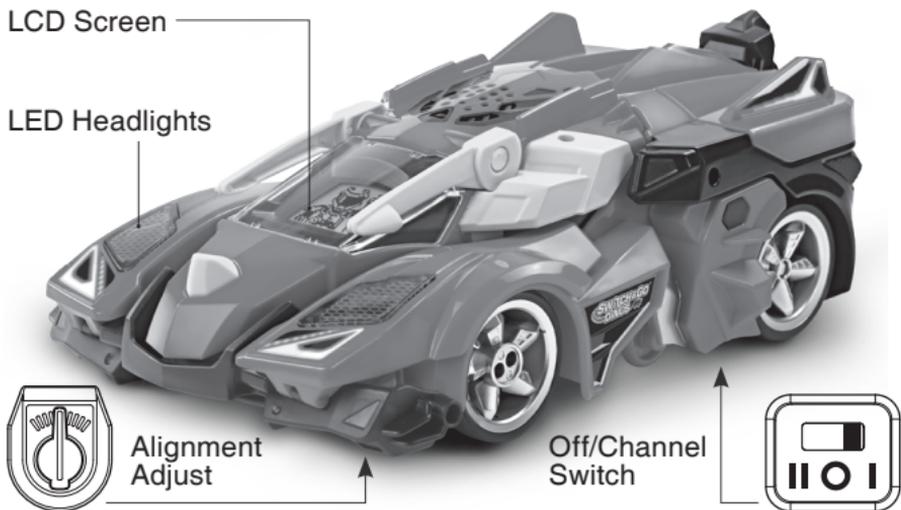

INCLUDED IN THIS PACKAGE

- One VTech® SWITCH & GO DINOS®: Bronco the Triceratops
- One Remote Controller
- One user's manual
- One label sheet

WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.


NOTE:

1. Please keep the user's manual as it contains important information.
2. For optimal performance, please use the remote controlled device on a flat smooth surface.
3. Under the environment with electrostatic discharge and radio interference field, the sample may malfunction and need user reset to recover sometimes.


GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit and remote control are turned **OFF**.
2. Locate the battery cover on the bottom of the unit and remote control. Use a screwdriver to loosen the screw.
3. First, install 6 new AA size (LR6/AM-3) batteries following the diagram inside the battery box in the main unit. Then, install 2 new AA size (LR6/AM-3) batteries following the diagram inside the battery box in the remote controller. (The use of new alkaline batteries is recommended for maximum performance).
4. Replace the battery cover and tighten the screw in both to secure it.

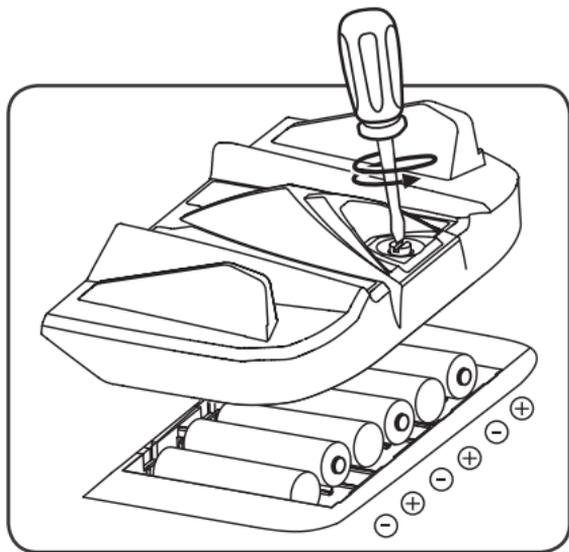

Bronco the Triceratops

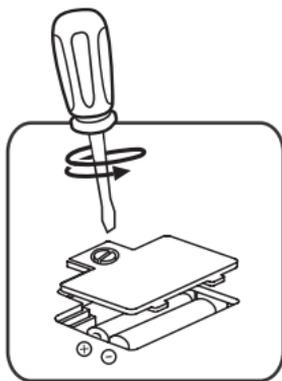

Remote Control

NOTE: When the batteries run low, the toy will no longer respond. If this happens, please replace the batteries.

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

LABEL INSTRUCTIONS


Style 1




Style 2





Style 3

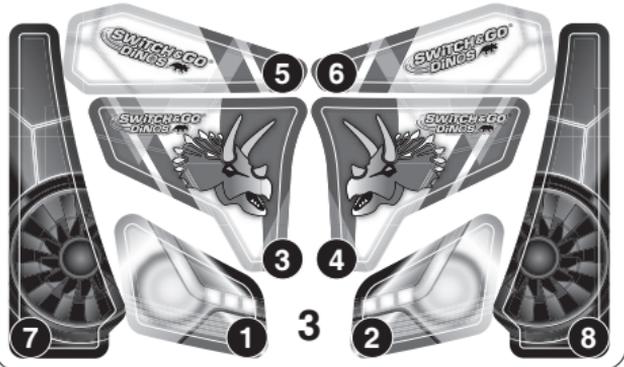

Please choose from one of the three label designs to decorate **Bronco the Triceratops**. Attach the chosen group of labels to the location on the product that matches the number next to the label.

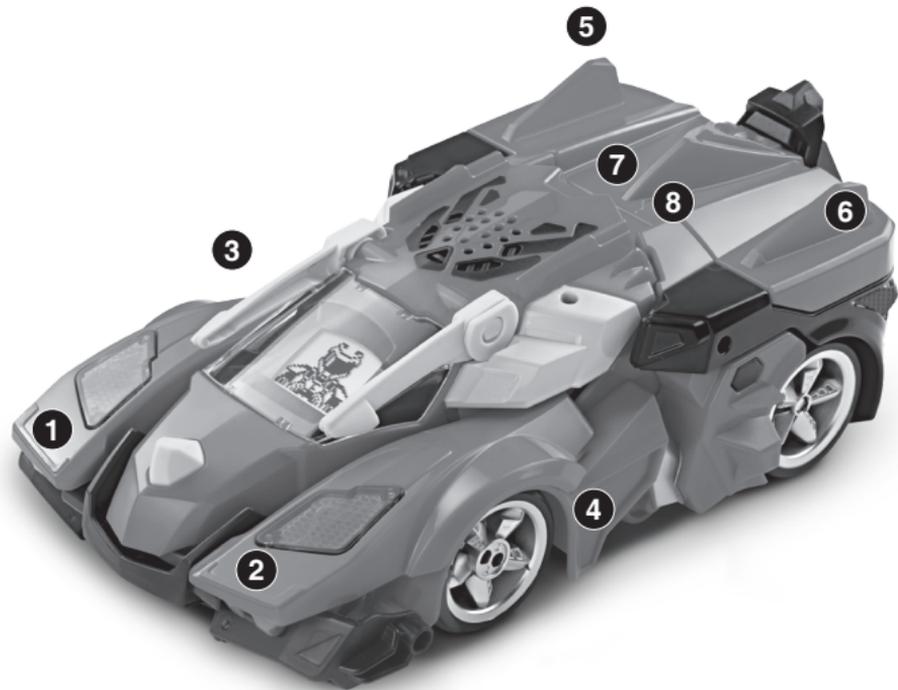

Note: It is possible for the front bumper and side panel to get separated if the unit runs into something with enough force. If this happens, please reconnect the front bumper and side panel as shown below.

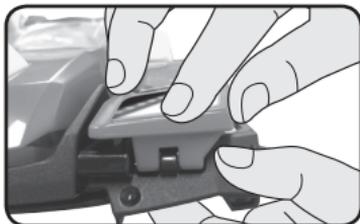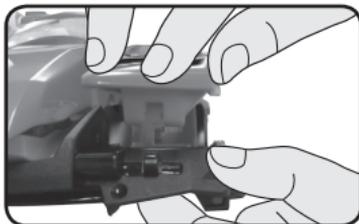

PRODUCT FEATURES

1. TURN THE UNIT ON

Slide the **Remote Control Off/Channel Switch** to the **I** or **II** position to turn the **Remote Control ON**.



Slide the **Off/Channel Switch** on **Bronco the Triceratops** to the same **I** or **II** position as the **Remote Control**. The **Remote Control** and **Bronco the Triceratops** must be on the same **I** or **II** channel to send and receive signals.



Note: **I** and **II** settings are two different channels the **Remote Control** and **Bronco the Triceratops** can operate on. If two units are operating in the same vicinity, put one unit on channel **I** and the other on channel **II**.

2. REMOTE CONTROL POWER INDICATOR

After the **Remote Control** is turned **ON**, the **Remote Control Power Indicator** will flash to show the remote is **ON**. The indicator light will illuminate anytime a button is pressed, lever is pulled or the **Steering Wheel** is turned. The light indicates a signal is being sent to **Bronco the Triceratops**.




3. SWITCH BUTTON

Press the **Switch Button** to remotely switch **Bronco the Triceratops** from dino to vehicle or from vehicle to dino.



4. TURBO CHARGE LEVER

Move the **Turbo Charge Lever** up and down to charge **Bronco the Triceratops**' turbo boosters. When Bronco is fully charged, he says, "charge complete."

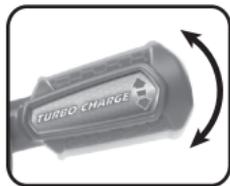

5. TURBO BOOST BUTTON with LED



If **Bronco the Triceratops** has been charged to a level in which he has turbo boost power, the **Turbo Boost Button with LED** will blink. The faster the **Turbo Boost Button with LED** is blinking, the more time that will be allotted for the turbo boost. Once the **Turbo Boost Button with LED** is pressed, **Bronco the Triceratops** will move at an increased speed.



Note: A turbo boost will last for the duration of the charge level. If the full turbo boost hasn't been used while travelling in a certain direction, you can change direction or switch Bronco and retain the remaining turbo boost available.

6. FORWARDS/BACKWARDS

By pressing the **Forwards/Backwards Button** up/down, **Bronco the Triceratops** will move forwards/backwards.



Note: If you find **Bronco the Triceratops** is not moving in a straight line, you can use the **Alignment Adjust** to improve.



7. DIRECTIONAL STEERING WHEEL


When **Bronco the Triceratops** is moving forwards/backwards, turn the **Directional Steering Wheel** to make him turn left/right.



8. LIGHT BUTTON



Press the **Light Button** to see the two headlights illuminate and hear fun sounds and phrases.

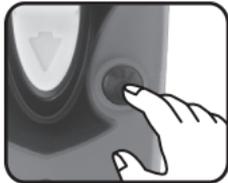

9. TALK BUTTON



Press the **Talk Button** to hear the dino or driver talk.



10. SOUND BUTTON



Press the **Sound Button** to hear cool sound effects.



11. STYLE BUTTON



Press the **Style Button** to change the dino eyes or choose a driver.



12. VOLUME BUTTON



Press the **Volume Button** to adjust the volume.



13. TURN THE UNIT OFF / AUTOMATIC SHUT OFF

Slide the **Off/Channel** Switch on the **Remote Controller** to **OFF** to turn it **OFF**.



Slide the **Off/Channel** Switch on the **Bronco the Triceratops** to **OFF** to turn it **OFF**.



To preserve battery life, the **Bronco the Triceratops** and the **Remote Control** will automatically power-off after several minutes without input.

Note: If **Bronco the Triceratops** automatically turns off, turn the unit off and slide the **Off/Channel Switch** back to the **I** or **II** position used prior to turn it back on.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Company: **VTech®** Electronics Europe PLC

Address: Napier Court, Abingdon Science Park, Abingdon, Oxon, OX14 3YT.

Phone : 01235 546810 (from UK), or +44 1235 546810 (outside UK)

Hereby, **VTech®**, declares that this **SWITCH & GO DINOS®: Bronco the Triceratops** is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

A copy of the declaration of conformity can be obtained from the website: www.vtech.com/rtte-directive



CLASS 1
LED PRODUCT



PRODUCT REGISTRATION

Visit www.vtech.co.uk/clubvtech/login
to register your VTech product

By joining the VTech Club you can also enter competitions, find out about news and events, seek expert advice for parents and let your kids play fun learning games and activities.



PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor). Please include details of the fault together with your name and address.
9. To keep an online record of your warranty, please register your product online at www.vtech.co.uk/warranty

Vtech Electronics EU PLC, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, West Hallam, DE7 6HE

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

