

vtech[®]
Baby

User's Manual

Sit to Stand Music Centre



© 2014 VTech
Printed In China
91-002934-010 (UK)

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years

 


To learn more about this and other VTech® products, visit www.vtechuk.com

INTRODUCTION


Thank you for purchasing the **VTech® Sit to Stand Music Centre** learning toy.

Show off your singing skills with the **Sit to Stand Music Centre** by **VTech®**. Your child can sing along to the music and change the sound of their voice with the fun voice effect selector. They can also play the piano keys and learn about instruments, colours and animals.

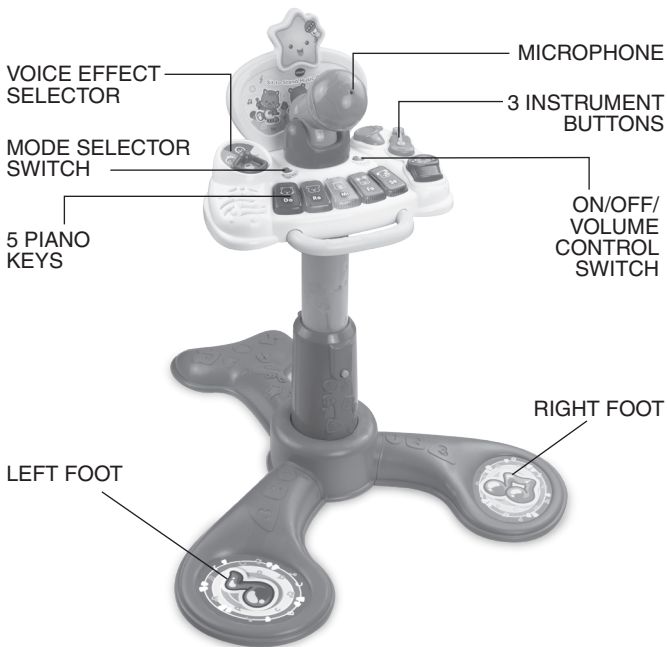


INCLUDED IN THIS PACKAGE

 - User's manual
- 3 screws

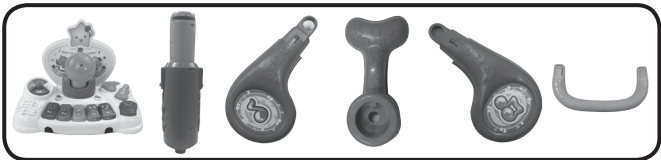

- 1 VTech® Sit to Stand Music Centre
- 1 height adjustable support post
- 1 left foot
- 1 support base
- 1 right foot
- 1 handle

 WARNING: All packing materials, such as tape, plastic sheets, packing locks and tags are not part of this toy, and should be discarded for your child's safety.

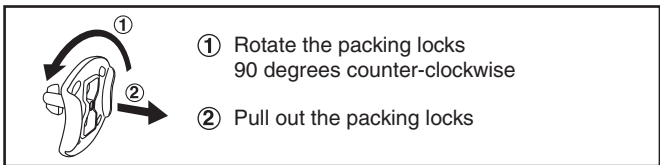


NOTE: Please keep this instruction manual as it contains important information.

GETTING STARTED

BATTERY INSTALLATION

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the Activity Panel. Use a coin or a screwdriver to loosen the screw.
3. Install 3 new 'AA' (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

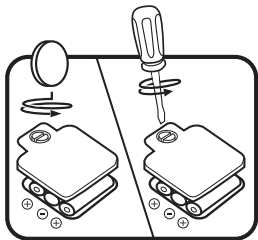

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

 
www.recycle-more.co.uk

www.recyclenow.com


ASSEMBLY INSTRUCTIONS

With the **VTech® Sit to Stand Music Centre**, safety comes first. To ensure your child's safety, adult assembly is required.


1. Insert the left foot and the right foot into the slots on the bottom of the support base. You will hear the feet click into place when inserted correctly.

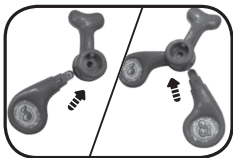

 2. Insert the height adjustable support post into the recessed slot on the top of the support base.

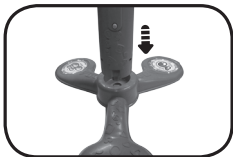

 
3. Turn the support base over and insert the three screws into the underside of the base. Use a screwdriver to secure the screws.

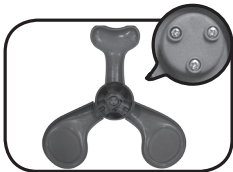

4. Insert the arc handle into the hole on the main panel, you will hear click sound when it clicks into place.





 
5. Insert the electronic panel into the top of the height adjustable support post. The electronic panel will lock into position when inserted correctly.
6. Press the buttons on both side of the height adjustable support post to adjust the height.

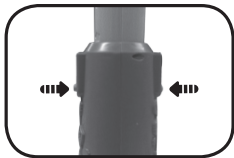

PRODUCT FEATURES

  1. ON/OFF/VOLUME CONTROL SWITCH

To turn the unit **ON**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **LOW VOLUME** () or **HIGH VOLUME** () position. To turn the unit **OFF**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **OFF** () position.



2. MODE SELECTOR SWITCH

Slide the **MODE SELECTOR SWITCH** to the **LEARNING MODE** (), or **MUSIC MODE** () position.



3. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Sit to Stand Music Centre** will automatically power-down after approximately 60 seconds without input. The unit can be turned on again by pressing any button.

ACTIVITIES

1. Slide the **on/off/volume control switch** to turn the unit on. You will hear a welcoming phrase, playful sounds, short tunes and a sing-along song, depending on the selected mode. The lights will flash with the sound.



2. Press the **5 light-up piano keys** to learn about colours and animals and hear fun sing-along songs in the Learning Mode. In the Music Mode, you will hear individual piano notes and short tunes. The lights will flash with the sounds.



3. Press the **3 instrument buttons** to learn about instruments and instrument sounds in the Learning Mode and hear a variety of short tunes and melodies in the Music Mode. The lights will flash with the sounds.



4. Turn the **voice effect selector** to change the style of your voice when singing into the microphone. Choose from regular voice, robot voice, high pitched voice and low pitched voice. The lights will flash with the sounds.



5. Sing into the **microphone** to hear your voice amplified. When you are using the microphone you will hear fun sounds to encourage you to keep using the microphone. The lights will flash with the sounds.



MELODY LIST:

1. The Entertainer
2. Daisy Bell
3. Clementine
4. Chicken Reel
5. Animal Fair
6. Toyland
7. Yellow Rose of Texas
8. Farmer in the Dell
9. Diddle Diddle Dumpling
10. Jack and Jill
11. Little Bo Peep
12. Pat-a-Cake
13. Sailing, Sailing
14. Skip to My Lou
15. Three Blind Mice

SING-ALONG SONGS

SING-ALONG SONG 1

Sing and play,
Dance and sway!
You can sing and you can play,
With your microphone every day!

SING-ALONG SONG 2

Let's sing a scale,
Do, Re, Mi, Fa, So.

SING-ALONG SONG 3

There was a farmer had a dog,
And Bingo was his name-o.
B-I-N-G-O
B-I-N-G-O
B-I-N-G-O
And Bingo was his name-o.

SING-ALONG SONG 4

Three little kittens,
They lost their mittens,
And they began to cry.
Three little kittens,
They found their mittens,
And they began to cry.

SING-ALONG SONG 5

Old MacDonald had a farm, E-I-E-I-O.
On his farm he had a pig, E-I-E-I-O.
With an oink-oink here and an oink-oink there,
Old MacDonald had a farm E-I-E-I-O.

SING-ALONG SONG 6

Hickory, dickory, dock!
The mouse ran up the clock;
The clock struck one,
The mouse ran down,
Hickory, dickory, dock!
The clock struck one,
The mouse ran down,
Hickory, dickory, dock!

SING-ALONG SONG 7

The bear went over the mountain,
The bear went over the mountain,
The bear went over the mountain,
To see what he could see.
To see what he could see,
To see what he could see.
The bear went over the mountain,
The bear went over the mountain,
The bear went over the mountain,
To see what he could see.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing VTech® products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.





vtech[®]

PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

