

vtech®

Parent's Guide

PetSqueaks



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school


4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **PetSqueaks** by **VTech**®! When you trigger 1 of the 3 sensors on your **PetSqueaks** pet, they will respond with sounds, phrases, songs and motion! Feed your **PetSqueaks** their food item to see their cheeks light up in delight! Enjoy your new cheeky companion!

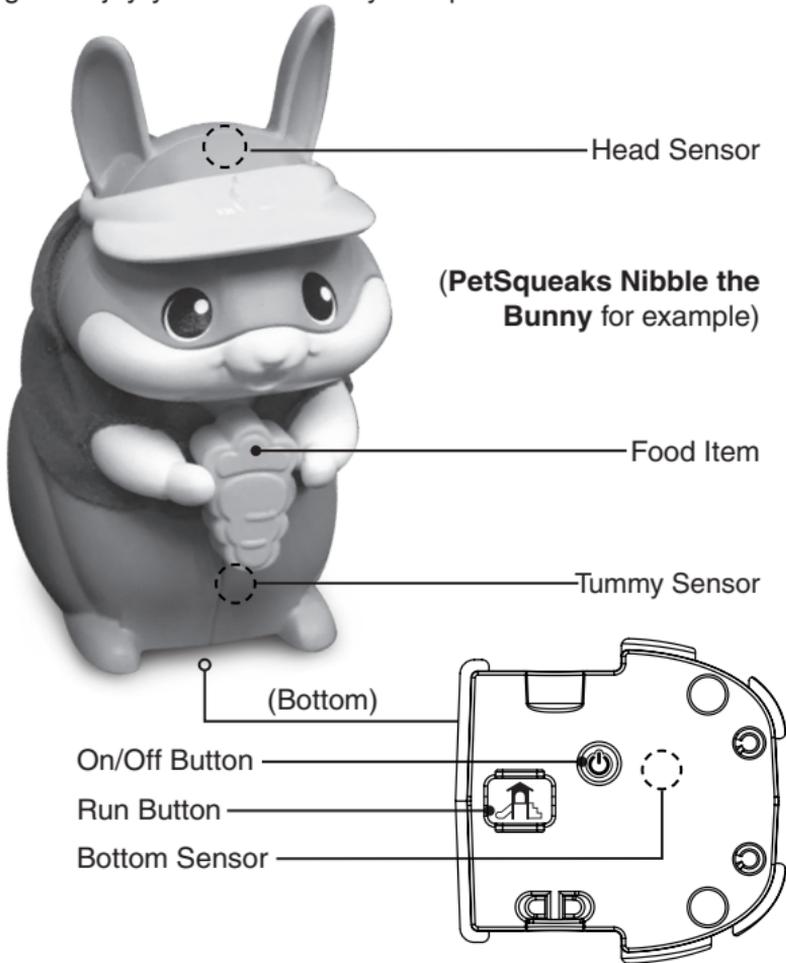

INCLUDED IN THIS PACKAGE


- One **PetSqueaks** Pet
- One parent's guide
- Three accessories (Jacket, Headwear and Food item)

WARNING: All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this parent's guide as it contains important information.

Unlock the packaging locks:

- ① Turn the packaging lock anticlockwise several times.
- ② Pull out and discard the packaging lock.

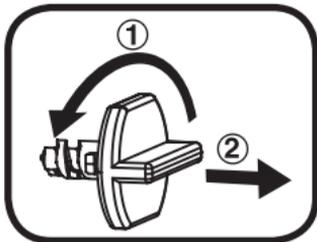


GETTING STARTED

The unit is in try-me mode in the packaging. Touch the **Head Sensor** to wake the unit. Then, Press the **On/Off Button** or reinsert the food item to exit try-me mode.

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover and open it with a screwdriver.
3. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new, alkaline batteries is recommended for maximum performance).
4. Replace the battery cover and tighten the screw to secure.

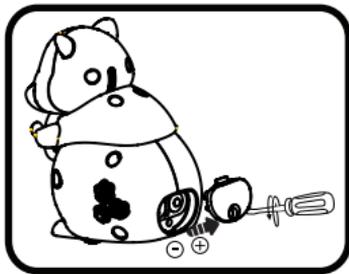

Note: If there is no response when the unit is switched on, please install new batteries and try switching it on again.

BATTERY NOTICE

- Use new alkaline batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC). The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk


www.recyclenow.com

HOW TO PLAY

1. On/Off Button

Press the **On/Off Button** located on the bottom of the **PetSqueaks** to turn the unit **On**. To turn the unit **Off**, press the button again.

Note: If the unit repeatedly powers down, please install new batteries and try switching it on again.

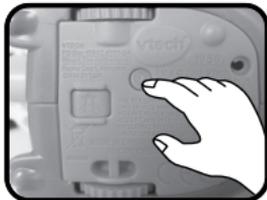

2. Head Sensor

Trigger the **Head Sensor** by petting your **PetSqueaks** for fun phrases, songs, sounds and motion.



3. Tummy Sensor

Tickle the **Tummy Sensor** to make your **PetSqueaks** giggle and respond with sounds, phrases and motion.




4. Bottom Sensor

Hold your **PetSqueaks** in the palm of your hand to see it stand up and respond with sounds, phrases and motion.



5. Run Button

Press the **Run Button** to see your **PetSqueaks** giggle, run and scurry away!

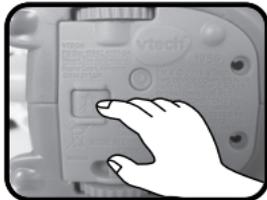

6. Feed Your PetSqueaks

When your **PetSqueaks** is stood up, feed it its food item by placing it between its hands. Its cheeks will light up and it will respond happily!



7. Energy Saving

To preserve energy, your **PetSqueaks** pet will automatically go to sleep after several minutes of inactivity. Your **PetSqueaks** pet can be woken up by petting its head, by pressing the **On/Off Button**, or by replacing the batteries if the existing batteries have run out of power.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture.

TROUBLESHOOTING


If for some reason the program/activity stops working, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **ON**. The unit will now be ready to play with again.
5. If the unit still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

IMPORTANT NOTE:

1. For optimal performance, please use **PetSqueaks** on a flat, smooth surface.
2. For your child's safety, do not put **PetSqueaks** in either configuration on your clothing, body or hair.

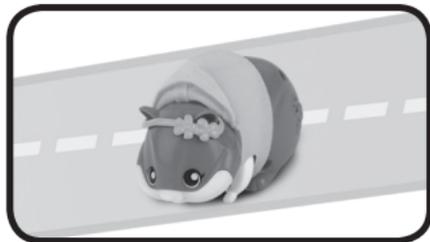

WARNING :

CHOKING HAZARD - small parts.
Not for children under 3 years.

**CLASS 1
LED PRODUCT**

CONSUMER SERVICES

Creating and developing VTech products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/customersupport

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

Consumer Guarantees

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

