

vtech[®]
baby

Instruction Manual

Little Friendlies Glow & Giggle Playmat



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months

Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years

 


To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION


Thank you for purchasing the **VTech® Little Friendlies Glow & Giggle Playmat** learning toy!

The **VTech® Little Friendlies Glow & Giggle Playmat** is the perfect grow-with-me toy that transitions from a play gym to a tummy time playmat to an activity centre. The modes of play also grow and develop along with baby, starting out with basic music and progressing to teaching about colours, shapes and animals to asking simple questions that toddlers can answer with the chunky piano keys. With so much to do your child will surely get a workout in this learning gym!

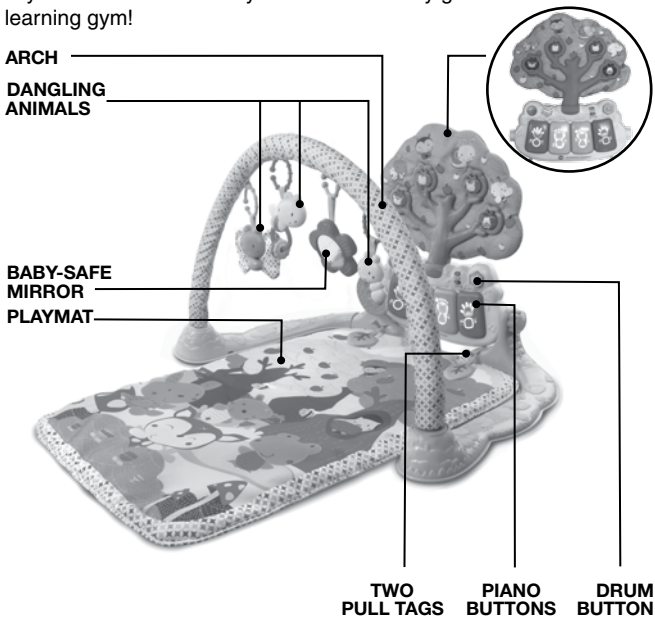

INCLUDED IN THIS PACKAGE

 - One Instruction Manual
- One Playmat

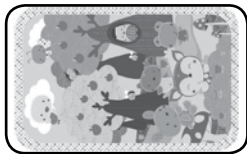

One Arch



 
 
Two Activity Panel Supports &
Two Activity Panel Support Bases




One **Little Friendlies** Glow &
Giggle Playmat Activity Panel



Two Gym Support Legs One Dangling Bee Rattle One Dangling Butterfly

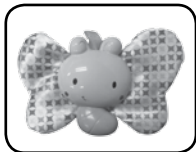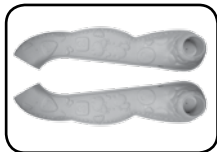


One Dangling
Baby-safe Flower Mirror

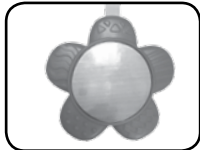 

One Dangling
Caterpillar Teether



 Four
C-Rings

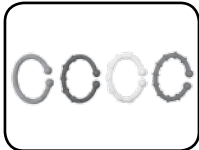

- 18 Screws

INCLUDED IN THIS PACKAGE

 
WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this Instruction Manual as it contains important information.

WARNING: Keep the soft toy out of the sleeping environment for babies under twelve months to avoid suffocation risk.

WARNING: Remove product from the Infant Carrier when the vehicle is moving.

Unlock the packaging locks:

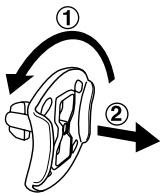


- ① Rotate the packaging locks 90 degrees anti-clockwise.
- ② Pull out the packaging locks.

GETTING STARTED

BATTERY INSTALLATION

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the activity panel. Use a screwdriver to loosen the screw.
3. Install 2 new AA (AM-3 / LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
4. Replace the battery cover and tighten the screw to secure.

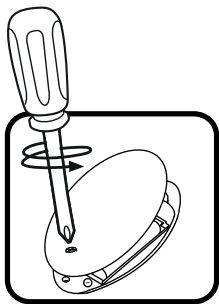

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability



* Visit www.recyclenow.com to see a list of collection points near you.

ASSEMBLY INSTRUCTIONS


With the **VTech® Little Friendlies Glow & Giggle Playmat**, safety comes first. To ensure your child's safety, adult assembly is required.

WARNING! This unit contains 18 screws (small part). For your child's safety, do not let your child play with the toy until it is fully assembled.

  
1. Attach the two activity panel support posts to the top of the two activity panel support bases. Use five screws to attach each post to the base and tighten them until secure.
2. Insert the two gym support legs to the two activity panel support bases. Use four screws to attach each of the legs to the activity panel support bases, tightening them until secure.
3. Insert the activity panel between the two activity panel support posts. Use the two plastic screws to attach the activity panel to the activity panel support posts. Adjust the position of the activity panel as you see fit. The activity panel can be attached in three different positions to suit baby's needs.

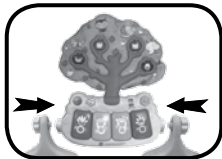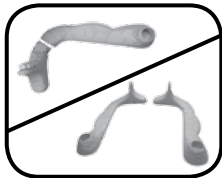

 
4. Insert the gym arch to the two support legs until you hear them click into place. Make sure the arch is securely attached to the base. Once the arch is assembled, it cannot be disassembled.

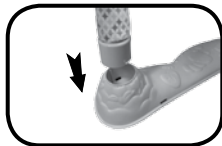

 
5. To adjust the angle of the tree slide the two purple tabs on the back of the activity panel and adjust the tree to suit baby's needs.

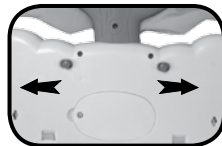

6. Attach the dangling animal characters and the mirror to the arch, threading the activity links through the loops on the arch.

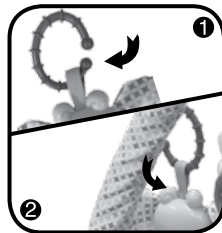 

 
7. To secure the playmat to the gym support legs, thread the 6 fabric tags on the playmat through the slots on the gym support legs and the activity panel. Make sure the playmat is securely attached to the support legs.

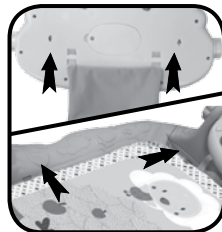

PRODUCT FEATURES


1. ON/OFF/MODE SWITCH

 To turn the unit **ON**, slide the **ON/OFF/MODE SWITCH** to the **MUSIC MODE** (🎵), **ANIMAL MODE** (🐾) or the **COLOURS & SHAPES MODE** (🎨). To turn the unit **OFF**, slide the **ON/OFF/MODE SWITCH** to the **OFF** (●) position.

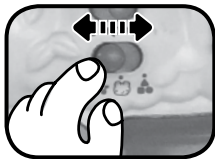

2. VOLUME CONTROL SWITCH

 To adjust the volume, slide the **VOLUME CONTROL SWITCH** to the **LOW VOLUME** (🔊) or **HIGH VOLUME** (🔊) position.

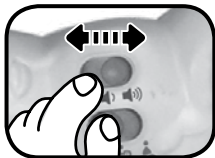


3. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Little Friendlies Glow & Giggle Playmat** will automatically power-down after approximately 30 seconds without input. The unit can be turned on again by pressing any button or pulling on the pull tags.

Note: If the unit repeatedly powers down or the unit will not turn on, we suggest changing the batteries.

ACTIVITIES

 - Slide the **ON/OFF/MODE SWITCH** to turn the unit on. You will hear a song and a welcoming phrase in the Music Mode and the Animal Mode. In the Colours & Shapes Mode you will hear a sound, a phrase and a short tune. The lights will flash with the sounds.

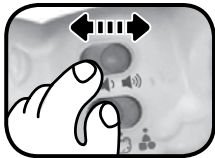


2. Press the **PIANO BUTTONS** to hear piano notes in the Music Mode, learn about animals, colours and shapes in the Animal Mode and hear fun sing-along songs, phrases and short tunes in the Colours & Shapes Mode. The lights will flash with the sounds.



3. Press the **DRUM BUTTON** to hear drum sounds in the Music Mode and the Animal Mode. In the Colours & Shapes Mode you will be asked to answer simple questions. The lights will flash with the sounds.



 4. Pull the **LEAF TAGS** to hear a variety of melodies in the Music Mode, short tunes and sounds in the Animal Mode and short tunes in the Colours & Shapes Mode. The lights will flash with the sounds.

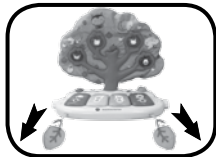

MELODY LIST

1. Clementine
2. Animal Fair
3. Alouette
4. Aiken Drum
5. Alphabet Song
6. Shoo Fly
7. Bicycle Built for Two
8. Bingo

9. Did You Ever See a Lassie?
10. Farmer in the Dell
11. Froggie Went a Courtin'
12. Hickory Dickory Dock
13. Humpty Dumpty
14. Little Miss Muffet
15. Pop! Goes the Weasel
16. Where Has My Little Dog Gone?
17. Old MacDonald
18. This Old Man
19. Three Blind Mice
20. Yankee Doodle

SING-ALONG SONG LYRICS

SONG 1

Crawl under your tree,
What do you see?
Some bugs and a bee,
And lights all twinkle-ee.

SONG 2

We went to the animal fair,
The owl and fox were there,
The frog sat in the clear blue pond.
And the bunny was bouncing around.

SONG 3

Splish, splash! Ribbit-ribbit!
The frog likes splashing in the pond.

SONG 4

The happy fox likes to play at night,
When there is little light.

SONG 5


Hip and hop, up and down,
The bunny likes to hop around.

SONG 6

The wise owl is perched up high,
Looking at the stars in the sky.

CARE & MAINTENANCE

 1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. The tree, arch and the butterfly are surface washable only.
The playmat is machine washable. Follow the care instructions below.



TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

WARNING:
Adult assembly required.

CONSUMER SERVICES

Creating and developing **VTech**[®] products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

