

User's Manual

Sort & Discover Activity Cube



© 2016 VTech Printed in China 91-003139-003 (R) VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

Pre-School

Interactive toys to develop their imagination and encourage language development

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

- ...challenging activities that can keep pace with my growing mind
- ...intelligent technology that adapts to my level of learning
- ...National Curriculum based content to support what I'm learning at school

I want...

- ...to get ready for school by starting to learn the alphabet and counting
- ...my learning to be as fun, easy and exciting as can be
- ...to show my creativity with drawing and music so my whole brain develops

lam...

vtech Bally

Tovs that will

...responding to colours, sounds and textures

stimulate their interest

in different textures, sounds and colours

- ...understanding cause and effect
- ...learning to touch, reach, grasp, sit-up, crawl and toddle






To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the VTech® Sort & Discover Activity Cube learning toy!

Play on five sides of the **Sort & Discover Activity Cube**. Slide, press, roll and flip the fun manipulative play features while learning colours, numbers, animals and more. 4 shape sorter blocks fit into the side of the cube to develop hand-eye coordination while the spinning blocks and beads develop motor skills.

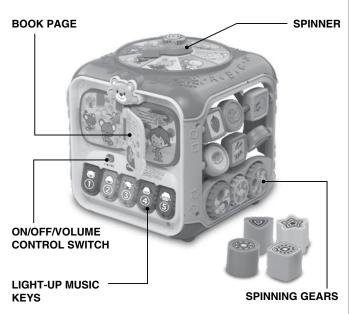

INCLUDED IN THIS PACKAGE

- One VTech® Sort & Discover Activity Cube learning toy
- Four shape sorter blocks
- One user's manual

WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please keep user's manual as it contains

important information

Unlock the packaging locks:

 


- 1 Rotate the packaging locks 90 degrees anti-clockwise.
- 2 Pull out the packaging locks.

GETTING STARTED

BATTERY INSTALLATION

- 1. Make sure the unit is turned OFF.
- Locate the battery cover below the piano buttons. Use a screwdriver to loosen the screw.
- Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
- Replace the battery cover and tighten the screw to secure.



BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbonzinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit: www.recycle-more.co.uk www.recyclenow.com

PRODUCT FEATURES

1. ON/OFF/VOLUME CONTROL SWITCH

To turn the unit ON, slide the ON/OFF/VOLUME CONTROL SWITCH to the LOW VOLUME (■())) or the HIGH VOLUME (■())) position. To turn the unit OFF, slide the ON/OFF/VOLUME CONTROL SWITCH to the OFF (●) position.

 


2. AUTOMATIC SHUT-OFF

To preserve battery life, the VTech® Sort & Discover Activity Cube will automatically power-down after approximately 35 seconds without input. The unit can be turned on again by pressing any button.

ACTIVITIES

 Slide the on/off/volume control switch to turn the unit on. You will hear a playful song and phrase with fun sounds. The lights will flash with the sounds.



Turn the **book page** to hear nursery rhymes. The lights will flash with the sounds.







 Press the **bear button** to hear playful songs. The lights will flash with the sounds.



Spin the spinner on the top of the cube, when the arrow points at an animal, you will learn about the animal. The lights will flash with the sounds.



6. If there is no input to the unit after approximately 10 seconds, you will hear a question about the animals on the piano keys. After another 10 seconds without input, you will hear a fun phrase. If there continues to be no input for another 10 seconds, the unit will play a short tune and power down. The unit can be turned on again by pressing any button or by spinning the spinner.

MELODY LIST

- 1. The Bear Went Over the Mountain
- 2. Camptown Races
- 3. She'll Be Comin' Round the Mountain
- 4. Farmer in the Dell
- 5. Old MacDonald Had a Farm
- 6. The Old Grey Mare
- 7. BINGO
- 8. Chicken Reel
- Baa Baa Black Sheep
- 10. Looby Loo

SING-ALONG SONG LYRICS

SONG 1

One, two, three, four, five, Five sides of learning fun!

SONG 2

I am a happy bear, I like to sing and play.

SONG 3

Hickory, dickory, dock!

The mouse ran up the clock,

The clock struck one, the mouse ran down,

Hickory, dickory, dock!

SONG 4

Mary had a little lamb, little lamb, little lamb,

Mary had a little lamb, its fleece was white as snow.

Everywhere that Mary went, Mary went, Mary went,

Everywhere that Mary went, the lamb was sure to go.

CARE & MAINTENANCE

- Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- 3. Remove the batteries when the unit will not be in use for an extended period of time.
- Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

- 1. Please turn the unit OFF.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit ON. The unit should now be ready to play again.
- If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.

CLASS 1 LED PRODUCT



PRODUCT REGISTRATION

Visit www.vtech.co.uk/clubvtech/login to register your VTech product

By joining the VTech Club you can also enter competitions, find out about news and events, seek expert advice for parents and let your kids play fun learning games and activities.



PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

- The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
- 2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
- 3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
- 4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
- 5. This warranty is personal to the original purchaser and is not transferable.
- 6. Breakages to the LCD screen are not covered by the warranty.
- 7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
- 8. Products returned to VTech Electronics Europe pic, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor). Please include details of the fault together with your name and address.
- To keep an online record of your warranty, please register your product online at www. vtech.co.uk/warranty

Vtech Electronics EU PLC, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, West Hallam. DE7 6HE

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

