

Disney

User's Manual



ENCHANTED SMARTPHONE



2-5
Years

vtech®

© Disney
Visit DisneyJunior.com

© 2014 VTech
Printed in China
91-002925-000 (UK)

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

 
4-10 years



To learn more about this and other VTech® products, visit www.vtechuk.com

INTRODUCTION

The **Enchanted Smartphone** is an educational role play toy that your child will love. With voice activated play, your little one can talk to animal friends and leave a message for Princess Sofia. Nine activities feature phonics, counting, music and more!

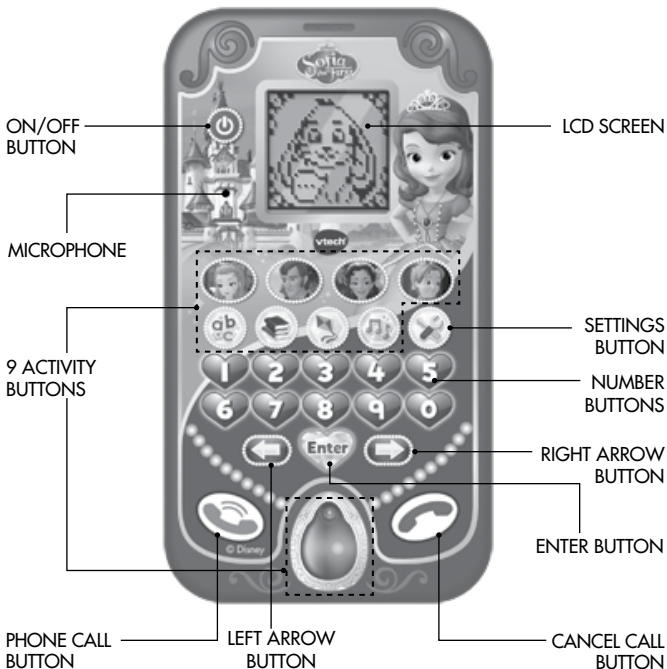


INCLUDED IN THIS PACKAGE

- One **VTech® Enchanted Smartphone**
- One User's Manual

WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep the user's manual as it contains important information.

 Unlock the packaging locks:

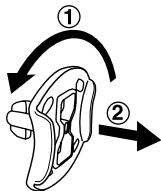


① Rotate the packaging locks 90 degrees anti-clockwise.

② Pull out the packaging locks.

GETTING STARTED

BATTERY INSTALLATION

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit.
3. Install 2 new "AA" (LR6/AM-3) batteries following the diagram inside the battery box. (The use of new, alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

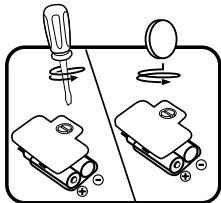

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

PRODUCT FEATURES

1. ON/OFF BUTTON

To turn the unit **ON**, press the **ON/OFF BUTTON**. Press the **ON/OFF BUTTON** again to turn the unit **OFF**.



2. ACTIVITY BUTTONS

Press one of the **ACTIVITY BUTTONS** to select an activity.



 
3. SETTINGS BUTTON

Press the **SETTINGS BUTTON** to adjust the LCD contrast or turn the background music on or off.



4. PHONE CALL BUTTON

Press the **PHONE CALL BUTTON** to leave Sofia a message.




5. CANCEL CALL BUTTON

Press the **CANCEL CALL BUTTON** when you have finished your message.



6. MICROPHONE

 The **MICROPHONE** is used for the voice activation feature. The suggested distance to keep between the microphone and your mouth is about 4-5 inches.



7. ENTER & ARROW BUTTONS

Press the **ARROW BUTTONS** to navigate on the screen or to select an option then press the **ENTER BUTTON** to confirm your choice.



8. NUMBER BUTTONS

Press the **NUMBER BUTTONS** to learn numbers or to answer number related questions.



9. AUTOMATIC SHUT-OFF

To preserve battery life, the unit will automatically turn off after several minutes of inactivity. The unit can be turned on again by pressing the **ON/OFF BUTTON**. The unit will also automatically turn off when the batteries are very low. A warning will be displayed on screen as a reminder to change the batteries.

ACTIVITIES



CHAT WITH FRIENDS

Sofia loves talking to her animal friends. Would you like to talk to them too? Use the arrows to choose one of Sofia's animal friends then press enter to confirm. Then speak into the microphone to have a chat.

COUNTING



Wow! Amber's going to show us how to decorate a parasol! Press a number button to see and count the decorations that Princess Amber is using.

HELP KING ROLAND



Kind Roland is arranging a royal ball and he is going to need some help. Press the number buttons in the correct sequence to help Kind Roland find the person.

LETTER BREAD



Queen Miranda is making bread for the villagers' ball. Blow the flour away to see which letter Queen Miranda has made.

PRINCE JAMES PUZZLE



Uh-oh. James broke a few things practising his circus tricks. Help Sofia fix the broken objects by matching the pictures correctly. Use the arrows to choose the correct picture, and then press enter to confirm your choice.

LETTERS & WORDS



Learn phonics and words with Sofia at the Royal Prep Academy. Use the arrows to choose a letter then press enter to confirm your choice.

SORT THE BOOKS



Help Sofia sort the books by answering the letter and number questions. Use the arrows to choose a letter then press enter to confirm your choice or press a number button to answer.

FLY THE KITE



Sofia wants to show Clover her new kite, will you help Sofia get it up the hill? Blow into the microphone to help the kite fly!

MUSIC TIME



Dance with Sofia! There are 9 melodies to choose from. Press the 1-9 number buttons or use the arrows to select then press enter to play a melody. Press the 0 number button for a surprise!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.

CLASS 1
LED PRODUCT



PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

