

**vtech**<sup>®</sup>

**INSTRUCTION MANUAL**

**LITTLE SINGING  
PEPPA**



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

**E**lectronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

**vtech** Baby

Toys that will stimulate their interest in different textures, sounds and colours

**Pre-School**

Interactive toys to develop their imagination and encourage language development

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

Birth-36 months



3-6 years



 
4-10 years



To learn more about this and other VTech® products, visit [www.vtech.co.uk](http://www.vtech.co.uk)

# INTRODUCTION

Thank you for purchasing Little Singing Peppa!  
Laugh, learn, sing, and play with Peppa Pig! Designed to support early language development, Little Singing Peppa introduces first words with delightful music, fun phrases, and interactive sounds. Keep little hands busy and senses engaged with tactile textures and a magical light up button.

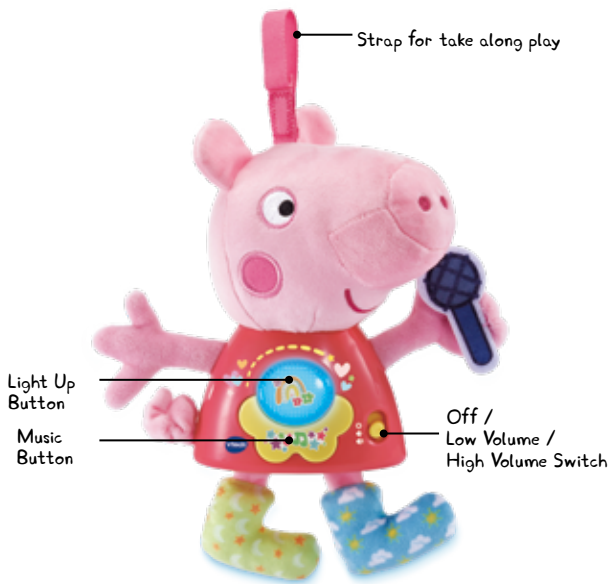

# INCLUDED IN THIS PACKAGE

- Little Singing Peppa
- Quick Start Guide

 
## WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

## NOTE:

Please save this Instruction Manual as it contains important information.

## Unlock the Packaging Locks :

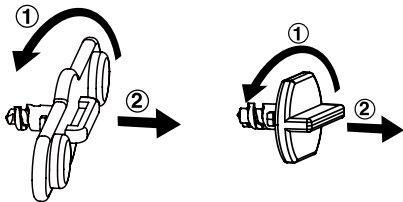


- ① Turn the packaging locks anticlockwise several times.
- ② Pull out the packaging locks and discard.

# GETTING STARTED
 
## BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned OFF
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screws and then open the battery cover.
3. If a used or spent battery is present, remove this battery from the unit by pulling up on one end of the battery.
4. Install 1 new AAA (LR03/AM-4) battery following the diagram inside the battery compartment. (For best performance, an alkaline battery is recommended. A rechargeable battery is not guaranteed to work with this product.)
5. Replace the battery cover and tighten the screws to secure.

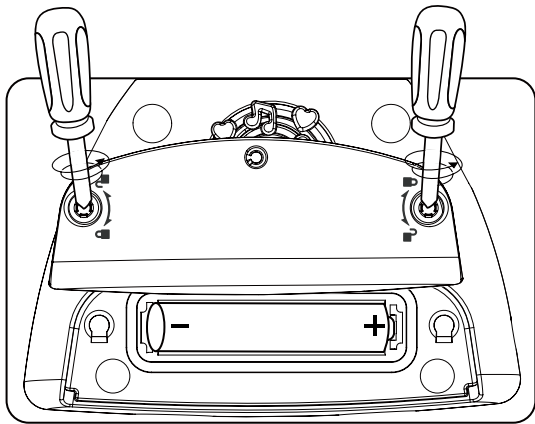


### WARNING:

Adult assembly required for battery installation.  
Keep battery out of reach of children.

# PRODUCT FEATURES

## OFF / LOW VOLUME / HIGH VOLUME SWITCH

 To turn the unit **On** or adjust the volume, slide the **Off / Low Volume / High Volume Switch** to the **Low** or **High Volume** position. To turn the unit **Off**, slide the **Off / Low Volume / High Volume Switch** to the **Off** position.

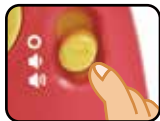

## LIGHT UP BUTTON

Press the **Light Up Button** to hear Peppa Pig talk with fun sounds and colourful light effects. Press the **Light Up Button** whilst songs and melodies play to jam to the music with funny sound effects.



## MUSIC BUTTON

Press the **Music Button** to hear lots of melodies and songs with Peppa.



## AUTOMATIC SHUT-OFF

To preserve battery life, the unit will automatically turn off approximately 30 seconds without input. The unit can be woken up again by pressing the **Light Up Button** or **Music Button**.

The unit will flash with a red light three times and then automatically turn off when battery power is very low.

## **IMPORTANT: BATTERY INFORMATION**

- Insert battery with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only use batteries of the same or equivalent type as recommended.
- Do not short-circuit the supply terminals.
- Remove battery during long periods of non-use.
- Remove exhausted battery from the toy.
- Dispose of battery safely. Do not dispose of battery in fire.

### **RECHARGEABLE BATTERY:**

- Remove rechargeable battery from the toy before charging.
- Rechargeable battery is only to be charged under adult supervision.
- Do not charge non-rechargeable battery.

## Disposal of battery and product



The crossed-out wheelie bin symbols on products and battery, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Battery and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.



Please dispose of your product and battery responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point\* so all of its materials can be recycled.

Learn more at:

[www.vtech.co.uk/recycle](http://www.vtech.co.uk/recycle)

[www.vtech.com.au/sustainability](http://www.vtech.com.au/sustainability)

\* Visit [www.recyclenow.com](http://www.recyclenow.com) to see a list of collection points near you.

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the battery if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. If the unit is not working properly, install a new battery.

## TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the battery.
3. Let the unit stand for a few minutes, then replace the battery.
4. Turn the unit **ON**. The unit should now be ready to use again.
5. If the product still does not work, install a brand new battery.

If the problem persists, please contact our Consumer Services Department, and a service representative will be happy to help you.

# CONSUMER SERVICES

Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: [www.vtech.co.uk/support](http://www.vtech.co.uk/support)

## Australian Customers:

Phone: 1800 862 155

Website: [support.vtech.com.au](http://support.vtech.com.au)

## NZ Customers:

Phone: 0800 400 785

Website: [support.vtech.com.au](http://support.vtech.com.au)

# PRODUCT WARRANTY/ CONSUMER GUARANTEES

## UK Customers:

Read our complete warranty policy online at [vtech.co.uk/warranty](http://vtech.co.uk/warranty).

## Australian Customers:

### VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED — CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [vtech.com.au/consumer-guarantees](http://vtech.com.au/consumer-guarantees) for further information.

Visit our website for more  
information about our products,  
downloads, resources and more.

*[www.vtech.co.uk](http://www.vtech.co.uk)*

*[www.vtech.com.au](http://www.vtech.com.au)*

