



Instruction Manual

Disney Stitch



Stitch's Beach House Slide



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years




To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **Toot-Toot Drivers® Stitch's Beach House Slide!**

Send Stitch zooming from the beach house to the sea! Rearrange the tracks for tower slides, double slides, or a super slide for endless fun!

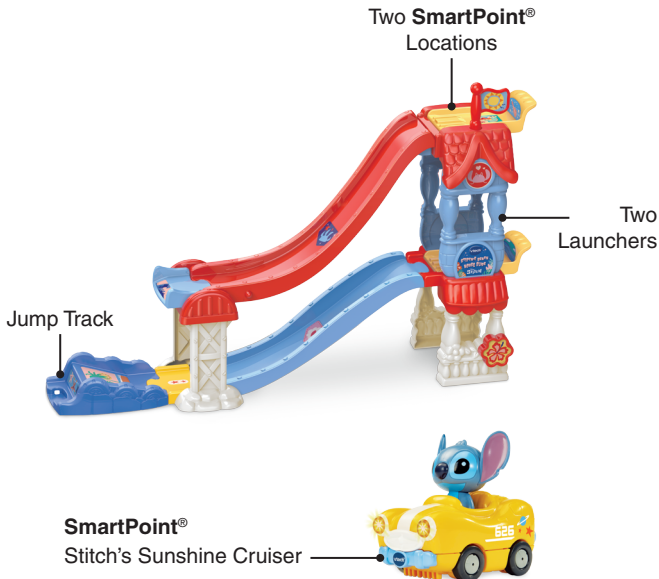

INCLUDED IN THE PACKAGE



One **SmartPoint®**
Stitch's Sunshine Cruiser



SmartPoint®
launcher one



Two lower house
supports



SmartPoint®
launcher two



One flag



Two upper house
supports



Two bridge supports



One bridge



Two long tracks



One mid track



One jump track



One end track



One label sheet

- Quick Start Guide

WARNING


All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

Unlock the Packaging Locks:

- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks.

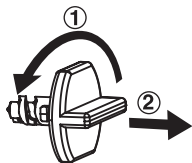


WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

INSTRUCTIONS

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Locate the battery cover on back of the unit, use a screwdriver to loosen the screw, and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new AAA (LR03/AM-4) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

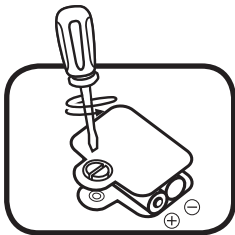

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.

- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product

The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.



In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:


www.vtech.co.uk/recycle


www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

LABEL APPLICATION

Please securely stick the labels to the playset as indicated below:

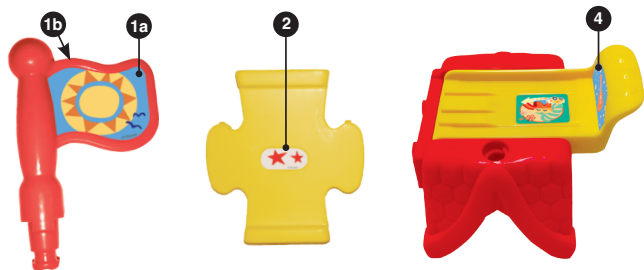

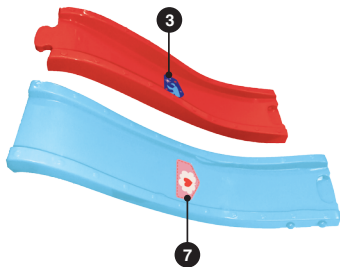



ASSEMBLY INSTRUCTIONS

With the **Toot-Toot Drivers® Stitch's Beach House Slide**, safety comes first. To ensure your child's safety, adult assembly is required.

1. Attach the **Lower House Supports** to **Launcher Two**. You will hear a “click” sound to indicate the pieces are secure. Once the pieces are connected, they cannot be detached.



2. Insert the **Flag** into **Launcher One**. Then, attach the **Upper House Supports** to **Launcher One**. You will hear a “click” sound to indicate the pieces are secure. Once the pieces are connected, they cannot be detached.

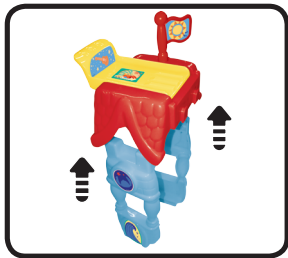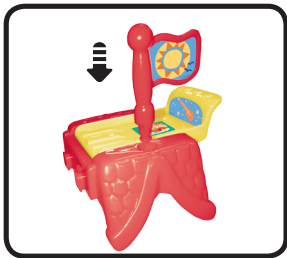

3. Attach the **Bridge Supports** to the **Bridge**.



After the above steps, connect these pieces to the included track pieces. You can configure them into different slides.


Tower Slides



Double Slides




Super Slide

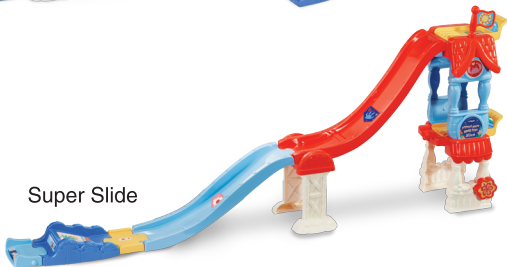

PRODUCT FEATURES

1. On/Off Switch

To turn the unit **On**, slide the **On/Off Switch** to the **On** () position. To turn the unit **Off**, slide the **On/Off Switch** to the **Off** () position.

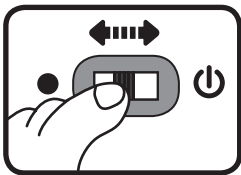

2. Automatic Shut Off


To preserve battery life, the included Cruiser will automatically power down after approximately 60 seconds without input. The unit can be turned on again by pressing Stitch or pushing the Cruiser quickly.

NOTE:

If the Cruiser powers down or if the light fades out during play, please install a new set of batteries.

ACTIVITIES

1. Slide the **On/Off Switch** to the **On** position to turn the unit **On**. You will hear a short tune, phrases and sounds. The Cruiser's lights will flash with the sounds.

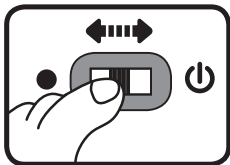

2. Press Stitch to hear fun sounds, songs and phrases. The Cruiser's lights will flash with the sounds.



3. Push **Stitch's Sunshine Cruiser** to hear fun sounds. While the melodies are playing, push the Cruiser to add in fun sounds on top of each melody. The lights will flash with the sounds.



4. For added fun, **Stitch's Sunshine Cruiser** interacts with the **Toot-Toot Drivers® Stitch's Beach House Slide!** Simply put the Cruiser on one of the playset's two **SmartPoint®** launchers to see the Cruiser's lights flash and to hear fun phrases, short tunes and sounds. **Stitch's Sunshine Cruiser** even interacts with other **Toot-Toot Drivers®** playsets and tracks (each sold separately).

ACTIVITIES

Stitch's Beach House Slide

1. Place **Stitch's Sunshine Cruiser** on any of the playset's two **SmartPoint®** locations to trigger fun sounds, phrases and music.



2. Configure the playset in 3 different ways for added fun and creative play.



3. Place **Stitch's Sunshine Cruiser** on the launchers to send Stitch zooming.



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit Off.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit On. The unit should now be ready to play with again.
5. If the unit is not working properly, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department, and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

**VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES**

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

