

vtech[®]

Parent's Guide

Crazy Legs Learning Bug



91-003676-001 

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

Pre-School

Interactive toys to develop their imagination and encourage language development

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

Birth-36 months



3-6 years




4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Pull or pop with this cute bug character for shape sorting fun! The **Crazy Legs Learning Bug** by VTech® features shape sorting pieces that pop out with a push of the cute baby ladybird. The flapping butterfly and sliding caterpillar on the side of the bug provide manipulative play. The toy's rolling design promotes crawling and walking.

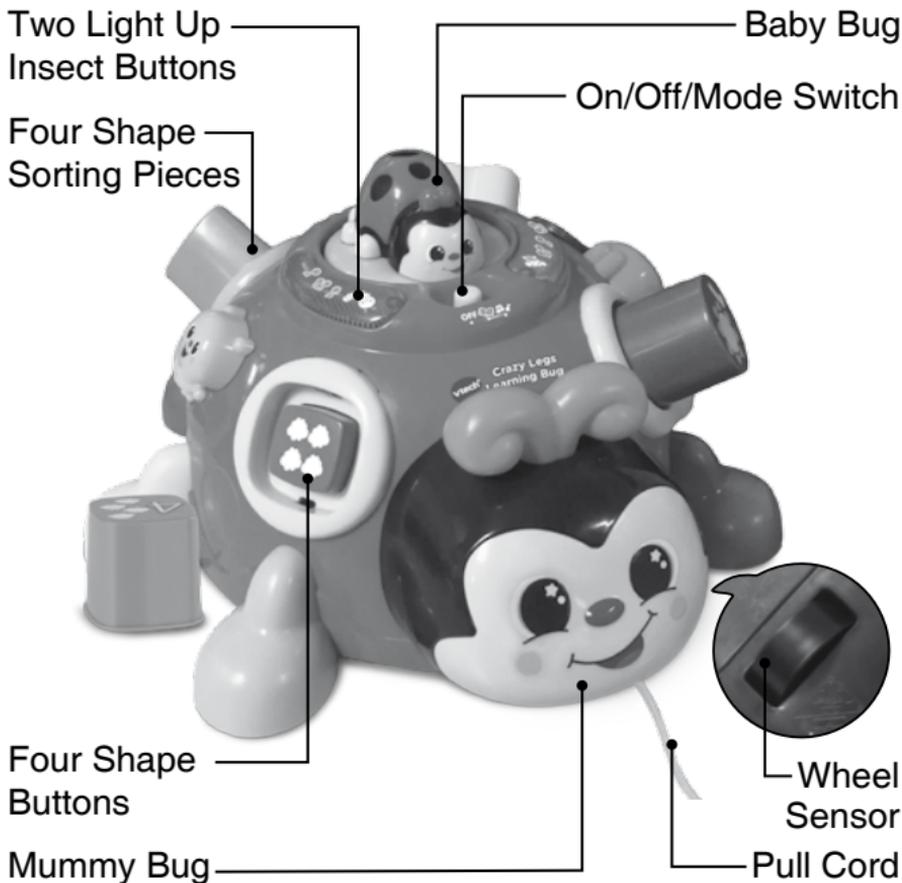


INCLUDED IN THIS PACKAGE

- One Crazy Legs Learning Bug
- One baby bug
- Four shape sorter blocks
- One parent's guide

WARNING: All packing materials, such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE: Please keep this parent's guide as it contains important information.

Unlock the packaging locks:

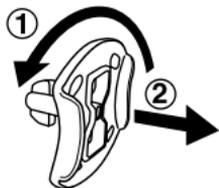


- ① Rotate the packaging lock anticlockwise 90 degrees.
- ② Pull out and discard the packaging lock.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw.
3. Install 2 new AA (LR6/AM-3) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
4. Replace the battery cover and tighten the screw to secure.

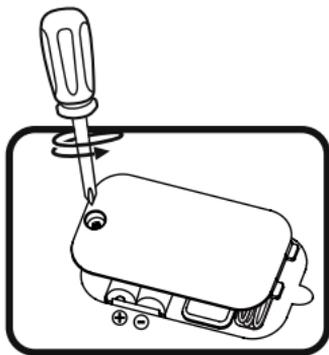

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk


www.recyclenow.com

With the **Crazy Legs Learning Bug** safety comes first:

1. To ensure your child's safety, the assembly of this product is an adult activity, not a child's activity.
2. Please ensure that the baby bug is locked into position before giving this toy to a child.

ASSEMBLY INSTRUCTIONS

1. Please remove the baby bug label and the two pieces of clear plastic beneath it to expose the hole in the unit. Discard the label and plastic insert for your child's safety.
2. Align the bottom of the baby bug with the hole in the unit. Push the baby bug into the hole until it clicks into place. Once the baby bug is connected to the mummy bug, it cannot be detached.

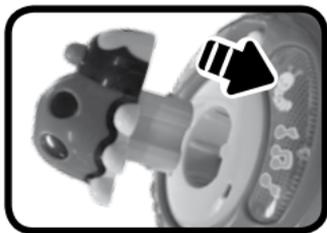

PRODUCT FEATURES


1. On/Off/Mode Switch

To turn the unit **ON**, slide the **On/Off/Mode Switch** to the Learning Mode (📖) or the Music Mode (🎵) position. To turn the unit **OFF**, slide the **On/Off/Mode Switch** to the **(OFF)** position.



2. Pull Cord

To convert the unit from a push along toy to a pull along toy, remove the pull cord from the battery compartment and thread it through the eyelet on the bottom of the bug. For your child's safety, please store the pull cord in the compartment until your child is walking. (Adult supervision is recommended).

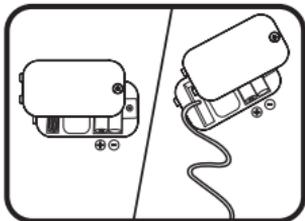

3. Automatic Shut Off


To preserve battery life, the **Crazy Legs Learning Bug** will automatically power down after approximately 30 seconds without input. The unit can be turned on again by pressing any button. Pulling the mummy bug along will not turn the unit back on.

Note: If the unit powers down while playing, we suggest changing the batteries.

ACTIVITIES

1. Shape Buttons

Press the **Shape Buttons** or insert a **Shape Sorting Piece** to learn the names and colours of the shapes, nature objects and numbers in Learning Mode. In Music Mode, the buttons will trigger short tunes and playful melodies. The lights flash with the sounds.

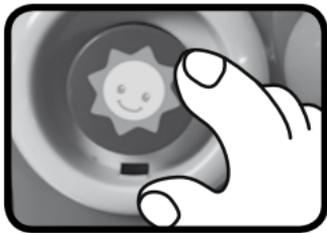

2. Baby Bug

Press the **Baby Bug** to hear playful phrases and fun sounds in Learning Mode. In Music Mode, the buttons will trigger songs and a variety of melodies. Pressing down on the **Baby Bug** releases the shape sorting pieces that are inserted in the mummy bug's back.



3. Light Up Insect Buttons

Press the **Light Up Insect Buttons** to learn about the insects in Learning Mode and to hear cheerful tunes and melodies in Music Mode. The lights will flash with the sounds.



4. Wheel Sensor

Push or pull the mummy bug to activate the **Wheel Sensor** and hear a variety of melodies and songs. As the bug moves along, the lights will flash with the sounds.



SONG LYRICS

Song 1

I am a friendly ladybird.
My back carries lots of shapes.
It's fun to explore with my little one,
Won't you come and have some fun.

Song 2

When our travels are long,
It's great to sing a song.
Come on, won't you sing along!

MELODY LIST

1. Au Clair de la Lune
2. Flight of the Bumblebee
3. Alouette
4. Oh My Darling, Clementine
5. The Happy Farmer
6. Home on the Range
7. Bingo
8. The Farmer in the Dell
9. Old MacDonald Had a Farm
10. Oh! Susanna
11. Froggie Went A-Courtin'
12. It's Raining It's Pouring
13. Mary Had a Little Lamb
14. I've Been Working on the Railroad
15. Hickory Dickory Dock

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture.

TROUBLESHOOTING

If for some reason the unit stops working, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **ON**. The unit will now be ready to play with again.
5. If the unit still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.



CONSUMER SERVICES

Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au



TM & © 2019 Vtech Holdings Limited.
All rights reserved.
Printed in China.
91-003676-001 (K)