

User's Manual

Peek & Play Baby Book



© 2016 VTech Printed in China

91-003210-000(9)

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...



Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school



vtech Bay

stimulate their interest

in different textures. sounds and colours

...responding to colours,

sounds and textures

...understanding cause

grasp, sit-up, crawl and

...learning to touch, reach,

Toys that will

l am...

and effect

toddle






INTRODUCTION

Thank you for purchasing the VTech® Peek & Play Baby Book.

Explore the soft pages of the **Peek & Play Baby Book**. Each of the three easy-to-turn pages offers a different activity, open the refrigerator, open the cabinet door or look into the peek-a-boo mirror. Press the soft animal buttons or the light-up music button on the spine of the book to be rewarded with fun phrases, melodies and songs.

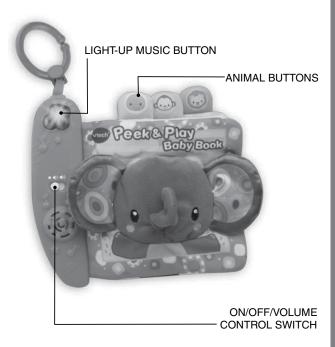

INCLUDED IN THIS PACKAGE

- One VTech® Peek & Play Baby Book learning toy
- One user's manual

WARNING:

All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy and should be discarded for your child's safety.

Unlock the packaging locks:



- ① Turn the packaging lock counter-clockwise several times.
- ② Pull out and discard the packaging lock.

NOTE:

Please keep user's manual as it contains important information.

The cord is not part of this toy. For your child's safety, please cut and discard the cord before using the product.



GETTING STARTEDBATTERY INSTALLATION

- 1. Make sure the unit is turned OFF.
- Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw.
- Install 1 new 'AAA' (AM-4/LR03) battery following the diagram inside the battery box. (The use of a new alkaline batteries is recommended for maximum performance.)
- 4. Replace the battery cover and tighten the screw to secure.



BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metalhydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbonzinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

PRODUCT FEATURES

1. ON/OFF/VOLUME CONTROL SWITCH

To turn the unit ON, slide the ON/OFF/
VOLUME CONTROL SWITCH to the
LOW VOLUME (♠)) or the HIGH
VOLUME (♠)) position. To turn the
unit OFF, slide the ON/OFF/VOLUME
CONTROL SWITCH to the OFF (♠)
position.



2. AUTOMATIC SHUT-OFF

To preserve battery life, the **Peek & Play Baby Book** will automatically power-down after approximately 30 seconds without input. The unit can be turned on again by pressing any button.

NOTE: If the unit repeatedly powers down or the light flashes three times then powers down, we suggest changing the battery.

3. LINK

The LINK can be used to attach the VTech® Peek & Play Baby Book to pushchairs, car carriers and more. To prevent strangulation, please do not use additional links to form a loop or long chain. Do not attach links across a playpen or cot.



ACTIVITIES

 Slide the on/off/volume control switch to turn the unit on. You will hear a song and a playful phrase. The light will flash with the sounds.



 Press the light-up music button to hear a song, a melody or a fun phrase. When a melody is playing, press one of the animal buttons to hear fun sounds play over the melody. The light will flash with the sounds.



Press the animal buttons to hear animal names, colours, playful songs and fun sounds. The light will flash with the sounds.



MELODY LIST:

- 1. Rub-a-Dub-Dub Three Men in the Tub
- 2. Hickory Dickory Dock
- 3. Toyland
- 4. Georgie Porgie
- 5. London Bridge
- 6. Jack Be Nimble
- 7. Lazy Mary Will You Get Up?
- 8. One, Two, Buckle My Shoe
- 9. This Old Man
- 10. Three Little Kittens
- 11. Polly Wolly Doodle
- 12. Shoo Fly Don't Bother Me
- 13. Ding Dong Bell
- 14. Grandfather's Clock
- 15. Diddle Diddle Dumpling
- 16. Did You Ever See a Lassie?
- 17. A-B-C Tumble Down D
- 18. Bicycle Built For Two
- 19. Little Bo Peep
- 20. Down By the Riverside

SING-ALONG SONG LYRICS

SONG 1

I am a clever elephant, I like to read. Look inside my book, what will you see?

SONG 2

Hey lion,

One day you'll be the king of the jungle.

SONG 3

Silly little monkey, Swinging here and there on your long tail.

SONG 4

Turtle's splashing in the tub.

Bubbles popping.

Ducky squeaking.

CARE & MAINTENANCE

- Due to the electronic components, the book is surface washable only.
- 2. Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Remove the batteries when the unit is not in use for an extended period of time.
- Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

- 1. Please turn the unit OFF.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit **ON.** The unit should now be ready to play again.
- If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.

CLASS 1 LED PRODUCT



vtech PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.



- 1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
- The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
- VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
- 4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
- 5. This warranty is personal to the original purchaser and is not transferable.
- 6. Breakages to the LCD screen are not covered by the warranty.
- 7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
- Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
 - Please include details of the fault together with your name and address.
- To keep an online record of your warranty, please register your product online at www.vtech.co.uk/warranty

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.