

vtech[®]
Baby

User's Manual

Sleepy Bear Sweet Dreams



© 2010 VTech
Printed in China
91-002436-007-000

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36months

Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6years

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10years




To learn more about this and other VTech® products, visit www.vtechuk.com

INTRODUCTION

Thank you for purchasing the **VTech® Sleepy Bear Sweet Dreams**.

The **VTech® Sleepy Bear Sweet Dreams** is an advanced cot light that projects moving images onto the ceiling whilst playing nature sounds, soothing melodies and sung-songs.

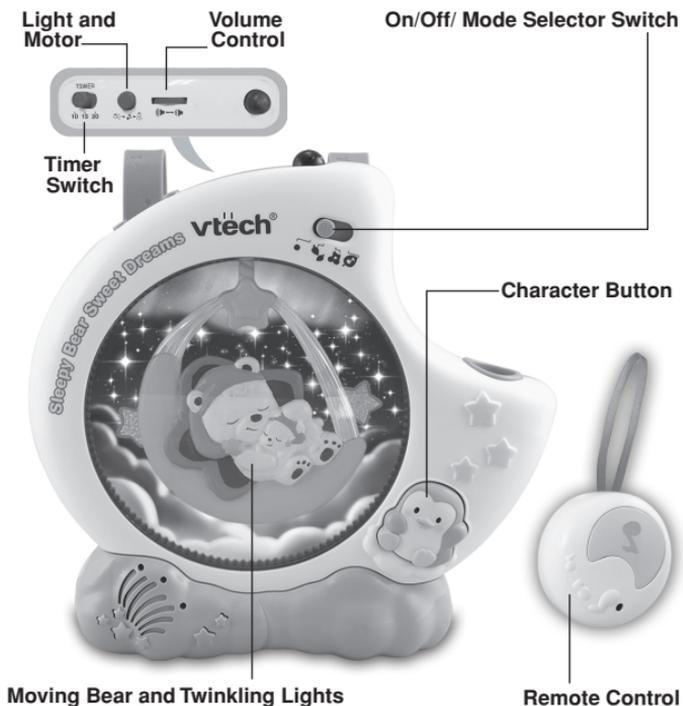


INCLUDED IN THIS PACKAGE

- One VTech® Baby Bear Sweet Dreams Main Unit
- One Remote Control
- One user's manual
- 2 strap for cot attachment

WARNING: All packing materials, such as tape, plastic sheets, packing lockers, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep instruction manual as it contains important information.

Unlock the packing lockers:

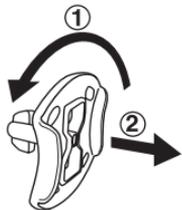


- ① Rotate the packing locker counter-clockwise for 90 degrees
- ② Pull out the packing locker


GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the main unit. Use a screwdriver to loosen the screw.
3. Install 4 new 'AA' (LR6/AM-3) batteries into the main unit following the diagram inside the battery box.

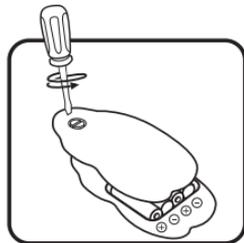

4. Install 2 new 'AAA' (LR03/AM-4) batteries into the remote control following the diagram inside the battery box.
5. Replace the battery cover and tighten the screw to secure.

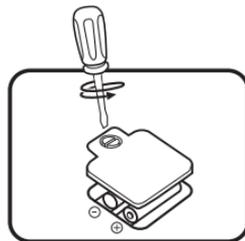

BATTERY NOTICE

- The use of new alkaline batteries is recommended for maximum performance.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- The toy is not to be connected to more than the recommended number of power supplies.
- Do not dispose of batteries in fire.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

Help the environment by disposing of your product responsibly. The wheelie bin symbols indicate the product and batteries must not be disposed of in the domestic waste as they contain substances which can be damaging to the environment and health. Please use designated collection points or recycling facilities when disposing of the item or batteries.




More information can be found on: <http://www.recycle-more.co.uk>; www.recyclenow.com

ASSEMBLY INSTRUCTIONS

1. Place the unit in the cot bringing both straps over the top rail. Slip the top of the strap under the slot on the back of the unit and secure. Repeat this procedure for the second strap. You can adjust the hanging height by choosing the appropriate hole on the top of each strap.



2. Fasten the cord on the back of the unit to the cot rail.

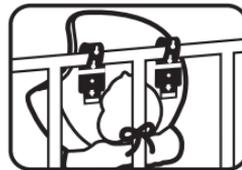

3. Pull slightly on the unit to make sure both straps have been securely fastened. The unit should be snug against the cot rail. Please check the unit frequently to ensure it is still secure.

PRODUCT FEATURES


1. On/Off/Mode Selector Switch

Slide the on/off/mode selector switch to select either the Nature, Soothing or Melody mode.




2. Timer Switch

Slide the timer switch to select the length of time the unit will play for. When the time is up the unit will enter sleep mode. Time options include 5mins/10mins/15mins.

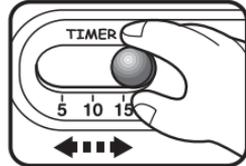


3. Light and Motor Control

Press the light and motor control to select one of four light and motor combinations.

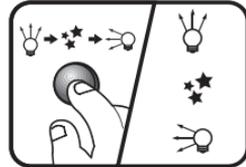

4. Volume Control

Roll the volume control to select the volume required.

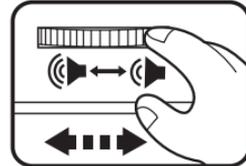

5. Character Button

In each mode press the character button to play the next nature sound, melody or sung-song depending on the selected mode.



6. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Sleepy Bear Sweet Dreams** will automatically power-down after the time selected. The unit can be reactivated by pressing any button or when baby cries.

ACTIVITIES

To turn the unit on slide the **On/Off/Mode selector switch** to select either Nature/ Soothing or Melody mode. You will hear a comforting phrase then either nature sounds, soothing melodies or sung-songs in the related mode. The projector and lights will light up with the sounds whilst the bear rocks back and forth.



1. Nature mode (🌿)

Select this mode to listen to different types of nature sounds.

2. Soothing Mode (🎵)

Select this mode to listen to soothing melodies.

3. Melody Mode (🎶)

Select this mode to listen to sung-songs and soothing melodies.

4. Remote control

Press the remote control to pause the sounds, press the remote control again to restart.

Remark:

- The remote control should be used within 6 metres and ± 30 degrees to the main unit.





b. To ensure a good signal turn the main unit containing the receiver to face the remote control.

c. To ensure a good signal the transmitter in the remote control should point in a direct line to the receiver in the main unit.

MELODY LIST:

1. Rock a bye Baby
2. Dodo l'enfant do
3. Fais dodo
4. Greensleeves
5. Frere Jacques
6. Au Clair de la lune
7. Douce nuit
8. Debussy- Clair de lune
9. Chopin-berceuse
10. Gounod-AveMaria
11. Danse hongroise - J. Brahms
12. Casse-Noisette ouverture - P.I. Tchaiovski
13. La marche turque - W.A. Mozart
14. Hymne la joie - L. van Beethoven
15. Ah ! Vous dirai-je maman? - W.A. Mozart
16. La berceuse - J. Brahms
17. Rve d'amour - F. Liszt
18. Menuet - W.A. Mozart
19. La lettre a Eise - Beethoven
20. L'Empeureur - L. van Beethoven
21. Moonlight Sonata



22. Menuet - J.-S. Bach
23. Songe d'une nuit d' - F. Mendelssohn
24. Water music suite 1, Bourr - G.F. Handel
25. Home sweet home
26. Jesus que ma joie demeure - J.-S. Bach
27. Les 4 saisons, Automne - A. Vivaldi
28. Les 4 saisons, Automne - A. Vivaldi
29. Water music suite 2, Alla Hornpipe - G.F. Handel
30. Water music suite 2, Allegro - G.F. Handel
31. Pachebel Canon in D
32. New World Symphony - Dvorak
33. Serenade - Haydn
34. Symphony No5 - Beethoven
35. Ode to Joy
36. Sleeping Beauty Waltz Op. 66 - Tchaikovsky
37. Shenandoah
38. All Through the Night
39. Moonlight Sonata - Beethoven
40. Air - Bach

Song 1 (Tune of "Brahms Lullaby")

Lullaby, and good night,
With pink roses bedight

Song 2 (Tune of "Beautiful dreamer")

Beautiful dreamer, wake unto me,
Starlight and dewdrops are waiting for thee

Song 3 (Tune of "Rock a bye Baby")

Rock a bye Baby in the tree top



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLE SHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546 810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.





vtech[®]

PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

Join the VTech club online at www.vtechuk.com

