

# User's Manual

# **Crawl & Learn Bright Lights Ball**



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...



Interactive toys to develop their imagination and encourage language development

## l want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

## Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

# I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

Birth-36 months

vtech Bally

stimulate their interest

in different textures, sounds and colours

...responding to colours,

...understanding cause

grasp, sit-up, crawl and

...learning to touch, reach,

sounds and textures

Toys that will

lam...

and effect

toddle






# INTRODUCTION

Thank you for purchasing the VTech® Crawl & Learn Bright Lights Ball!

Move and crawl with your animal friends! With lots of buttons to press, twist and spin, the **Crawl & Learn Bright Lights Ball** introduces colours, numbers, animals and animal sounds. Equipped with a motor, the **Crawl & Learn Bright Lights Ball** will wibble, wobble and roll around when the music plays!

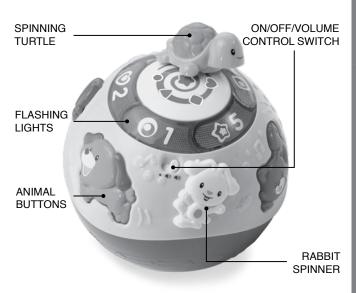

# INCLUDED IN THIS PACKAGE

- One VTech® Crawl & Learn Bright Lights Ball
- · One user's manual

WARNING: All packing materials, such as tape, plastic sheets,

wire ties and tags are not part of this toy, and

should be discarded for your child's safety.

NOTE: Please keep this instruction manual as it contains

important information.

WARNING: The cord is not part of this toy.


Please cut and discard the

cord for your child's safety.



#### **BATTERY INSTALLATION**

- 1. Make sure the unit is turned **OFF**.
- Locate the battery cover on the bottom of the ball. Use a screwdriver to loosen the screw.
- Install 3 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
- 4. Replace the battery cover and tighten the screw to secure

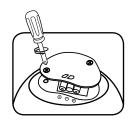

### **BATTERY NOTICE**

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- · Insert batteries with the correct polarity.

- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

# Disposal of batteries and product



The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.



Help protect the environment by disposing of your product or batteries responsibly.

 
For more information, please visit:

www.recycle-more.co.uk www.recyclenow.com

# PRODUCT FEATURES

## 1. ON/OFF/VOLUME CONTROL SWITCH

To turn the unit ON, slide the ON/OFF/VOLUME CONTROL SWITCH to the LOW VOLUME ( )) ) or the HIGH VOLUME ( )) ) position. To turn the unit OFF, slide the ON/OFF/VOLUME CONTROL SWITCH to the OFF ( ) position.




### 2. AUTOMATIC SHUT OFF

To preserve battery life, the VTech® Crawl & Learn Bright Lights Ball will automatically shut off after approximately one minute without input. The unit can be turned on again by pressing any button.

NOTE:If the unit repeatedly powers down or the red light flashes three times then powers down, we suggest changing the batteries.

# **ACTIVITIES**

  Slide the on/off/volume control switch to turn the unit on. You will hear a song, a phrase and fun sounds. The lights will flash and the ball will move with the sounds.



 Press the animal buttons to learn animal names, animal sounds, colours and numbers, and hear playful music. The lights will flash and the ball will move with the sounds.



 Spin the **bunny** to hear the bunny introduced and a variety of fun sounds or short tunes. The lights will flash with the sound and the ball will move with the music.



4. If there is no input after approximately 8 seconds, you will hear a phrase encouraging you to play with the ball. After another 10 seconds without input, you will be asked to find a specific animal, press the animal buttons to answer. If there continues to be no input, you will hear a short tune before the unit automatically powers down.

## **MELODY LIST**

- 1. BINGO
- 2. Where Has My Little Dog Gone?
- 3. Farmer in the Dell
- 4. Three Little Kittens
- 5. Pussy Cat, Pussy Cat
- 6. Three Blind Mice
- 7. Teddy Bears' Picnic
- 8. Bear Went Over the Mountain
- 9. Ta-Ra-Ra Boom-De-Ay

- 10. Pop! Goes the Weasel
- 11. Ring Around the Rosy
- 12. Skip to My Lou

### SING-ALONG SONG LYRICS

#### SONG 1

We like to spin fast or roll nice and slow, Keep your eyes on us, You never know where we'll go!

#### SONG 2

I'm a friendly dog, I like it when you pat my head.

#### SONG 3

I am playful,
I like to run around and chase the ball.

#### SONG 4

I'm a happy bear,
I like to roll around and play all day.

# **CARE & MAINTENANCE**

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Remove the batteries when the unit will not be in use for an extended period of time.
- Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

- 1. Please turn the unit OFF.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit **ON**. The unit should now be ready to play again.
- 5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

#### IMPORTANT NOTE:

Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK), or by going to our web site at www.vtech.co.uk and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

CLASS 1 LED PRODUCT



## PRODUCT REGISTRATION

# Visit www.vtech.co.uk/clubvtech/login to register your VTech product

By joining the VTech Club you can also enter competitions, find out about news and events, seek expert advice for parents and let your kids play fun learning games and activities.



## PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

- The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
- 2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
- VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
- 4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
- 5. This warranty is personal to the original purchaser and is not transferable.
- 6. Breakages to the LCD screen are not covered by the warranty.
- 7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
- Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor). Please include details of the fault together with your name and address.
- To keep an online record of your warranty, please register your product online at www. vtech.co.uk/warranty

Vtech Electronics EU PLC, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, West Hallam, DE7 6HE

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

