



User's Manual



Play Smart Laptop



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the Peppa Pig Play Smart Laptop. The Peppa Pig Play Smart Laptop encourages role-play and is packed with 15 games and activities to explore with Peppa Pig, her family and friends.



INCLUDED IN THE PACKAGE

- Peppa Pig Play Smart Laptop
- Quick Start Guide

 
WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.


Unlock the Packaging Locks

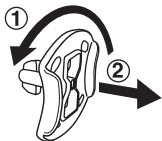

- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks and discard.

NOTE:

 The cord located on the front cover is not a part of this toy. This cord should be removed and discarded for your child's safety.

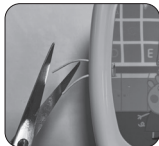

INSTRUCTIONS

 
BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.

4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

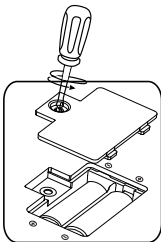

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

VTech® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

In the UK:

Visit www.recyclenow.com to see a list of collection points near you.

In Australia & New Zealand:

Check with your local council for kerbside collections.

PRODUCT FEATURES

1. ON/OFF BUTTON

Press the **On/Off Button** to turn the unit **ON** and press it again to turn the unit **OFF**.

2. SETTINGS BUTTON

Press the **Settings Button** to adjust the volume level and screen contrast. Press the left or right **Arrow Buttons** to choose which item to adjust and then press the **Enter Button** to confirm.

3. HELP BUTTON

Press the **Help Button** to hear an instruction or a question repeated.

4. CATEGORY SELECTOR

Slide the **Category Selector** to choose one of the five categories. Your child can explore words, phonics, numbers, puzzles, games and music.

5. PEPPA BUTTON

Press the **Peppa Button** to hear Peppa Pig speak.

6. ARROW BUTTONS

Press the left or right, up or down **Arrow Buttons** to make selections.

7. ENTER BUTTON

Press the **Enter Button** to confirm a selection.

8. BACKGROUND MUSIC ON/OFF BUTTON

Press the **Background Music On/Off Button** to turn the background music off. Press this button again to turn the background music on.

9. LETTER BUTTONS



Press the **Letter Buttons** to learn letters or to answer letter related questions.

10. NUMBER BUTTONS



Press the **Number Buttons** to learn numbers or to answer number related questions.

11. AUTOMATIC SHUT-OFF

To preserve battery life, the unit will automatically turn off after one minute without input. The unit can be turned on again by pressing the **On/Off Button**. The unit will also automatically turn off when the batteries are very low. A warning will be displayed on the screen as a reminder to change the batteries.



ACTIVITIES:

The VTech® Peppa Pig Play Smart Laptop offers a total of 15 fun activities in 5 categories.

LETTERS AND WORDS CATEGORY

abc

1. LETTER PAINTING FUN

Suzy Sheep is drawing with Peppa. Press the **Letter Buttons** to explore each letter, letter sounds and words that begin with those letters.



2. MISSING LETTERS

Press the **Letter Buttons** or press the left or right **Arrow Buttons** to select the letter and then press the **Enter Button** to help Peppa pick the missing letter.



3. LETTER ORDER

Press the **Letter Buttons** or press the left or right **Arrow Buttons** to select the letter and then press the **Enter Button** to help Peppa sort the letters into the correct letter order.



4. BUBBLE TYPING

Peppa is playing with bubble mixture and blowing bubbles. Type each letter that you see to make the bubbles disappear.



NUMBERS CATEGORY 123

5. DELIVER NUMBERS

Press the **Number Buttons** to help Mr. Zebra get the numbered envelopes out of the van.



6. NUMBER ORDER

Press the **Number Buttons** or press the up or down **Arrow Buttons** to select the number, then press the **Enter Button** to help Peppa sort the numbers into the correct number order.



7. COUNTING APPLES

Peppa and George are counting the number of apples. Press the **Number Buttons** to help them.



8. CARROT QUIZ

Press the left or right **Arrow Buttons** to help Peppa choose between more or less carrots, then press the **Enter Button** to confirm.



PUZZLES CATEGORY

9. FIX THE WALL

Press the up or down **Arrow Buttons** to select a shape, then press the **Enter Button** to help Mr. Bull fix the hole in the wall with the right shape.



10. TIDY UP

Press the left or right, up or down **Arrow Buttons** to help Peppa choose the object that is different, then press the **Enter Button** to confirm.



11. SHOPPING LIST

Peppa would like to buy something. Press the left or right **Arrow Buttons** to choose between the larger and smaller items, then press the **Enter Button** to confirm.



GAMES CATEGORY



12. ON THE ROAD

Help Daddy Pig splash through muddy puddles with the camper van by using the up or down **Arrow Buttons**.



13. HIDE-AND-SEEK

Help Peppa find out who is hiding behind the furniture and other objects in this hide-and-seek game.

 


MUSIC CATEGORY



14. MUSIC PARTY

Press the **Number Buttons** to add fun sound effects into the melodies.



15. MUSICAL INSTRUMENTS

Press the left or right **Arrow Buttons**, then press the **Enter Button** to help Peppa and her friends choose an instrument to play music with.



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play with again.
5. If the unit still does not work, install a new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED - CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

Visit our website for more
information about our products,
downloads, resources and more.

www.vtech.co.uk
www.vtech.com.au

