

vtech®

Parent's Guide

SWITCH&GO® **DiNOS**

Defender the Velociraptor



91-003659-003 UK

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

 
Introducing Defender the Velociraptor! This wild Switch & Go Dino is an exciting 2-in-1 toy which switches between a fierce Velociraptor and a mighty Robot! Press the Action Button to see Defender's dino legs stomp and robot arms swing! Defender plays fun phrases and sounds, teaches dinosaur facts, and even has a cool screen which displays animations! Let's Switch & Go!

Talk Button

Sound Effects Button

Action Button

Motion Sensor

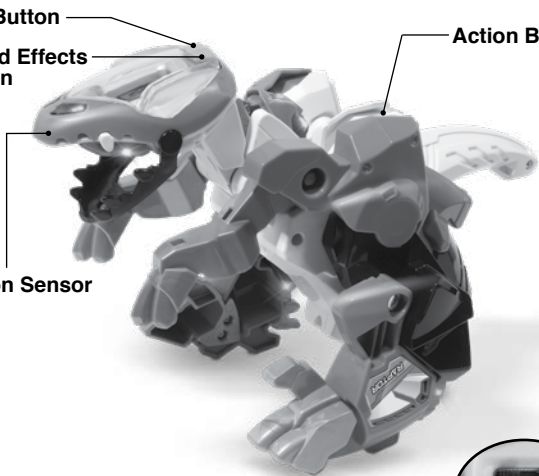

**Off / Low / High
Volume Switch**

INCLUDED IN THIS PACKAGE

- Defender the Velociraptor
- One Parent's Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy and should be discarded for your child's safety.

 
NOTE:

Please keep this Parent's Guide as it contains important information.

GETTING STARTED

BATTERY REMOVAL AND INSTALLATION

1. Make sure the dino is turned **OFF**.
2. Locate the battery cover and open it with a screwdriver.
3. If used or spent batteries are present, remove these batteries from the dino by pulling up on one end of each battery.
4. Install 2 AAA (LR03/AM-4) batteries following the diagram inside the battery box. (The use of new, alkaline batteries is recommended for maximum performance).
5. Replace the battery cover and tighten the screw to secure.

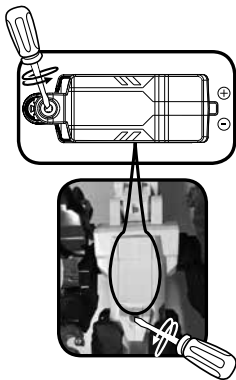

Note: If there is no response when the dino is switched on, please install brand new batteries and try switching the dino on again.

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride).
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk
www.recyclenow.com

PRODUCT FEATURES

1. OFF / LOW / HIGH VOLUME SWITCH

Slide the OFF / LOW / HIGH VOLUME SWITCH to the LOW or HIGH position to turn on the dino and to adjust the volume. Slide the switch to the OFF position to turn the dino off.



2. TALK BUTTON !

Press the TALK BUTTON to hear Defender talk.



3. SOUND EFFECTS BUTTON ⚡

Press the SOUND EFFECTS BUTTON to hear cool Velociraptor and robot sound effects.



4. ACTION BUTTON

In Dino Mode, press the ACTION BUTTON to move the Velociraptor's legs and to hear a roar.

In Robot Mode, press the ACTION BUTTON to move the robot's arms and to hear robot sound effects.



5. AUTOMATIC SHUT-OFF

To preserve battery life, the dino will automatically turn off after approximately 1 minute of inactivity. The dino can be woken up by pressing any button.

Please note: When the battery power is very low, a low voltage icon will flash on the LCD screen several times. Then, the dino will automatically turn off. Please replace the batteries after seeing the low voltage icon to continue normal play.

ACTIVITIES

 
1. Dino Mode

In Dino Mode, pressing the TALK BUTTON will play fun phrases and cool Velociraptor facts. Pressing the SOUND EFFECTS BUTTON or moving the Velociraptor will trigger dinosaur sound effects. Pressing the ACTION BUTTON will make the Velociraptor's legs move.


2. Robot Mode

In Robot Mode, fun phrases will be heard when the TALK BUTTON is pressed. Pressing the SOUND EFFECTS BUTTON or moving the robot will trigger robot sound effects. Pressing the ACTION BUTTON swings the robot's arms.


HOW TO SWITCH DEFENDER THE VELOCIRAPTOR

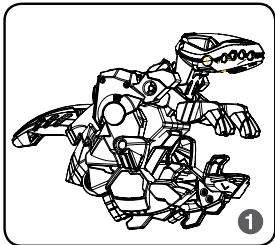

 
1. Dino mode.

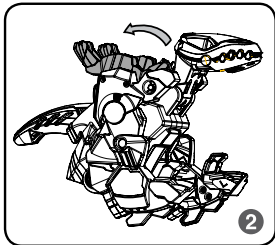

 
2. Pull the claws towards the dino's back.

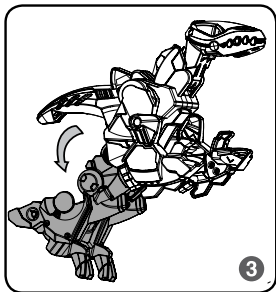

 
3. Turn the robot legs down until you hear them click into place.

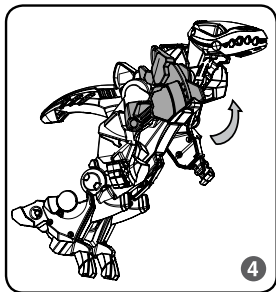

 4. Rotate the shoulders upwards until you hear them click into place.

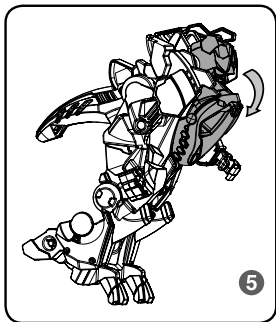

 5. Push the head down into the body.

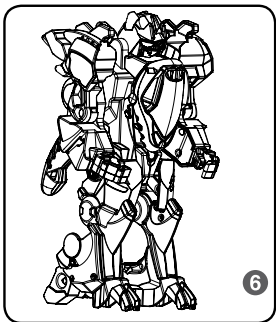

6. Robot mode.

Note: To switch from Robot mode to Dino mode, follow the above steps in reverse order.

CARE & MAINTENANCE

1. Keep the dino clean by wiping it with a slightly damp cloth.
2. Keep the dino out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the dino is not in use for an extended period of time.
4. Do not drop the dino on a hard surface and do not expose the dino to excess moisture.

TROUBLESHOOTING

If for some reason the dino stops working, please follow these steps:

1. Please turn the dino OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the dino stand for a few minutes, then replace the batteries.
4. Turn the dino ON. The dino should now be ready to play with again.
5. If the dino still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department, and a service representative will be happy to help you.



**CLASS 1
LED PRODUCT**

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

**VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES**

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

