



Instruction Manual



Roll & Repair Garage



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **Roll and Repair Garage**. Discover the new **Toot-Toot Drivers Roll & Repair Garage** with animal friends! This fun play set includes a Toot-Toot Roadster with a 3D bear character, interactive SmartPoint™ locations, glowing lights and cheerful sounds. With ramps, workshops and more, kids can explore endless pretend play. Compatible with all Toot-Toot play sets for even more fun.



INCLUDED IN THE PACKAGE



One Roadster



Ramp Y



Ramp Z



 
Ramp C




D



E

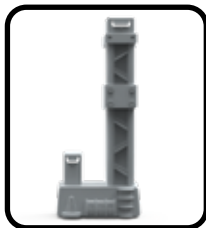

F

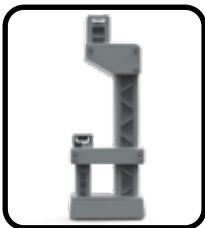 

G



H



I



 
J




K



L

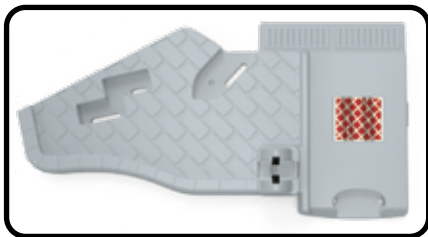

M

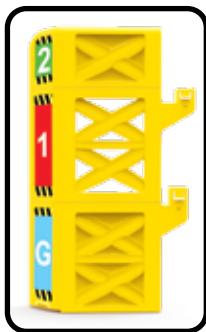 

N



O



 
P



Q



R

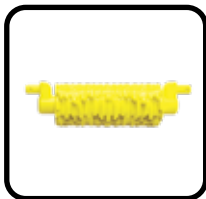

S



T



V



W



U



X



 
Two gates



Barrier A



Barrier B

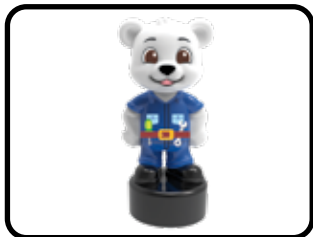

Bear



Tiger



Sticker Sheet

- One Quick Start Guide

WARNING:

 
All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.

If there are no locks inside the package, disregard this message.

Removing the Packaging Locks:

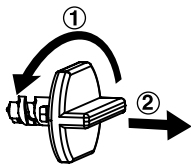

- ① Turn the packaging locks anticlockwise several times.
- ② Pull out the packaging locks and discard.

WARNING:

Adult assembly required for battery installation.

 
Keep batteries out of reach of children.

GETTING STARTED

Battery Removal and Installation

Dan Dog the Roadster

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new 1.5V AAA (AM-4/LR03) batteries following the diagram inside the battery box (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

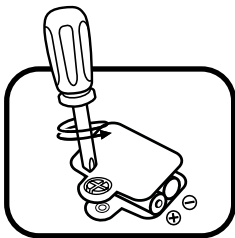

Note:

If the unit repeatedly powers down while playing or the light fades out, we suggest changing the batteries.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product

The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.



Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

 
* Visit www.recyclenow.com to see a list of collection points near you.

 
LABEL APPLICATION

 
 
 
Please stick the labels to the play set securely as indicated on the following page:



M/N: 80-588203 ©
P/N: 92-01 3979-000-100

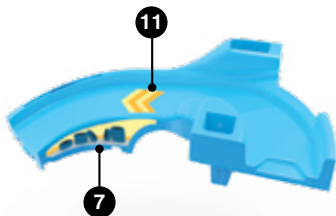

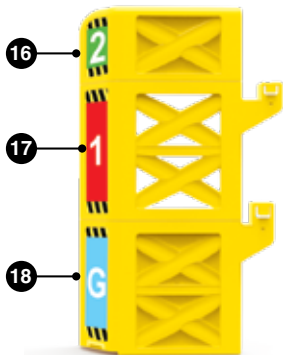

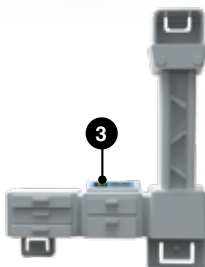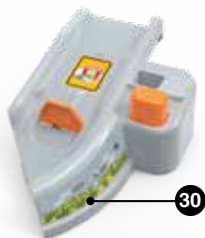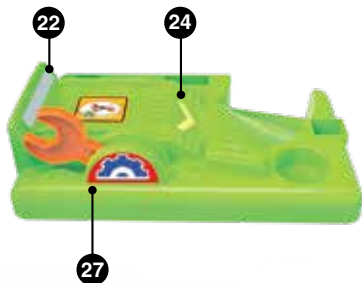

ASSEMBLY INSTRUCTIONS

 
With the **Roll and Repair Garage**, safety comes first. To ensure your child's safety, adult assembly is required. For your child's safety, do not let your child play with the toy until it is fully assembled.

Assemble and attach the track components following the steps as below:


1. Insert ramp Y into ramp Z as shown below. Make sure you hear a click sound to confirm they are firmly connected.



2. Insert L into M as shown below. Make sure you hear a click sound to confirm they are firmly connected.

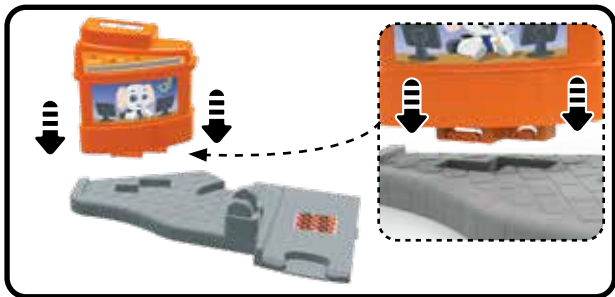

 
3. Connect ramp C and D (Insert ramp C into D as shown below). Make sure you hear a click sound to confirm they are firmly connected.

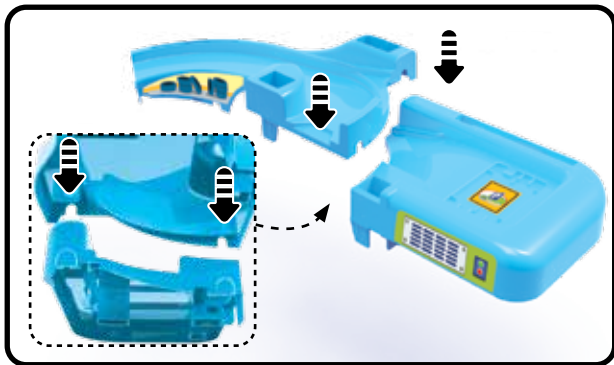

4. Insert ramp Z into L, connect them, as shown below. Make sure you hear a click sound to confirm they are firmly connected.



 
5. Insert E into ramp Y and ramp Z, as shown below. Make sure you hear a click sound to confirm they are firmly connected.

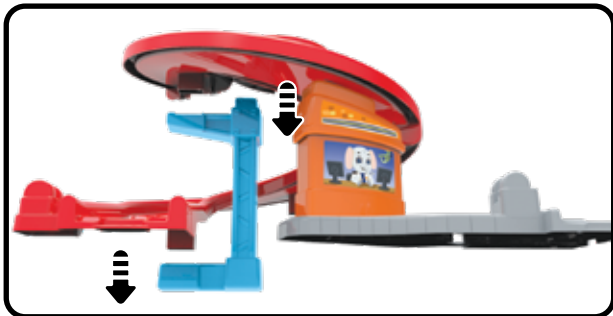


6. Insert F into ramp Y, as shown below. Make sure you hear a click sound to confirm they are firmly connected.



 
7. Connect ramp C and ramp Z (insert ramp C into ramp Z) and also insert ramp C into F, as shown below. Make sure you hear a click sound to confirm they are firmly connected.

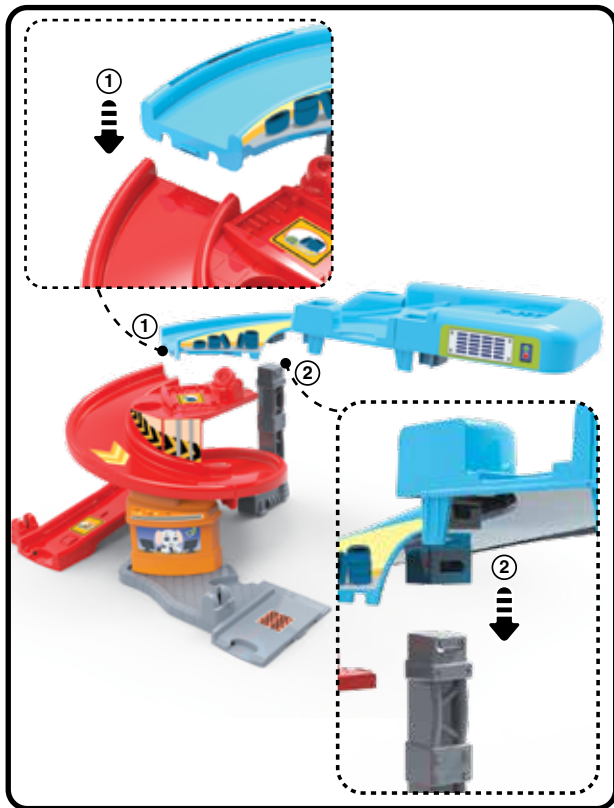

 
8. Insert N into M, and insert ramp C in to N, as shown below. Make sure you hear a click sound to confirm they are firmly connected.

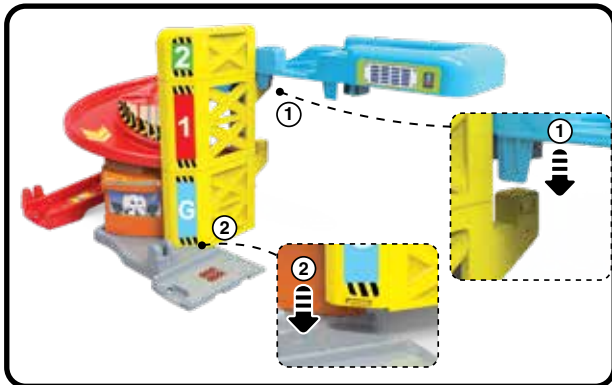

 9. Insert one H into ramp C and one into D, as shown below. Make sure you hear a click sound to confirm they are firmly connected.

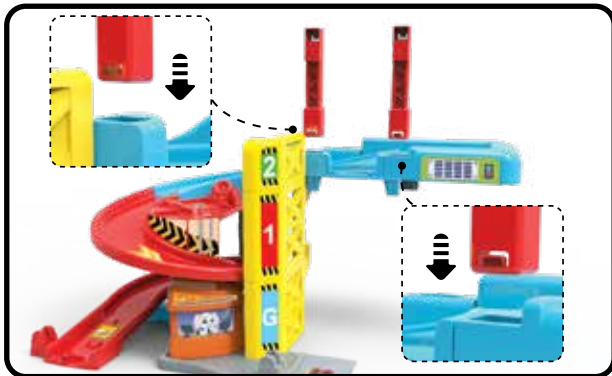

 
10. Insert I into ramp C and insert J into D, as shown below. Make sure you hear a click sound to confirm they are firmly connected.

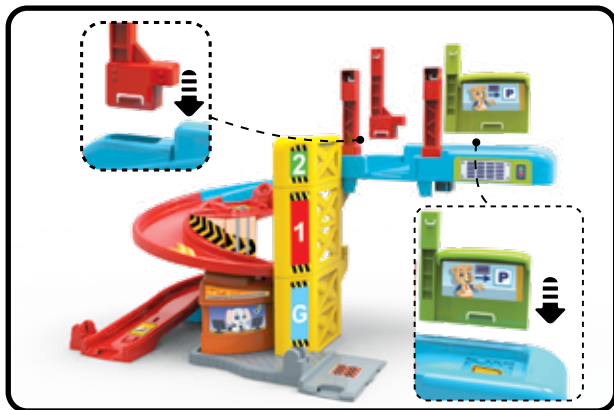

11. Insert W into X, as shown below. Make sure you hear a click sound to confirm they are firmly connected.



 12. Connect U and X (Insert U into X) and insert Q into W, as shown below. Make sure you hear a click sound to confirm they are firmly connected.

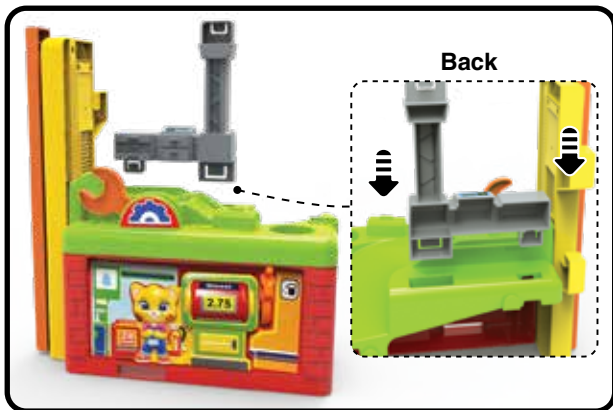


13. Insert D into U and Q, as shown below. Make sure you hear a click sound to confirm they are firmly connected.




14. Insert O into N, U and W, as shown below. Make sure you hear a click sound to confirm they are firmly connected. Please also note there are two grooves for W.



 Back

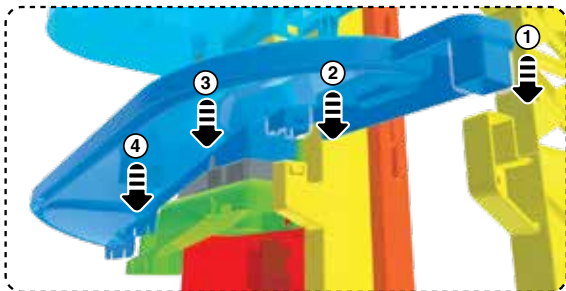

 15. Insert G into O and D, as shown below. Make sure you hear a click sound to confirm they are firmly connected.

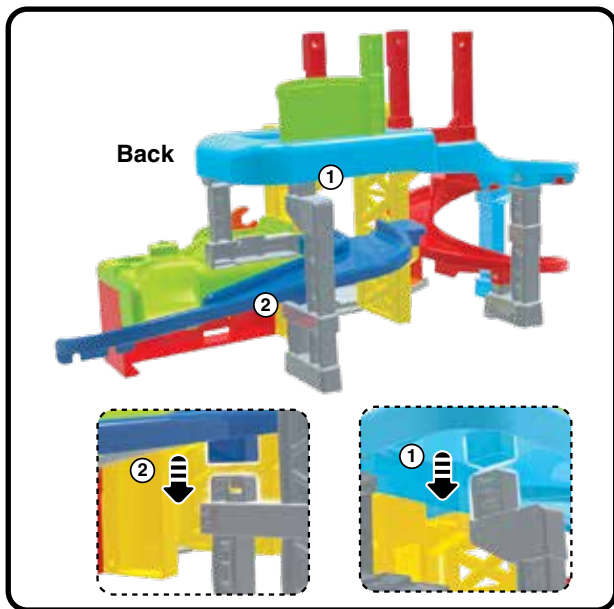


16. Connect V and O (Insert O into V, as shown below). Make sure you hear a click sound to confirm they are firmly connected.



17. Connect P with V, X and M, as shown below. Make sure you hear a click sound to confirm they are firmly connected.



 
18. Insert S into the back of R, and then insert R into V and W, as shown below. Make sure you hear a click sound to confirm they are firmly connected.

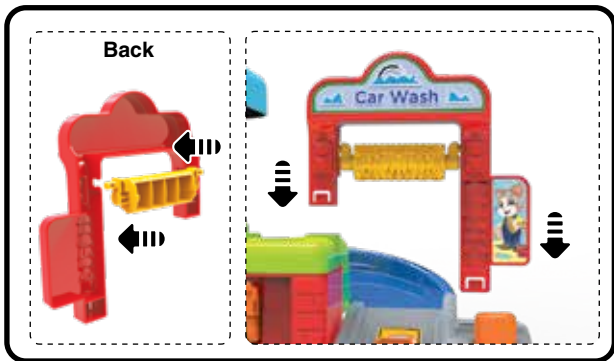


19. Insert K into the two Hs, I and J, as shown below. Make sure you hear a click sound to confirm they are firmly connected.



 
20. Press the button on T and then insert it into U, as shown below. Make sure you hear a click sound to confirm they are firmly connected.

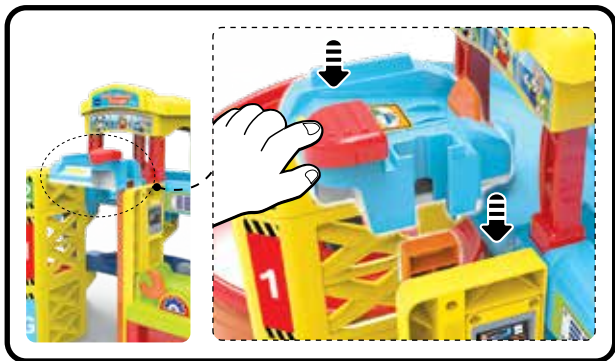

 21. Insert the two gates in front of ramp Y and M, as shown below. Make sure you hear a click sound to confirm they are firmly connected.

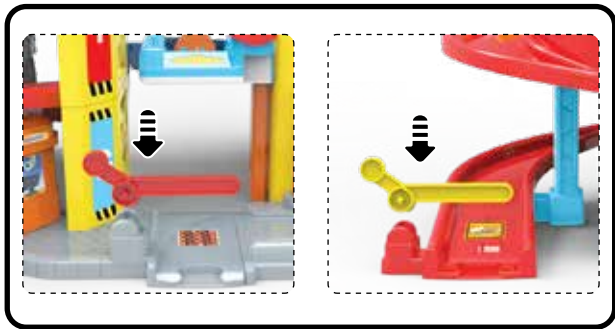

 22. Insert Barrier A (the letter A can be found on the back) into ramp C and insert Barrier B (the letter B can be found on the back) into O, as shown below. Make sure you hear a click sound to confirm they are firmly connected.

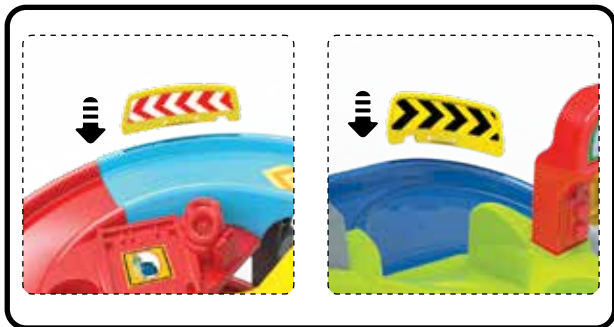

23. Insert Bear into ramp Z and insert Tiger into W, as shown below. Make sure you hear a click sound to confirm they are firmly connected.



 
Once you've completed the above steps, you are ready to play!



PRODUCT FEATURES

1. On/Off Switch

To turn the unit **On**, slide the **On/Off Switch** to the **On** () position. To turn the unit **Off**, slide the **On/Off Switch** to the **Off** () position.

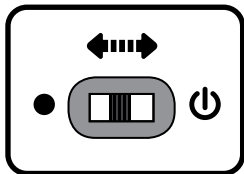


2. Automatic Shut-Off

To preserve battery life, **Toot-Toot Drivers® Dan Dog Roadster** will automatically power down after approximately 60 seconds without input. The unit can be turned on again by pressing the character button or triggering a **SmartPoint™** location.


ACTIVITIES

Dan Dog Roadster

 1. Slide the **On/Off Switch** to turn **Dan Dog Roadster On**. You will hear a song, phrases, and a sound. Lights will flash with the sounds.

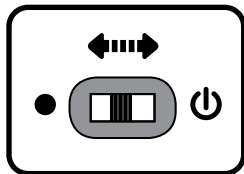

 2. Press the Character Button to hear fun sounds, songs, phrases and melodies. Lights will flash with the sounds.

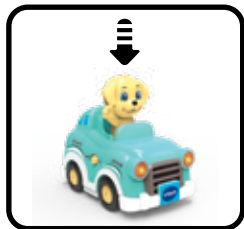

3. For added fun, **Dan Dog Roadster** interacts with the Roll and Repair Garage. Simply put Dan Dog on one of the play set's seven **SmartPoint™** locations to hear fun sounds, music, phrases and see the light flash. Dan Dog also interacts with other Toot-Toot Drivers® play sets (each play set sold separately).



Roll and Repair Garage

1. Place Dan Dog or any **SmartPoint™** vehicle (each sold separately) on any of the Seven **SmartPoint™** locations to trigger fun sounds, songs or phrases.



2. Put Dan Dog on the car deck, turn the Spinner to have fun.



3. Place Dan Dog on the lift, and then press the button to raise the lift, then release and watch the car race to the bottom.



4. Place Dan Dog on the Car wash, and then push the button to release the car.



MELODY LIST

1. Yankee Doodle
2. Ants Go Marching
3. A-Tisket A-Tasket
4. Bicycle Built for Two
5. Bingo
6. Flying Trapeze

SONGS

Song 1

Hey, are you ready to go?
With the top down and the music loud,
Jump into my cool car, let's drive along.

Song 2

Top down, driving around, taking in the view!

Song 3

Toot! Toot! Drivers!
I'm a Toot! Toot! Drivers Convertible,
crusing around in the sun,(Toot! Toot!)
It's time for a ride,
Let's go go and see.(Toot! Toot!)

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit Off.
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit On. The unit should now be ready to play with again.
5. If the unit is not working properly, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department, and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

**VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES**

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

