

Parent's Guide

Pull & Play Elephant



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...



Interactive toys to develop their imagination and encourage language development

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

vtech Bay

Toys that will stimulate their interest in different textures, sounds and colours

lam...

- ...responding to colours, sounds and textures
- ...understanding cause and effect
- ...learning to touch, reach, grasp, sit-up, crawl and toddle

l want...

- ...to get ready for school by starting to learn the alphabet and counting
- ...my learning to be as fun, easy and exciting as can be
- ...to show my creativity with drawing and music so my whole brain develops

I need...

- ...challenging activities that can keep pace with my growing mind
- ...intelligent technology that adapts to my level of learning
- ...National Curriculum based content to support what I'm learning at school






To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the VTech® Pull & Play Elephant. Turn the light up spinner and the elephant will introduce animals through fun phrases and sounds, or press the light up buttons to learn about colours, shapes and numbers. Then, pull the elephant to hear music and watch his ears flap!

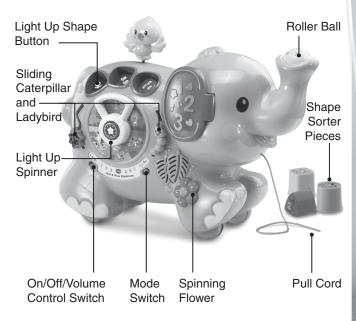

INCLUDED IN THIS PACKAGE

- One Pull & Play Elephant
- · Three shape sorter pieces
- · One parent's guide

WARNING: All packing materials, such as tape, plastic

sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this parent's guide as it contains

important information.

Unlock the packaging locks:




- ① Rotate the packaging lock anticlockwise 90 degrees.
- 2 Pull out and discard the packaging lock.

GETTING STARTED

BATTERY INSTALLATION

- 1. Make sure the unit is turned OFF.
- Locate the battery cover on the bottom of the unit. Use a coin or a screwdriver to loosen the screw.
- Install 3 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
- 4. Replace the battery cover and tighten the screw to secure.

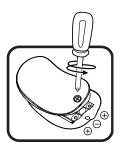

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metalhydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbonzinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- · Do not use damaged batteries.
- Insert batteries with the correct polarity.
- · Do not short-circuit the battery terminals.
- · Remove exhausted batteries from the toy.
- · Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

PRODUCT FEATURES

1. On/Off/Volume Control Switch

To turn the unit ON, slide the On/Off/Volume Control Switch to the Low Volume (())) or High Volume (())) position. To turn the unit OFF, slide the On/Off/Volume Control Switch to the OFF () position.



2. Mode Switch

Slide the **Mode Switch** to choose either Explore Mode (P) or Music Mode (P.) You will hear a song, a phrase and a sound.



3. Automatic Shut Off

To preserve battery life, the **Pull & Play Elephant** will automatically power down after approximately one minute without input. The unit can be turned on again by pressing any button or twisting the light up spinner.

NOTE: If the unit powers down while playing, we suggest changing the batteries.

ACTIVITIES

1. Light Up Spinner

In Explore Mode, turn the **Light Up Spinner** to an animal to learn animal names, sounds and fun characteristics, and to be asked simple questions. In Music Mode, turn the light up spinner to hear piano sounds, or stop on an animal to hear playful animal sounds, phrases and short tunes. Turn the dial continuously past all six of the animals to hear a melody. The lights will flash with the sounds.



2. Light Up Shape Buttons

Press the **Light Up Shape Buttons** or insert the blocks in the shape sorter slots to learn numbers, colours, shapes and insect names in Explore Mode. In Music Mode you will hear melodies, phrases and short tunes. When a melody is playing, turn the light up spinner to hear a fun sound play over the melody.



3. Motion Sensor

Push or pull the elephant to see the ears flap and hear fun sounds, a song or a phrase. The lights will flash with the sounds.



SING-ALONG SONG LYRICS

SONG 1

I'm an elephant, big and strong, I have a trunk that's very long.

SONG 2

Hello friend, come and play,
We can sing and dance all day,
With a knick-knack paddy-wack, get ready to groove,
Music makes me want to move!

SONG 3

I am walking through the jungle, the jungle, the jungle. I am walking through the jungle, there's lots for me to see!

MELODY LIST

- 1. The Wheels on the Bus
- 2. Alouette
- London Bridge
- 4. Clementine
- 5. Here We Go Round the Mulberry Bush
- 6. A-Tisket, A-Tasket
- 7. Down By the Riverside
- 8. Boys and Girls Come Out to Play
- 9. Froggy Went A Courtin'
- 10. Farmer in the Dell
- 11. Glow Worm
- 12. Ring Around the Rosy
- 13. Good Morning Merry Sunshine
- 14. Yankee Doodle
- 15. Skip to My Lou

CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Remove the batteries when the unit will not be in use for an extended period of time.
- Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

- 1. Please turn the unit OFF.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit ON. The unit should now be ready to play again.
- 5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 01235 546810 (from UK) or +44 1235 546 810 (outside UK), and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing VTech® products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on at 01235 546810 (from UK) or +44 1235 546 810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.

CLASS 1 LED PRODUCT



PRODUCT REGISTRATION

Visit www.vtech.co.uk/clubvtech/login to register your VTech product

By joining the VTech Club you can also enter competitions, find out about news and events, seek expert advice for parents and let your kids play fun learning games and activities.



PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

- The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
- The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
- 3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
- 4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
- 5. This warranty is personal to the original purchaser and is not transferable.
- 6. Breakages to the LCD screen are not covered by the warranty.
- 7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
- Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor). Please include details of the fault together with your name and address.
- To keep an online record of your warranty, please register your product online at www. vtech.co.uk/warranty

Vtech Electronics EU PLC, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, West Hallam, DE7 6HE

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.



Visit our website for more information about our products, downloads, resources and more.

www.vtech.co.uk

