



User's Manual



Busy Sounds Discovery Home



© 2015 VTech
Printed in China
91-002974-004 UK

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

Pre-School

Interactive toys to develop their imagination and encourage language development

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

 
I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months

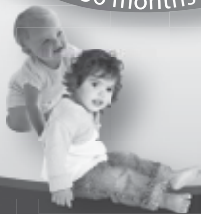

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

 
Thank you for purchasing the **VTech® Toot-Toot Friends™ Busy Sounds Discovery Home!**

Welcome to the **Toot-Toot Friends™ Busy Sounds Discovery Home** by **VTech®**. Friends and the home come to life with 7 **MagicPoint** locations as you explore each room in this three-story interactive house. Whether you're inside the house or outside playing, there's always something new to discover!




INCLUDED IN THIS PACKAGE

- One **VTech® Toot-Toot Friends™** character
- One 1st floor base with 3 **MagicPoint** locations
- One 2nd floor piece with 2 **MagicPoint** locations
- One 3rd floor piece with 1 **MagicPoint** location

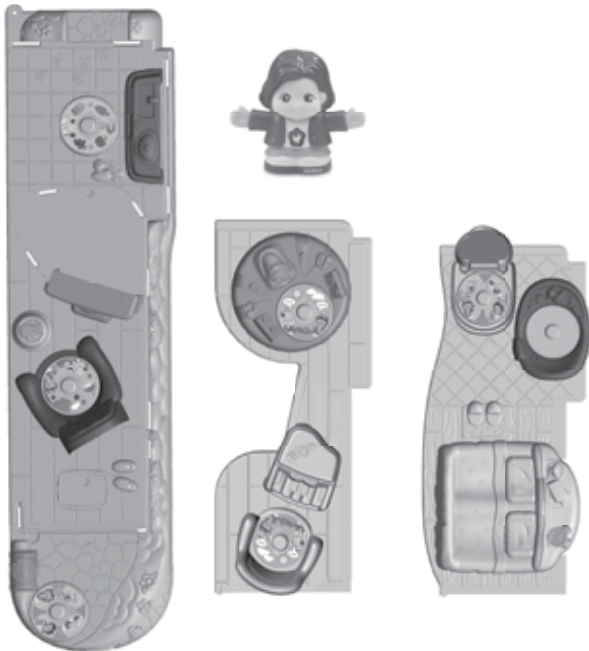


INCLUDED IN THIS PACKAGE

 
- One left wall
- One centre wall
- One tall, right wall with **MagicPoint** location
- One short, right wall with entrance

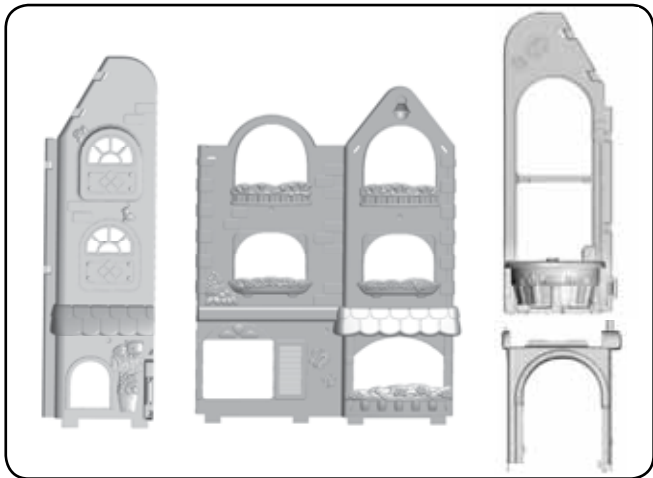

 
- One door
- One staircase
- One handle
- One rooftop

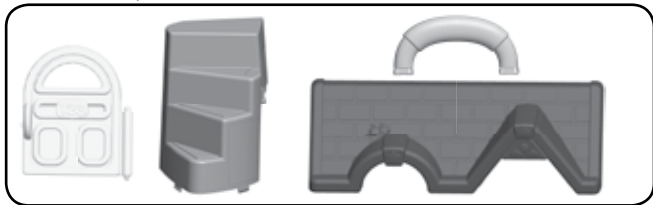

 - One garden base with swing
- One slide
- One long screw

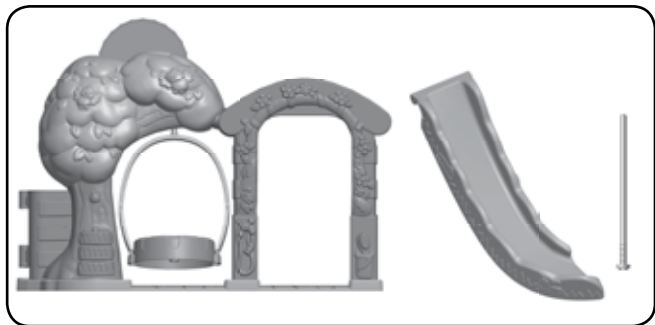

 
- One long walkway track
- One straight walkway track
- One short walkway track
- One 90-degree walkway track, male
- One barbecue grill

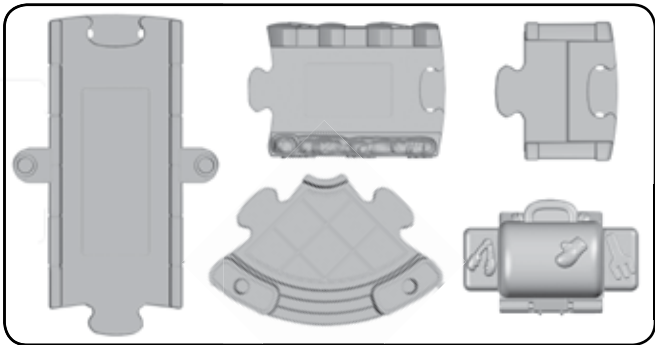

- One dog accessory piece



 
- One label sheet

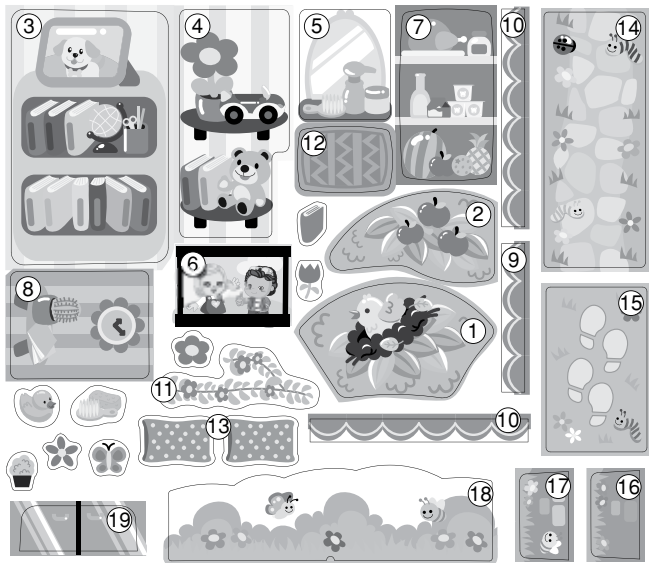

- One user's manual

Unlock the packaging lock:

 There is one packaging lock located on the character.

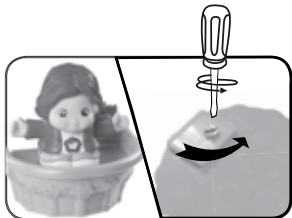

- ① Use a screwdriver to loosen the screw.
- ② Pull out the screw with the packaging lock.

WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

 
 
NOTE:

Please keep user's manual as it contains important information.

GETTING STARTED

BATTERY INSTALLATION


1. Make sure the unit is **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screws.
3. Install 2 new AAA size (LR03/AM-4) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screws to secure.

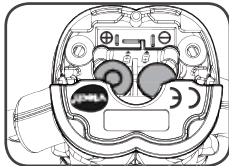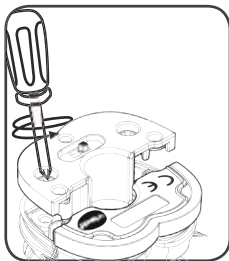

ACTIVATE NORMAL PLAY MODE

This product is in a try-me mode in the packaging. To activate normal play mode, please complete the following steps:

 1. Slide the **ON/OFF SWITCH** to the **OFF (●)** position.
2. Press and hold the **LIGHT-UP BUTTON** for 2 seconds.
3. Slide the **ON/OFF SWITCH** to the **ON (⏻)** position to activate normal play mode.

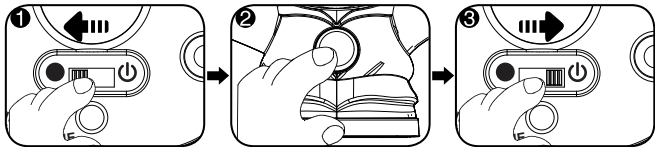

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

ASSEMBLY INSTRUCTIONS

 
With the **VTech® Toot-Toot Friends™ Busy Sounds Discovery Home**, safety comes first. To ensure your child's safety, adult assembly is required. You will need a cross-head screwdriver to assemble the playset (not included).

1. Locate the 1st floor base. Insert the staircase first, then insert the centre wall. Connect the tall right wall with the lift to the short right wall with the entrance. Then insert this assembled right wall and the left wall into the base as shown in the pictures. Then firmly push the left and right walls into the centre wall's tracks until they click into place.


a.



b.

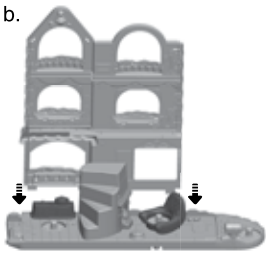


c.

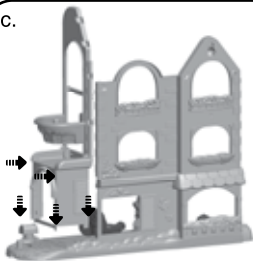 



d.



 
- Now attach the 2nd and 3rd floor pieces to the centre, left and right walls as shown in the pictures. You will hear a click sound when the pieces are secure.

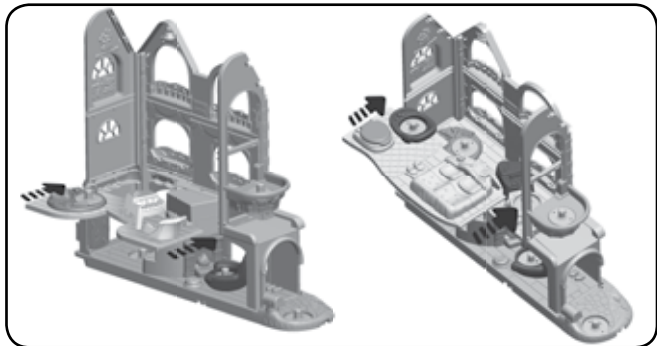

  
- Attach the handle to the top of the rooftop. Then attach the rooftop to the centre, left and right walls as shown in the picture.

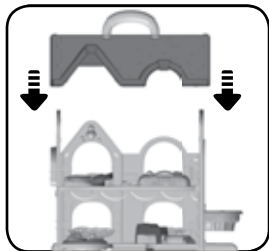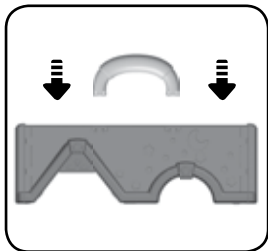



4. Attach the door to the right wall.

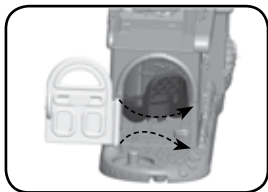 


5. Attach the slide to the garden base.

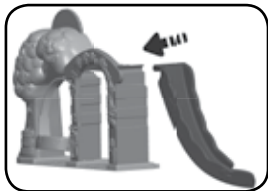 

  6. Connect the garden base to the assembled house as shown in the picture. Finally, insert the long screw into the hole where they join and use a screwdriver to tighten the screw.

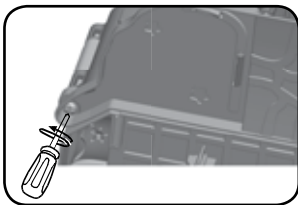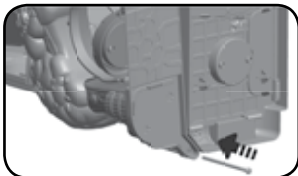



 
7. After the above steps, connect the house and garden to the included walkway track pieces. You can configure them into different arrangements.

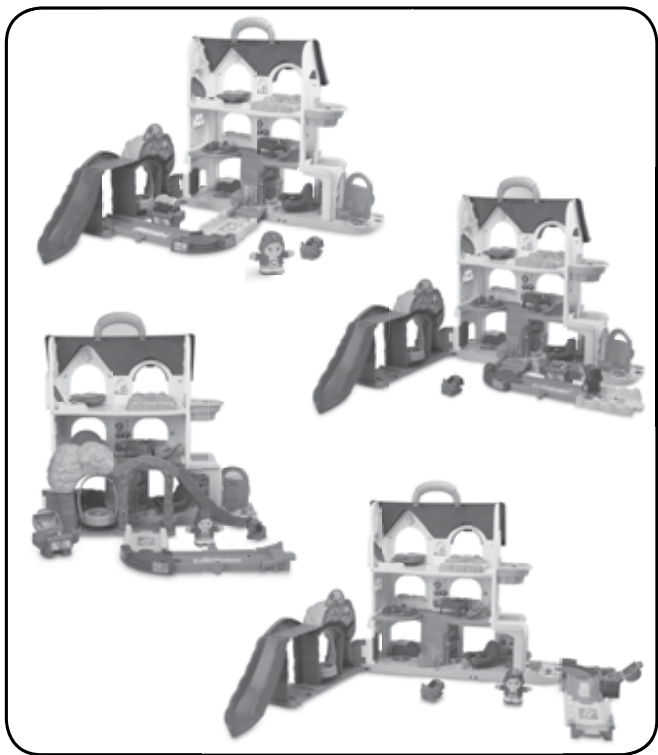

LABEL APPLICATION

   Please stick the labels to the playset securely as indicated below. Additional labels have been added so you can customise your house!

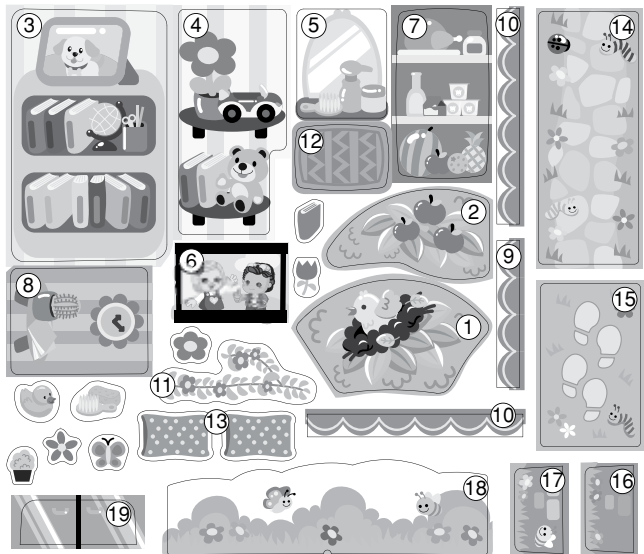

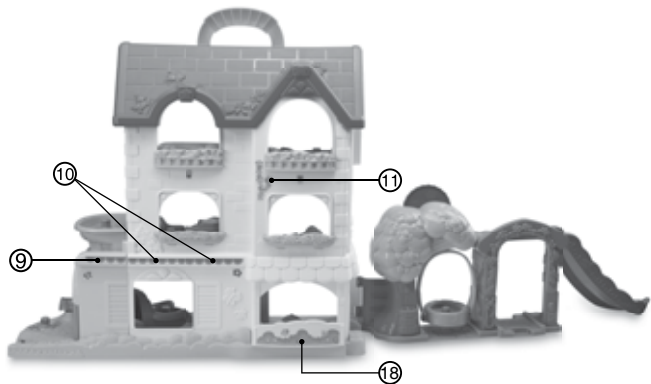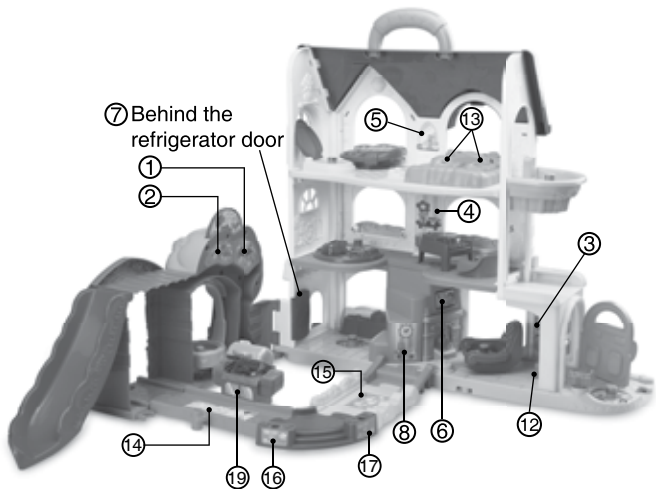


PRODUCT FEATURES

1. ON/OFF SWITCH

The **ON/OFF SWITCH** is located on the bottom of the character.

 To turn the unit on, slide the **ON/OFF SWITCH** to the **ON** (⏻) position. To turn the unit off, slide the **ON/OFF SWITCH** to the **OFF** (●) position.

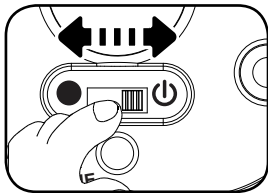


2. AUTOMATIC SHUT-OFF


To preserve battery life, the **VTech® Toot-Toot Friends™** character will automatically power down after several minutes of no input. The unit can only be turned on again by pressing the **LIGHT-UP BUTTON** or placing it on a **MagicPoint** location.

ACTIVITIES – CHARACTER

 1. Slide the **ON/OFF SWITCH** to turn the unit **ON**. Then press the **LIGHT-UP BUTTON** to hear voices, songs, melodies and fun sounds.

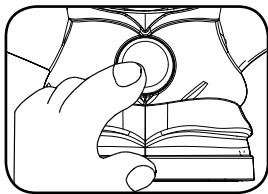


 2. Place the character on one of the playset's seven **MagicPoint** locations to hear phrases, fun sounds, short tunes, and sing-along songs. Some of the **MagicPoint** locations can even trigger motion or turn on the playset's lights. The character can also interact with other **VTech® Toot-Toot Friends™** playsets (each sold separately).

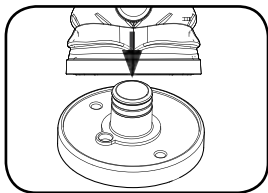

ACTIVITIES - Busy Sounds Discovery Home

 1. Place the character on the **MagicPoint** located near the **FRONT DOOR** to turn on the front door's light and to hear fun responses.

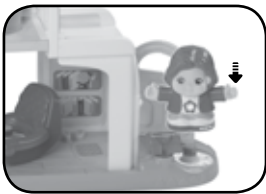

2. Place the character on the **KITCHEN MagicPoint** location to pretend they are a chef.



3. Place the character on the **MagicPoint** located on the **CHAIR** to turn on the fireplace and to let the character rest as they watch the TV!



4. There are two **MagicPoint** locations in the **PLAYROOM**:
 - a. Place the character on the **MagicPoint** located on the **PLAYROOM's** rug to turn on the room's light and to play. Manually rotate the rug to see the character dance!



 
- b. Place the character on the **PIANO's MagicPoint** to hear her play the piano.




MagicChat

If you have an additional **Toot-Toot Friends™ MagicPoint** character, place one character on each of the **PLAYROOM's** two **MagicPoint** locations to activate the **MagicChat** feature. You can hear the characters talk and sing together. (Additional character not included. Each sold separately.)

5. Put the character on the **MOTORISED LIFT MagicPoint** to see it move up and down on its own.

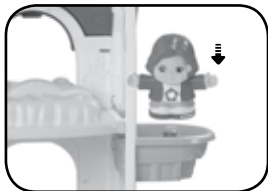

IMPORTANT NOTE: For your child's safety, do not play with the moving lift near your clothing, body or hair. If something gets caught in the lift's track while the motor is on, remove the character from the device to turn off the motor. The lift can be manually moved up or down to help dislodge anything that gets stuck. Do not insert your hand or other body part into the house's windows whilst the lift is in motion.

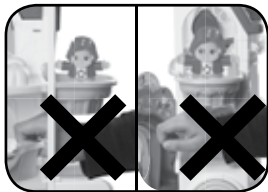 

6. Place the character on the **MagicPoint** located on the **TOILET** to hear responses, or place it on the **BATH** for pretend-play fun!



 
Motor Skills Development - Busy Sounds Discovery Home

There are lots of fun things in the **Busy Sounds Discovery Home** that you can explore that also help develop fine motor skills.

1. Open and close the **FRONT DOOR** to let the character inside.



2. Place the character on the **SWING** and push it to help her swing up high!

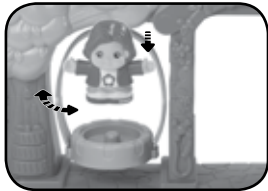

3. Spin the tree's **DISC** to see who lives in the treetop.



4. Open and close the **BARBECUE GRILL** lid to cook the food.



CARE & MAINTENANCE

1. Keep the unit and its metal parts clean by wiping them with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions while playing with a **MagicPoint** accessory, please remove the character from the accessory and place the character back onto the **MagicPoint**.

If the unit still does not function, or if for some reason the unit stops working or malfunctions on its own, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 01235 546810 (from UK) and +44 1235 546810 (outside UK), and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.

**CLASS 1
LED PRODUCT**



PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

