 



vtech[®]

User's Manual

Number Fun Turtle

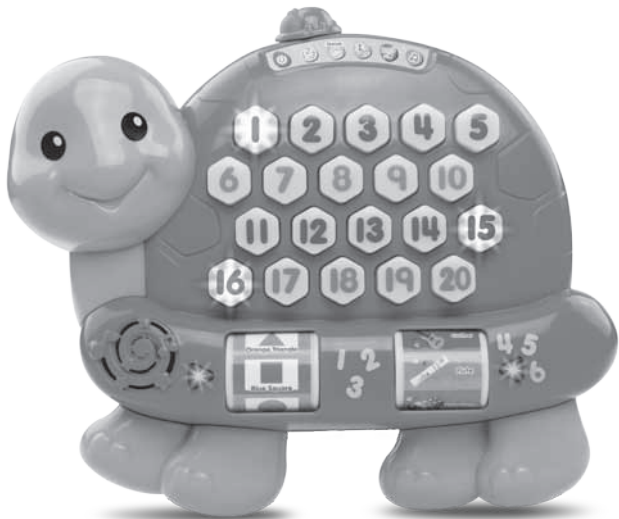

© 2016 VTech
Printed in China
91-003153-001 

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech *Baby*

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years

 


To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **Number Fun Turtle**.

The **Number Fun Turtle** introduces numbers, colours, shapes and instruments in both English and Spanish using twenty number buttons and two rollers! The turtle also teaches early maths skills and plays fun sing-along songs and melodies.

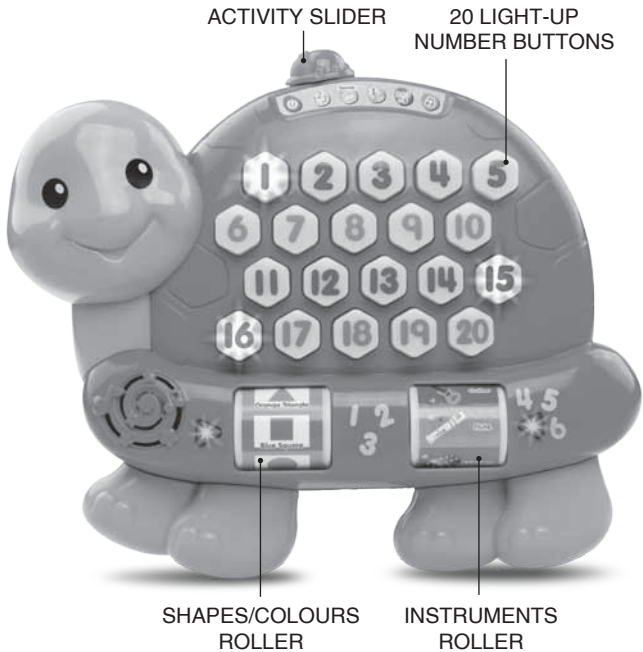

INCLUDED IN THIS PACKAGE

- One **Number Fun Turtle**
- User's manual

 
WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please keep user's manual as it contains important information.

Unlock the packaging locks:

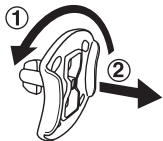


- ① Rotate the packing lock counter-clockwise 90 degrees.
- ② Pull out the packing lock.

GETTING STARTED

BATTERY INSTALLATION

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover at the bottom of the unit.
3. Use a screwdriver to loosen the screw and open the battery cover.
4. Install 2 new "AA" (AM-3/LR6) batteries into the battery box as illustrated. (The use of new alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover and tighten the screw to secure.

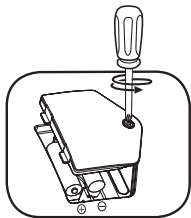

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.


For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

PRODUCT FEATURES

1. ACTIVITY SLIDER

Slide the **ACTIVITY SLIDER** to select an activity to play. Or slide the **ACTIVITY SLIDER** to **OFF** () to turn off the unit.



2. 20 LIGHT-UP NUMBER BUTTONS

Press the **LIGHT-UP NUMBER BUTTONS** to learn numbers, counting, Spanish, addition or to select an answer in related activities.



3. SHAPES/COLOURS ROLLER

Roll the **SHAPES/COLOURS ROLLER** to learn 7 shapes and 7 colours. In the Spanish activity, the **ROLLER** will introduce shapes and colours in Spanish. In the music activity, it will add fun sounds into the music.



 
4. INSTRUMENT ROLLER

Roll the **INSTRUMENT ROLLER** to learn the instrument names, facts and sounds. In the Spanish activity, the **ROLLER** will introduce instruments in Spanish. In the music activity, it will add instrument sounds into the melody.



5. VOLUME CONTROL SWITCH

The **VOLUME CONTROL SWITCH** is located on the bottom of the product. Slide the switch to select between high and low volume.

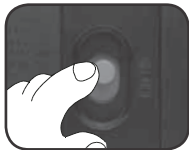


6. AUTOMATIC SHUT-OFF


To preserve battery life, the **Number Fun Turtle** will automatically power down after several minutes of no input. The unit can be turned on again by sliding the **ACTIVITY SLIDER**.

ACTIVITIES:


The **Number Fun Turtle** offers 5 activities to play.

Activity 1: Numbers and Counting

 Move the **ACTIVITY SLIDER** to the second position () to enter this activity. Press any of the **NUMBER BUTTONS** to learn about numbers and start counting. The buttons will then light-up one by one to teach counting.

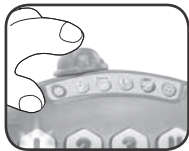


Activity 2: Counting in Spanish

Move the **ACTIVITY SLIDER** to the third position () to enter this activity. Press any of the **NUMBER BUTTONS** to learn how to say the number in Spanish. The buttons will then light up one by one to teach counting in Spanish.




Activity 3: Follow the Lights

Move the **ACTIVITY SLIDER** to the fourth position () to enter this activity. Watch as the buttons light up one by one, and then repeat the same sequence. When you have answered 5 questions correctly, you will progress to the next level. There are a total of three levels to play.




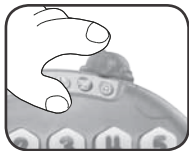 
Activity 4: Add it Up

Move the **ACTIVITY SLIDER** to the fifth position () to enter this activity. The unit will first select a number between one and ten. Then, you will be asked to choose another number between one and ten. After you have selected the second number, the program will add up both numbers and teach simple addition by lighting the buttons one by one.



Activity 5: Music Fun

Move the **ACTIVITY SLIDER** to the sixth position () to enter this activity. Press a number between one and ten to play number related songs or press a number between eleven and twenty to play a melody. Press a **NUMBER BUTTON** at any time to change the song or melody.



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture.

TROUBLESHOOTING

If for some reason the program/activity stops working, then please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **ON**. The unit will now be ready to play again.
5. If the unit still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

TECHNICAL SUPPORT

If you have a problem that cannot be solved by using this manual, we encourage you to visit us online or contact our Consumer Services Department with any problems and/or suggestions that you might have. A support representative will be happy to assist you.

Before requesting support, please be ready to provide or include the information below:

- The name of your product or model number (the model number is typically located on the back or bottom of your product).
- The actual problem you are experiencing.
- The actions you took right before the problem started.

Internet: www.vtechuk.com

Phone: 01235 546810 (from UK), or +44 1235 546810 (outside UK)

IMPORTANT NOTE:

Creating and developing **VTech**[®] Preschool Learning products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 01235 546810 (from UK) and +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.

CLASS 1
LED PRODUCT



PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor). Please include details of the fault together with your name and address.
9. To keep an online record of your warranty, please register your product online at www.vtech.co.uk/warranty

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

Join the VTech club online at www.vtech.co.uk

