

vtech®

Instruction Manual

**MARBLE
RUSH®**
ADVENTURES

PIRATE SHIP



INTRODUCTION

Thank you for purchasing the **Marble Rush® Adventures Pirate Ship** for non-stop high seas action! Build thrilling courses, send the marbles into motion and set sail for swashbuckling action complete with cannonball challenges and pirate-themed sounds and lights. Please refer to the colour manual for detailed assembly steps.

INCLUDED IN THIS PACKAGE

- **Marble Rush® Adventures Pirate Ship**
- 162 Building Pieces (148 plastic pieces + 2 fabric pieces + 1 mat + 11 cardboard pieces)
- 10 Marbles
- Sticker Sheet
- Colour Manual
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

WARNING

Do not aim at eyes or face.

WARNING

Do not discharge any object other than the projectiles provided with this toy.

Warning! Not suitable for children under 36 months. Small parts and small balls. Choking hazards.

 
INSTRUCTIONS

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

Module Battery Removal and Installation

1. Make sure the Module is turned Off.
2. Locate the battery cover on the back of the Module. Use a screwdriver to loosen the screw. Then, remove the cover.
3. If used batteries are present, remove these batteries from the Module by pulling up on one end of each battery.
4. Install 2 new AAA (LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

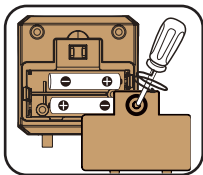

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

LABEL APPLICATION

 
 
 
 
Please securely stick the labels as indicated below:



Apply these stickers to both sides



Apply these stickers to one side

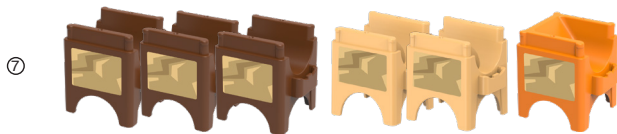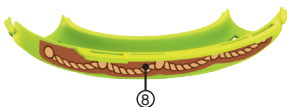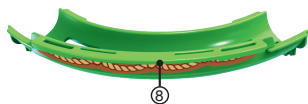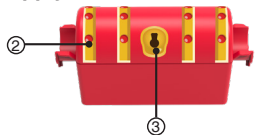

Placement of bricks with labels:

Front





PRODUCT FEATURES

1. **OFF/Sound Switch**    
Slide the switch all the way to the right  to turn on both music and sound effects (SFX). The middle position  plays SFX with no background music for quieter play. Slide the switch all the way to the left  to turn off the unit.



 
2. Music Button

Press the Music Button to cycle through the background music options. The light will flash when the button is pressed.



3. Cannon Ball Trigger

When a marble goes into the top of the Module, the light will flash and sound effects will play.

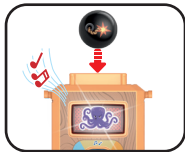

4. Automatic Shut-Off

To preserve battery life, the **Marble Rush® Adventures Pirate Ship** will automatically power-down after 90 seconds without input. The unit can be turned on again by sliding the **OFF/Sound Switch** to the middle or right position. If the unit powers off whilst playing, we suggest installing brand new batteries.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the battery if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit Off.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back On. The unit should now be ready to use again.
5. If the unit still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department, and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY
LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

