 


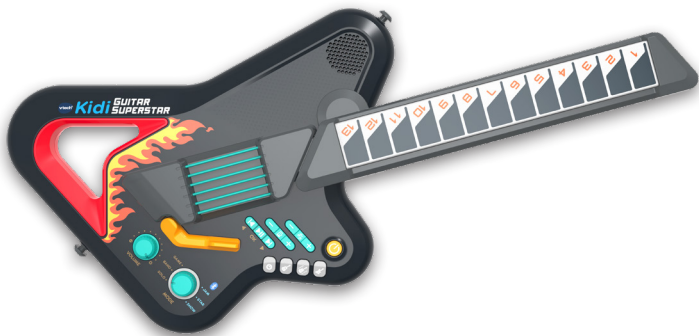

Instruction Manual

Kidi **GUITAR SUPERSTAR**



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

 
4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTech® Kidi® Guitar Superstar!** Strike a chord and own the stage with the **Kidi® Guitar Superstar!** Play in 6 different modes, including an exciting rhythm game. Connect wirelessly to your own music and play along to your favourite songs. Use the whammy bar or tilt the guitar to trigger crowd-pleasing effects. The stage is set for a sold-out show – let's rock!

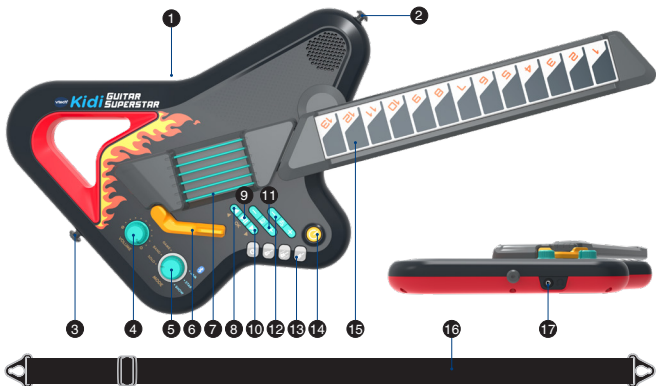

1	Motion Sensor	10	Next Button
2	Top Guitar Pin	11	Tempo Buttons
3	Bottom Guitar Pin	12	Key Select Buttons
4	Volume Dial	13	Guitar Selection Buttons (Electric, Rock, Acoustic, Fun)
5	Mode Dial		
6	Whammy Bar	14	Power Button
7	Strings	15	Fret Buttons
8	Previous Button	16	Guitar Strap
9	Play/Pause/OK Button	17	Audio-out Jack (Headphone Jack)

INCLUDED IN THE PACKAGE

- One **VTech® Kidi® Guitar Superstar**
- One Guitar Strap
- Quick Start Guide

WARNING:

 
All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.

Activate Normal Play Mode

Unlock the Packaging Locks and Enter Normal Play Mode:

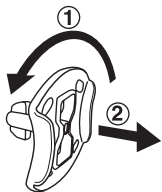

- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks; the Guitar will exit **Try-Me Mode**.

 
 
GETTING STARTED

FOLDABLE GUITAR

Adult assembly is required. For your child's safety, do not let them play with this toy until it is fully assembled.



If the **Fretboard** is folded, unfold it before playing.

Use a screwdriver to tighten the screw (located on the back of the Guitar) to secure the **Fretboard** in its unfolded position.

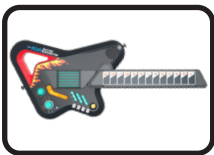
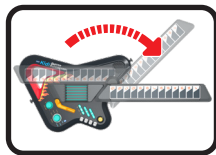


GUITAR STRAP INSTALLATION

  A. Install one end of the strap to the guitar pin on the top:

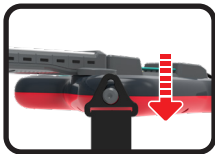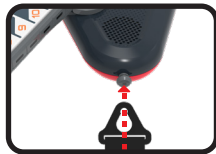

  B. Then install the other end of the strap to the pin at the bottom:

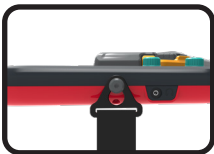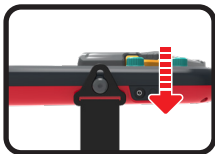

C. Make sure each end of the strap is snapped into place and is not loose.

 
WARNING:

Adult assembly required for battery installation.

Keep batteries out of reach of children.

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit and use a screwdriver to loosen the screw, then open the battery cover.
3. If present, remove old batteries by pulling up on one end of each battery.
4. Install 4 new 1.5V AA (LR6) batteries, following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

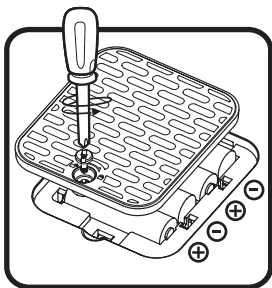

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

 Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES

1. Power Button

Press the **Power Button** to turn the unit **ON**. Press it again to turn the unit **OFF**.



2. Mode Dial

 
Turn the **Mode Dial** to choose from 6 modes: Solo, Band, Game, Jam (with **Bluetooth®** wireless technology), Star (with **Bluetooth®** wireless technology), Show (with **Bluetooth®** wireless technology).



3. Fret Buttons

Solo, Jam and Star modes: Press and hold the **Fret Buttons** while you strum the **Strings** to play different chords.

Band mode: Press the **Fret Buttons** to add or remove instruments to the melody that's playing.

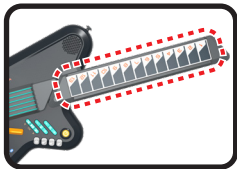

4. Strings

Strum the **Strings** to play music notes. (See the Play Modes section below for how to use the **Strings** in the different modes.)



 
5. Whammy Bar

Move the **Whammy Bar** to hear guitar sound effects. (See the Play Modes section below for how to use the **Whammy Bar** in the different modes.)



6. Motion Sensor


Tilt the guitar neck up to hear excited crowd-cheering effects. (See the Play Modes section below for how to use the **Motion Sensor** in the different modes.)

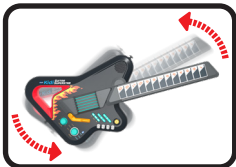

7. Guitar Selection Buttons

Press the **Guitar Selection Buttons** to choose among 4 different guitar styles: Electric (), Rock (), Acoustic () and Fun ().

 The Guitar Selection button will light up when selected.

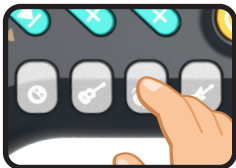

8. Key Select Buttons

Press the **Key Select Buttons** to change the key of the guitar when using the **Fret Buttons** and **Strings** in Solo, Jam and Star modes.



9. Tempo Buttons

Press the **Tempo Buttons** to change the music tempo in Band mode.



10. Previous Button ;
Play/Pause/OK Button ;
Next Button

Use these buttons to select music or Game levels.



11. Volume Dial

Use the **Volume Dial** to adjust the volume.



12. Audio-out Jack (Headphone Jack)

Use a 3.5mm audio cable (not included) to connect the guitar to an external speaker. For silent play, connect the guitar to headphones (not included).



13. Automatic Shut Off

To preserve battery life, the unit will automatically power **OFF** after several minutes without input. The unit can be turned **ON** again by pressing the **Power Button**.

When battery power is low, the lights of **Fret Button 13** and the **Mode Dial** will flash three times in red, and then the guitar will automatically turn off. Please install brand new batteries before powering on the unit again.

PLAY MODES

Solo

Hold the **Fret Buttons** and strum the **Strings**; press the **Whammy Bar** and tilt the guitar neck up to create your own music. Press the **Key Select Buttons** to change the key of the **Fret Buttons** and the **Strings** when you play.

See the Music Sheets section below for guides to play some classic songs.

Band

Build your own band. Press the **Fret Buttons** to add and remove instruments to the song that's playing.

Mix and match from:

Fret Buttons 1 to 3 (blue lights) - three percussion tracks

Fret Buttons 4 to 6 (green lights) - three bass tracks

Fret Buttons 7 to 13 (yellow lights) - seven other instruments/tracks

Strum the **Strings** to play the main melody. Press the **Previous Button** and the **Next Button** to choose different songs. Press the **Tempo Buttons** to adjust the tempo of the music.

There are five melodies each for the Electric, Rock and Acoustic guitar styles. (All 15 melodies can be found in the Fun guitar style.)

Game

Different colour lights (blue, orange, pink) will fall from the top of the **Fret Buttons**. Time the notes as they fall and play the correct control (see below) when the note reaches the white light at the bottom.

Blue lights: Strum the **Strings**.

Orange lights: Move the **Whammy Bar**.

Pink lights: Tilt the guitar neck up.

When you see a row of blue lights, keep strumming the **Strings** until all of the blue lights have passed the white light.

When you see a row of orange lights, move and hold the **Whammy Bar** until all of the orange lights have passed the white light.

The white light at the bottom will change to green when you catch the lights on time.

The game has four levels to choose from: Tutorial, Beginner, Semi-Pro, and Expert. Press the **Left**, **Right**, and **OK Buttons** to choose a level; then press the **Left**, **Right**, and **OK Buttons** to select a song. When selecting a song, you can change the level by pressing and holding the **OK Button** for 2 seconds or pressing any **Tempo Buttons**.

Each of the 3 guitar styles (Acoustic, Electric, Rock) have five melodies. (All 15 melodies can be played in the Fun guitar style.)

Jam (with **Bluetooth®** wireless technology)

Choose music from your connected device to play along. Hold the **Fret Buttons** and strum the **Strings**, press the **Whammy Bar**, or tilt the guitar neck up to jam.

Star (with **Bluetooth®** wireless technology)

Choose music from your connected device to play along. When you strum the **Strings** and press the **Fret Buttons**, the vocals of the streaming music will be lowered in volume so you can hear the guitar notes as you play.

NOTE:

This feature may not work with all songs that are streamed wirelessly.

Show (with **Bluetooth®** wireless technology)

Choose music from your connected device to pretend-play like a rock star. The music will be silent when you don't press the **Fret Buttons**, strum the **Strings** or press the **Whammy Bar**, then come to life when you play them!

Connect to *Bluetooth*® wireless technology (Jam, Star and Show modes)

1. Turn the **Mode Dial** to Jam, Star or Show to connect wirelessly to a nearby device. As it searches for your device, the **Mode Dial** light will flash blue.
2. Go to the *Bluetooth*® settings on your device and select “VTech 5910 Guitar”.
3. When the pairing request appears on your device, select “Pair” to continue. (A passcode is not required to connect the guitar to your wireless device. If you see a passcode displayed in your device’s *Bluetooth*® settings, simply select “Pair” to continue.)
4. On the guitar, press and hold the **OK Button**  for several seconds to confirm.
5. When the connection is successful, the **Mode Dial** light will remain **ON** in blue.
6. To disconnect from your wireless device, turn the **Mode Dial** to Solo, Band or Game.
7. **VTech® Kidi® Guitar Superstar** will automatically search for and connect to the most-recent wireless device it was paired with. You do not need to repeat this process next time when you would like to use the same device.

NOTE:

Press and hold the **Tempo +**  and **Previous Buttons**  for 3 seconds to forget the last device that was paired with **VTech® Kidi® Guitar Superstar**.



MUSIC SHEETS

See the music sheets on the following pages to play some classic songs in **Solo** mode.

To play, press the fret number shown and strum the **Strings** at the same time. For wider notes , let the note play for a longer time.

Twinkle, Twinkle Little Star

Twin - kle, twin - kle, lit - tle star,
      

How I won - der what you are.
      

Up a - bove the world so high,
      

Like a dia - mond in the sky,
      

Twin - kle, twin - kle, lit - tle star,
      

How I won - der what you are.
      

Incy Wincy Spider

The in - cy win - cy spi - der

5

8

8

8

9

10

10

Climbed up the wa - ter spout.

10

9

8

9

10

8

Down came the rain

10

10

11

12

And washed the spi - der out.

12

11

10

11

12

10

Out came the sun

13

13

13

12

And dried up all the rain

12

11

10

11

12

10

And the in - cy win - cy spi - der

5

5

8

8

8

9

10

10

Climbed up the spout a gain.

10

9

8

9

10

8

Bingo

There was a far - mer had a dog,

5 8 8 5 5 6 6 5

and Bin - go was his name - o.

5 8 8 9 9 10 8

B - I - N - G - O

10 10 11 11 11

B - I - N - G - O

9 9 10 10 10

B - I - N - G - O

8 8 9 9 9

And Bin - go was his name - o.

8 7 5 6 7 8 8

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

If there is problem pairing with your device with **Bluetooth®** wireless technology, please follow these steps:

1. On your wireless device, go to the **Bluetooth®** settings. If “VTech 5910 Guitar” is found in the list of connected, paired or saved devices, select “Forget” or “Unpair.”
2. Disable and enable **Bluetooth®** or restart your device.
3. Turn the unit **OFF** and **ON** again and repeat the pairing process.

Bluetooth® Statement

The **Bluetooth®** word mark and logos are registered trademarks owned by the **Bluetooth®** SIG, Inc. and any use of such marks by **VTech®** is under license. Other trademarks and trade names are those of their respective owners.

RF Warning Statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

DECLARATION OF CONFORMITY

Hereby, VTech Electronics Europe BV declares that the radio equipment type 5910 is in compliance with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following internet address:

www.vtech.com/re-directive

Frequency Band: 2402MHz – 2480MHz

Maximum RF power: 2.016 mW (3.045 dBm)

DECLARATION OF CONFORMITY

Hereby, VTech Electronics Europe Plc declares that the radio equipment type 5910 is in compliance with The Radio Equipment Regulations 2017 (2017 No.1206). The full text of the Declaration of Conformity is available at the following internet address:

www.vtech.com/re-directive

Frequency Band: 2402MHz – 2480MHz

Maximum RF power: 2.016 mW (3.045 dBm)



Player	
Maximum output voltage	≤150mV

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

