

vtech®

Parent's Guide

Kidi Concert



91-003527-000 (UK)

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years




INTRODUCTION

Thank you for purchasing the **VTech® Kidi Concert!**

Kidi Concert is a multi-functional *Bluetooth®* party speaker for kids! Create a party atmosphere by using the built-in colour changing disco light, music, FM radio, MP3 player and more! Connect to an external music player through the *Bluetooth®* connection or an audio-in cable. With fun party games to play, there is plenty of learning fun!

PRODUCT FEATURES

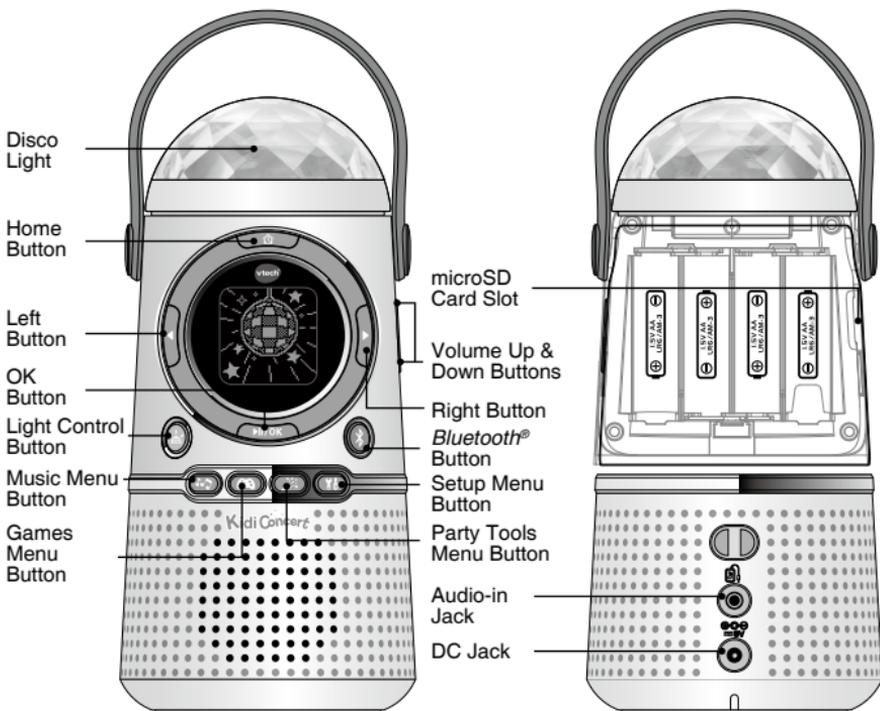

	<p>Home Button</p>	<p>In Normal mode, press this button to go back or hold this button to go to Standby mode.</p> <p>In Standby mode, press this button to wake up the unit to go to Normal mode.</p>
	<p>OK Button</p>	<p>Press this button to confirm your selection or play/pause in music player modes.</p>

	Left Button	Press this button to make a selection.
	Right Button	Press this button to make a selection.
	Music Menu Button	Press this button to go to the Music modes menu.
	Games Menu Button	Press this button to go to the Games menu.
	Party Tools Menu Button	Press this button to go to the Party Tools menu.
	Setup Menu Button	Press this button to go to the Setup menu.
	Volume Up & Down Buttons	Press these buttons to adjust the volume.
	Light Control Button	In Normal mode, press this button to change the light mode or light options. In Standby mode, press this button to wake up the unit to go to Normal mode.
	Bluetooth® Button	In Normal mode, press this button to go to the Bluetooth® Connection mode. In Standby mode, press this button to wake up the unit to go to the Bluetooth® Connection mode.
	Audio-in Jack	Plug in an external music player (not included) by using the supplied audio cable to listen to your own music.
	microSD Card Slot	Insert a microSD card (not included) with your own music on it to listen to your songs through the built-in MP3 player.
	3.5mm DC Jack	Used to plug in a 3.5mm/1.3mm (positive centre) 6V/800mA DC output AC adaptor (sold separately).

INCLUDED IN THIS PACKAGE

- 1 VTech® Kidi Concert
- 1 audio cable
- 1 parent's guide
- 4 AA batteries for demo purposes only.


WARNING: All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this parent's guide as it contains important information.

This product is only to be connected to equipment of Class II, marked on the marking plate with this symbol: 

Unlock the packaging locks:

- ① Turn the packaging lock anticlockwise several times.
- ② Pull out and discard the packaging lock.

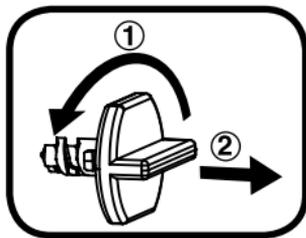


GETTING STARTED

BATTERY INSTALLATION

Kidi Concert uses 4 AA size batteries.

- Make sure the main unit is turned OFF or in Standby mode.
- Locate the battery cover on the back of the main unit.
- Open the battery cover.
- Install 4 new AA batteries as illustrated. (The use of new alkaline batteries is recommended for maximum performance).
- Replace the battery cover.

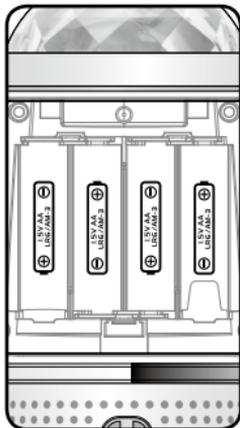

BATTERY NOTICE

- Use new alkaline batteries or fully charged Ni-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

POWER ADAPTOR CONNECTION

- Make sure the unit is OFF and ensure no batteries remain inside the unit.
- Locate the 3.5mm DC Jack on the back of the unit.

- Connect a power adaptor (not included) into the unit's DC Jack.
- Insert the other end of the power adaptor into a plug socket.
- Turn the unit ON.

TRANSFORMER SAFETY NOTICE


- Using a 3.5mm/1.3mm (positive centre) 6V/800mA \mp DC output AC adaptor is recommended.
- This toy shall only be used with a transformer for toys.
- The transformer is not a toy.
- This toy is not intended for use by children under 3 years old.
- Do not connect the toy to more than the recommended number of power supplies.
- Never clean a plugged-in toy with liquid.
- Please regularly examine the transformer, checking for damage to the cord, plug, transformer or other parts. Do not use the transformer if it is damaged.

MEMORY CARD INSTALLATION

Kidi Concert is compatible with microSD/microSDHC memory cards up to 32GB.


- Make sure the main unit is in Standby Mode.
- Locate the memory card slot inside the battery compartment of the main unit.
- Insert the memory card (not included) as illustrated.
- To remove the memory card from the slot, push the card once and it will eject.

Note: To prevent accidental data loss, make sure you have backed up all important data from your memory card before using.

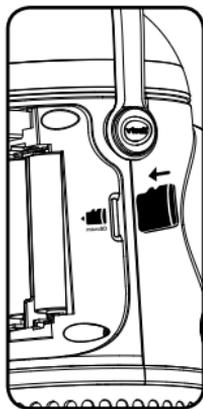


USING THE AUDIO CABLE

- Plug one end of the audio cable to the Audio-in jack of the main unit.
- Plug the other end into your own music device.

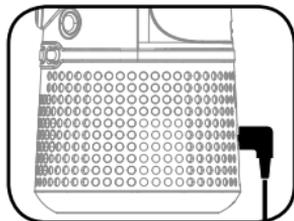


Note: If your own music device is in a case, the audio cable might not be fully connected. We recommend removing any case from your own music device to ensure a secure connection.

Tip: When the audio cable is not in use, you can store it inside the battery door.

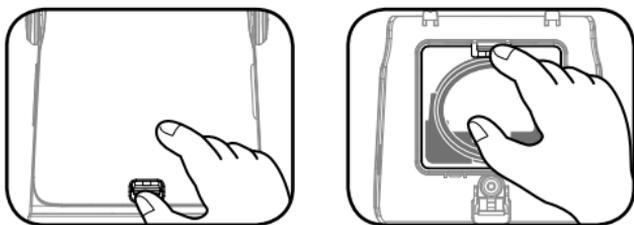

USING THE FM RADIO ANTENNA

To get the best radio reception, please take out The FM Radio antenna located in the cabinet on the bottom of the unit.

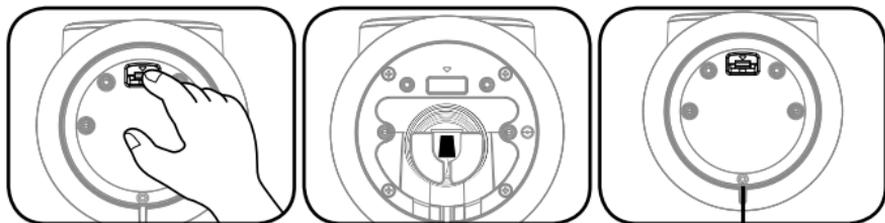

TO BEGIN USING KIDI CONCERT

TRY ME MODE

If you've just taken the **Kidi Concert** out of the packaging for the first time, you need to disable Try Me mode before playing.

To disable Try Me mode, press the HOME button to wake the unit up and then press the Volume Up/Down Button to exit Try Me mode.

POWER UP

Press the HOME button to turn on the unit, you will then be asked to set the clock. Press the LEFT or RIGHT button to adjust the values and press the OK button to go to the next step, or press the HOME button to go back one step. Complete all of the steps to set the clock settings.

STANDBY MODE

To preserve battery life, **Kidi Concert** will automatically enter Standby mode if there is no operation for a short period of time.

The current time will display even in Standby mode. Press the HOME/LIGHT CONTROL/*Bluetooth*[®] button to wake the unit up.

DISCO LIGHT CONTROL

Press the LIGHT CONTROL button to change the Disco Light mode:

Mode 1 - Light OFF (Default)

Mode 2 - Dim Light ON

Mode 3 - Projection Light ON

Mode 4 - Projection Light ON with Spinning

Press the LEFT/RIGHT button to change the light effect.

WARNING: When the Disco Light is ON, do not look directly at the disco light.

NOTE: To preserve battery life and the performance of the LED and Motor units, the Disco Light will automatically turn off after 1 hour of continuous usage. You can manually turn the Disco Light on again if needed.

VOLUME CONTROL

Press the volume buttons to adjust the volume.

BATTERY STATUS

Shortly after the screen shows the **Low Battery** icon , the unit will automatically shut off. New batteries should be installed before further use.

ACTIVITIES

1. CLOCK MODE

In Standby mode, press the HOME/LIGHT CONTROL/*Bluetooth*[®] button to wake the unit up and view the normal clock. Press the LEFT/RIGHT button to change the time display style.

In other modes or functions, you can hold the HOME button to quickly go back to the Standby clock.

Once you have set up an alarm and the alarm tone activates, press any button on the unit to stop the alarm tone. If you do not press any button within 1 minute, the alarm tone will automatically shut off. Please refer to the Setup section for details.

Note:

1. The time will be reset each time the batteries are replaced. When you turn on the main unit, you will be asked to set the time again.
2. Do not remove the batteries when the main unit is in use as it could cause data loss or errors in the program.

2. MUSIC MODES

There are 5 music modes in **Kidi Concert**.

A. Music

There are 5 music tracks for you to dance along to! Create a cool concert atmosphere by turning on the Disco Light!

Press the LEFT/RIGHT button to select the function icon and press the OK button to confirm.

-  Play or pause the music.
-  Play the previous or next track.
-  Option Menu.

Play All – Play all the music in sequence.

Repeat All – Loop all the music in sequence.

Repeat One – Loop the current track.

Shuffle All – Play all the music randomly.

NOTE: The maximum music play time is 2 hours by default and can be adjusted in the Setup Menu.

When music is playing, animations will be shown on screen and the system time will be displayed on the bottom. You can press the LEFT/RIGHT button to return to the last screen.

B. microSD Card MP3 Player

If you have inserted a microSD card (not included) you can play all of the MP3 files on it here.

Kidi Concert only supports MP3 (MPEG-1 Audio Layer 3) files. Other audio and MP3 formats are not supported and will be skipped.

Press the LEFT/RIGHT button to select the function icon and press the OK button to confirm.



-  Play or pause the music.
-  Play the previous or next track.
-  Option Menu.

Play All – Play all the music in sequence.

Repeat All – Loop all the music in sequence.

Repeat One – Loop the current track.

Shuffle All – Play all the music randomly.

Play Folder – Loop all music stored within the selected folder (sub-folders not included).

NOTE: The maximum music play time is 2 hours by default and can be adjusted in the Setup Menu.

When music is playing, animations will be shown on screen and the system time will be displayed on the bottom. You can press the LEFT/RIGHT button to return to the last screen.

C. FM Radio

In this mode you can listen to your favourite FM radio stations.

Press the LEFT/RIGHT button to manually search through the frequency range, or hold either of these buttons to auto search for a station.

NOTE: The Disco Light is not available in FM Radio mode.



D. Audio-in Connection

In this mode you can listen to your own music on your external music device via an audio-in connection.



E. Bluetooth® Connection

In this mode you can listen to your own music on your external music device via a *Bluetooth*® connection. To make a *Bluetooth*® connection to **Kidi Concert**:

- Turn on the *Bluetooth*® function on your external music device, then search and connect to the device "**VTech Kidi Music**".



- If your music device asks you to enter a PIN code, enter the 4-digit PIN code shown on your **Kidi Concert's** screen.
- When connected you will see the connected status icon  and you can start playing music from your external music device.

NOTE: If your music device does not support a PIN code connection, you can turn it off in the *Bluetooth*® PIN Setup Menu.

3. PARTY TOOLS

Here you can play party games with your friends!

A. Dancing Challenge

Select a song and start a dancing challenge with your friends. Listen and follow the actions in the songs and see who is the best dancer!



B. Simon Says

It's the classic party game Simon Says! Random instructions will be played, but you should **ONLY** follow the instructions when you hear the words "Simon Says"!



C. Charades

Choose a category from the 8 available (including 3 junior categories with pictures) to begin the round. In each round you will have 10 words to act out (each word has a 30-second time limit). Press the OK button to go to the next word when you guess the right answer!



D. Musical Statues

Select a music track and play the classic party game Musical Statues with your friends. Players have to freeze when the music stops! If you don't stop when the music stops, you're out! Will you be the last statue standing?!



E. Musical Chairs

Select a music track and play the classic party game Musical Chairs with your friends. Players have to find a seat when the music stops! If you don't find a seat, you're out! Will you make it to the very end?!



F. One Minute Timer

Use this one minute countdown timer to play your own party challenge game with your friends!



4. GAMES

There are 3 games to play in this mode.


A. Irish Snap

A card will be shown on screen. When you hear the name of the card, press the OK button as quickly as you can! See how many you can get before the time runs out!




B. Music Jam

Play this game to see if you are a great beat catcher! Press the LEFT, RIGHT or OK button once a LEFT, RIGHT or OK icon has reached the bottom of the screen! Can you catch all of the beats?!

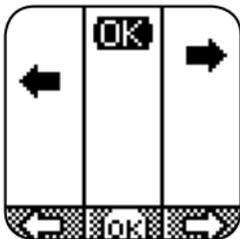

C. Hop Hop Hurry

Press the LEFT/RIGHT button to help the frog jump to the next lily pad, if the frog falls into the water you will have to start again! Try to jump to the last lily pad before the time runs out!

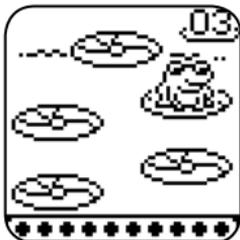

5. SETUP MENU

You can change the system settings in this menu.

A. Alarm Clock

Set the alarm to either repeat every day, once, or to turn the alarm off. Then, set the alarm time and select the alarm music.

B. Music Playtime

Set the maximum number of hours for music (all music modes) playback.

C. Screen Contrast

Adjust the screen display contrast.

D. System Clock

Adjust the system clock time.

E. Wireless Security

Turn on or off the *Bluetooth*[®] PIN for external music device connections.

NOTE: If you change this option, your external music device may not recognise the last paired "**VTech Kidi Music**". In this case you will need to remove the "**VTech Kidi Music**" from the connected device list of your external music device. Then, start the pairing process again.

F. Factory Reset

This will reset your **Kidi Concert** to the factory defaults. Please use this only when you experience fatal problems with your **Kidi Concert**.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Handle the device carefully.
3. Keep the device away from dusty or dirty areas.
4. Keep the device away from moisture or extreme temperatures.
5. Do not disassemble the device. If a problem occurs, remove and replace the batteries to reset the device, or try new batteries.
6. Do not drop the device on a hard surface and do not expose it to or immerse it in water.
7. Keep the unit out of direct sunlight and away from any direct heat sources.

EPILEPSY WARNING

A small percentage of users may experience epileptic seizures when viewing flashing lights or patterns.

Please consult your doctor if you have an epileptic condition or experience any unusual symptoms while playing. Turn off the Disco Light on the **Kidi Concert** if you do not feel comfortable.

TROUBLESHOOTING

Problem	Possible cause	Correction
Your Kidi Concert has stopped working or will not turn on.	Incorrect battery polarities.	Ensure that the batteries are installed correctly.
	Weak batteries.	Replace with new batteries.
	AC/DC connection problem.	Ensure that the adaptor connection is secure.
FM Radio unclear, gritty interference.	Weak batteries.	Replace with new batteries.
	Weak radio reception.	Take out the antenna from the bottom of the unit.
	Weak radio reception.	Place the unit nearer to a window that has an open and unobstructed view.
Memory card can't be detected.	Memory card is not fully inserted to the slot.	Check if the memory card is correctly inserted.
	Memory card format is not supported.	Check to see if the memory card is the supported type. The Kidi Concert only supports microSD or microSDHC card from 1 to 32GB and formatted in FAT/FAT32 file systems. Kidi Concert does not support NTFS or other file systems.

<p>Can't play the MP3 files in the Memory Card.</p>	<p>MP3 format is not supported.</p>	<p>The Kidi Concert only supports the following MP3 file format: MP3 (MPEG-1 Audio Layer 3). Other MP3 formats are not supported.</p>
<p><i>Bluetooth®</i> Mode - Music volume is too low even if my Kidi Concert has been set to the maximum volume.</p>	<p>External music device's sound output level is too low.</p>	<p>The Kidi Concert cannot control the output sound level from the external music device, so please ensure that the sound volume settings on your external music device has been set to a reasonable level.</p>
<p><i>Bluetooth®</i> Mode - My Music Device did not ask me to enter the PIN code.</p>	<p>You music device may not support PIN pairing.</p>	<p>Some music devices may not support PIN pairing in <i>Bluetooth®</i> connection, in this case, you can disable the PIN function in Kidi Concert, please refer to SETUP > Wireless Security section for details.</p>

If the problem persists, please call our Consumer Services Department on 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK) and a service representative will be happy to help you.

DANCING CHALLENGE SONG LYRICS

Song 1 - Dancing Challenge

Put your hands in the air!

Wave them like you just don't care!

Now grab your friends and strike a pose!

Now everybody touch your nose!

Put your hands out!

Now shake, shake, shake them all about!

Put your legs out!

Now everybody shake them all about!

Let's look to the left!

Let's look to the right!

Now twist down to the ground! Twist! Twist! Twist!

And launch up to the sky! Jump! Jump! Jump!

Put your hands out!

Now shake, shake, shake them all about!

Put your legs out!

Now everybody shake them all about!

Yeah everybody shake them all about!

Song 2 - Dance Dance Dance

Put on the music. Are you listening?

The beat is playing loud and the lights are glowing.

Are you ready to move your body?

Come on let's dance to the rhythm it's fun you'll see!

Just listen to the beat and move your feet.

Just close your eyes and follow me now!

Dance, dance, dance to the beat!

Come on let's stomp, stomp, stomp in the streets!

Put your hands together!

Clap, clap, clap to the beat!

Let's lift our feet and

Jump, jump, jump feel our heartbeat, yeah!

I feel alright under the spotlight.

I'm with my friends right now and we're 'bout to ignite!

It's up to us now. We're gonna sing loud!

Come on let's dance to the rhythm in front of the crowd!

Just listen to the beat and move your feet.

Just close your eyes and follow me now!

Dance, dance, dance to the beat!

Come on let's stomp, stomp, stomp in the streets!

Put your hands together!

Clap, clap, clap to the beat!

Let's lift our feet and

Jump, jump, jump feel our heartbeat, yeah!

Song 3 - D.A.N.C.E.

Can you clap your hands along to the music?

Can you stomp your feet along to the music?

Can you twist your body along to the music?

Can you jump up and down along to the music?

Let's D - A - N - C - E all day!

To the groovy B - E - A - T all night!

Yeah this is our dance!

Yeah let's take a chance now!

Can you hop, hop, hop along to the music?

Can you wiggle, wiggle, wiggle along to the music?

Can you sway side to side along to the music?

Can you jump, jump, jump along to the music?

Let's D - A - N - C - E all day!

To the groovy B - E - A - T all night!

Yeah this is our dance!

Yeah let's take a chance now!

Song 4 - Dancing Superstars

We can shuffle to the left.

We can shuffle to the right.

We can go low to the floor.

And reach up to the sky!

Do you, do you see the dancing stars?

Are you, are you a dancing star?

Woah oh oh oh oh oh! We're the dancing superstars!

Woah oh oh oh oh oh! Yeah that's who we are!

We're the dancing superstars!

We can jump up to the left.

We can jump up to the right.

We can shimmy to the floor.

And shimmy to the sky!

Do you, do you see the dancing stars?

Are you, are you a dancing star?

Woah oh oh oh oh oh! We're the dancing superstars!

Woah oh oh oh oh oh! Yeah that's who we are!

We're the dancing superstars!

Song 5 - Motion of the Ocean

Can you swim like a dolphin?
Can you dive like a whale?
Can you paddle like a sea turtle?
Can you jiggle like a jellyfish?
It's the motion of the ocean animals!
In the deep blue wavy water!
Diving here we go!

Can you pinch like a lobster?
Can you chomp like a shark?
Can you wiggle like an octopus?
Can you stretch like a starfish?
It's the motion of the ocean animals!
In the deep blue wavy water!
Diving here we go!
Diving here we go!

IMPORTANT NOTE:

Creating and developing **VTech**[®] products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.

The *Bluetooth*[®] word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by **VTech**[®] is under license.

DECLARATION OF CONFORMITY

Hereby, VTech Electronics Europe BV declares that the radio equipment type 1639 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

www.vtech.com/re-directive



**CLASS 1
LED PRODUCT**

CONSUMER SERVICES

Creating and developing VTech products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

Product Warranty/ Consumer Guarantees

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk

www.vtech.com.au



TM & © 2018 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-003527-000 (UK)