

vtech®

Parent's Guide

Light & Flight Discovery Globe



91-003343-008 (X)

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech *Baby*

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTech® Light & Flight Discovery Globe!** Young explorers can jump into the pilot's seat and get a closer look at our world with this interactive globe. Use the joystick to explore the world and discover fun facts about countries, meet new people, hear foreign languages and music, and visit landmarks and animals. Colourful lighting effects and five discovery modes allow your child to engage in endless flights of fun and learning!




INCLUDED IN THIS PACKAGE

- One **Light & Flight Discovery Globe**
- One parent's guide

WARNING: All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this parent's guide as it contains important information.

Unlock the packaging locks:

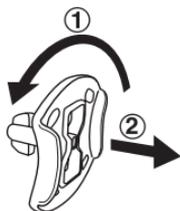


① Rotate the packaging locks 90 degrees anticlockwise.

② Pull out the packaging locks.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit.
3. Open the battery cover.
4. Install 4 new AA size (LR6/AM-3) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
5. Replace the battery cover.

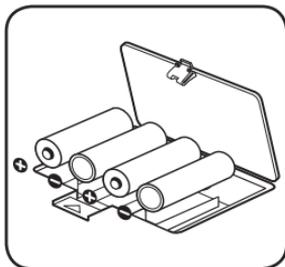

Note: If there is no response when the unit is switched on, please insert new batteries and try switching it on again.

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.



Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com



PRODUCT FEATURES

1. Off/Low/High Volume Switch

To turn the unit **ON**, slide the switch from **OFF** to **LOW/HIGH** volume. Slide the switch **OFF** to turn the unit **OFF**.



2. Movable Joystick

Move the **JOYSTICK** left or right to fly the plane left or right. Move the **JOYSTICK** forward or backward to fly the plane up or down. Release the **JOYSTICK** to stop the plane.



3. Enter Button

Press the **ENTER BUTTON** to answer a question or to hear fun facts or sounds about the location.



4. Mode Selector

Slide the **MODE SELECTOR** to choose an activity.



5. Automatic Shut Off

To preserve battery life, the unit will automatically power-off after several minutes without input. The unit can be turned on again by pressing the **ENTER BUTTON** or sliding the **MODE SELECTOR** when the **OFF/LOW/HIGH VOLUME SWITCH** is in the Low or High position.

Note: If the unit repeatedly powers down or the light flashes then fades out, we suggest changing the batteries.

ACTIVITIES

1. Fun Facts Mode

Slide the **MODE SELECTOR** to choose this activity. Move the **JOYSTICK** to fly the plane anywhere on the globe and release the **JOYSTICK** when you reach your destination. Press the **ENTER BUTTON** and you will hear fun facts about people, animals, countries and weather around the world.



2. Discover Languages Mode

Slide the **MODE SELECTOR** to choose this activity. You will hear a country name and a phrase in a language from that country. Using the **JOYSTICK**, move the plane to the correct country and press the **ENTER BUTTON**. Some languages, such as English, count more than one country as a correct answer.



English: Hello, Goodbye, Thank you, Please

Portuguese: Olá, Adeus, Obrigado, Por favor

French: Bonjour, Au revoir, Merci, S'il vous plaît

Spanish: Hola, Adiós, Gracias, Por favor

Mandarin: Nǐ hǎo, Zài jiàn, Xiè xiè, Qǐng

German: Hallo, Bis bald, Danke, Bitte

Hindi: Namaste, Alvida, Dhanyavaad, Kripya

Arabic: Asalamalikum, Mahsalaam, Choucran, Min Fadlir

Russian: Privjet, Da svedaneeya, Spaseeba, Pajalusta

3. Find it Mode

Slide the **MODE SELECTOR** to choose this activity. You will be asked to find people, continents, oceans, famous places and animals.



4. Countries & Famous Places Mode

Slide the **MODE SELECTOR** to choose this activity. Fly the plane around the world. When you land on a location, press the **ENTER BUTTON** to learn about the country or landmark.



5. World Music Mode

Slide the **MODE SELECTOR** to choose this activity. Fly to a location to hear melodies or sounds for that location.



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.



TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.



IMPORTANT NOTE:

Creating and developing **VTech**[®] products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.



**CLASS 1
LED PRODUCT**



PRODUCT REGISTRATION

Visit www.vtech.co.uk/clubvtech/login
to register your VTech product

By joining the VTech Club you can also enter competitions, find out about news and events, seek expert advice for parents and let your kids play fun learning games and activities.



PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor). Please include details of the fault together with your name and address.
9. To keep an online record of your warranty, please register your product online at www.vtech.co.uk/warranty

Vtech Electronics EU PLC, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, West Hallam, DE7 6HE

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.





**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk



TM & © 2017 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-003343-008 