


vtech[®]

User's Manual

Little Love 3-in-1 Pushchair



© 2014 VTech
Printed in China
91-002933-001 

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



 
To learn more about this and other VTech® products, visit www.vtechuk.com

INTRODUCTION

Thank you for purchasing the **VTech® Little Love 3-in-1 Pushchair!**

This interactive pushchair has three modes and easily transforms from a pushchair to highchair to cot. Your child can also listen to fun rhyming stories, explore nutrition and hear baby care reminders for more role-play fun!

TRANSFORMATION BUTTON

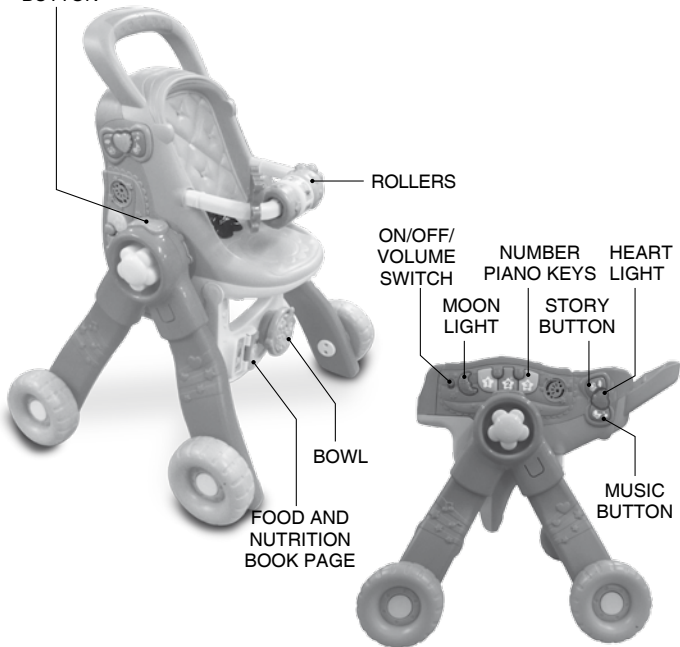

INCLUDED IN THIS PACKAGE

- One VTech® Little Love 3-in-1 Pushchair
- One user's manual

WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep user's manual as it contains important information.

PRODUCT ASSEMBLY

To ensure your child's safety, this product should only be assembled by an adult.

NOTE:

 
The cord located across the book panel is not part of this toy. This cord should be removed and discarded for your child's safety.



GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Install 2 new "AA" size (LR6/AM-3) batteries following the diagram inside the battery box.
3. Replace the battery cover.

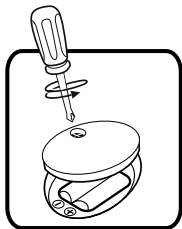

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

PRODUCT FEATURES

1. ON/OFF/VOLUME SWITCH

Slide the **ON/OFF/VOLUME SWITCH** from **Off** to the **Volume** position to turn the unit on and adjust volume. Slide the **ON/OFF/VOLUME SWITCH** from **Volume** to **Off** to turn the unit off.



2. SMART SENSOR

Pushchair recognises when it's being moved and plays melodies and fun sounds. It also recognises when your baby doll is in the pushchair, highchair and cot.



3. MUSIC BUTTON

Press the **Music Button** to hear melodies or familiar lullabies.



4. STORY BUTTON

Press the **Story Button** to hear sounds, facts and classic nursery rhymes.



5. NUMBER PIANO KEYS

Press the **Piano Keys** to learn numbers and counting, hear sing-along songs or play piano in music mode.



6. FOOD AND NUTRITION BOOK PAGE

Turn the **Book Page** to learn about healthy habits, food and nutrition.



 
7. BOWL

Spin the **Bowl** during feeding time for the baby doll.





8. HEART AND MOON LIGHTS

The **Heart and Moon Lights** will flash in time to the music.

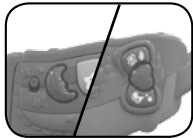


9. TRANSFORMATION BUTTON

  To easily transform from a pushchair to highchair to cot, hold the **Transformation Button** and rotate the pushchair body by pushing the handle. When the correct position is reached, you will hear an affirming sound effect.

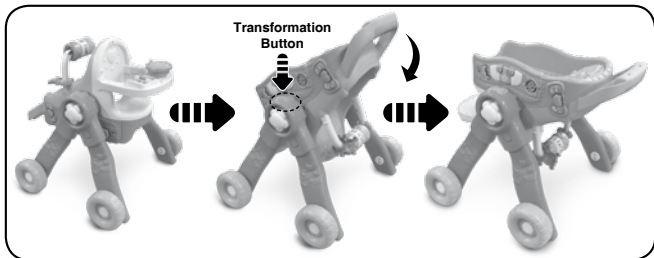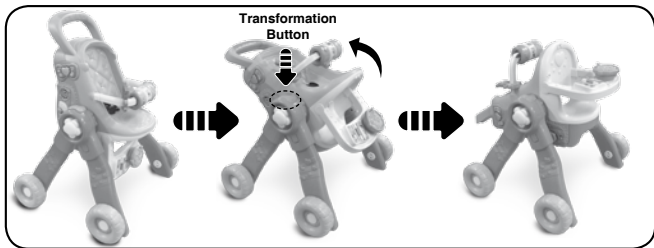

10. HOW TO ASSEMBLE THE PUSHCHAIR

 - 1) Select two legs with wheels and insert them into the piece with the flower screw and transformation button. Using the flower as the guide, attach the legs to the side of the pushchair with the piano keys. Rotate the flower screw to the right to secure the legs tightly to the pushchair.

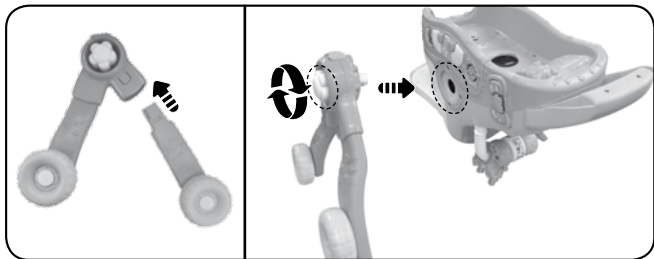


- 2) Insert the remaining legs into the other piece with the flower screw. Using the flower as a guide, attach the legs to the other side of the pushchair. Rotate the flower screw to the right to secure the legs tightly to the pushchair.



12. HOW TO INSTALL THE ROLLER HANDLE TO THE PUSHCHAIR

 Push the ends of the roller handle into the pushchair until it is snug.

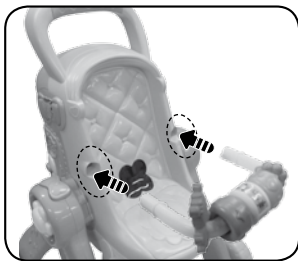

ACTIVITIES

Activity 1: Pushchair Mode

Take a baby doll for a walk to pretend places like the farm, park and neighbourhood. When you push the pushchair, you will hear environmental sounds from that particular location. For example, hear a cow on the farm. Press the **Music and Story Buttons** to hear interesting phrases and melodies that relate to the three locations.

Press the **Number Piano Keys** to hear 6 songs.

Sing-along to the classic ABC song and original tunes about colours and places:

 
SONG LYRICS

Let's sing a song
As we stroll along,
About the rainbow colours
They are red, orange, yellow and blue,
Indigo and violet, too!

One, Two — buckle my shoe
Three, Four — open the door
Five, Six — pick up sticks
Seven, Eight — lay them straight
Nine, Ten — let's do it again.

Let's walk to the park,
Where we'll run and swing.
Monkey bars and balance beams,
Race you down the slides.

Farm, farm animals
Make lots of sounds and squawks.
Cows, they moo, and chickens, they bawk,
And the farmers, they whistle all day.

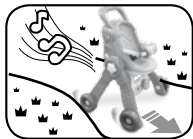

Today is a great day for a stroll.
Pushing the pushchair, we're on a roll.
The sun shines bright, the air is sweet.
Listen to the sounds and the birdies tweet.

A, B, C, D, E, F, G, H, I, J, K, L, M, N, O, P, Q, R, S, T, U, V, W, X, Y, and Z. Now I know my ABCs, next time won't you sing with me?


Activity 2: Highchair Mode

Enjoy spinning the **Bowl** during a baby doll's mealtime. Turn the **Book Page** to learn about different foods and nutrition. Healthy habits remind you how to take good care of a baby doll.



Activity 3: Cot Mode

 Press the **Music Button** to soothe a baby to sleep with 20 familiar lullabies. Press the **Story Button** to hear classic nursery rhymes. The **Number Piano Keys** introduce numbers and counting, and also allow you to play each lullaby note-by-note.

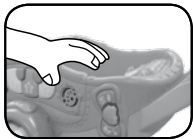

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. Use this toy indoors for best results.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

 
Creating and developing **VTech**[®] products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

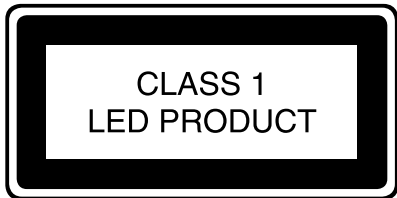



vtech®

PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.



1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

