

Instruction Manual

Rock and Roll Bear



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

choo

Interactive toys to develop their imagination and encourage language development

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

vtech Bally

Toys that will stimulate their interest in different textures. sounds and colours

lam...

- ...responding to colours, sounds and textures
- ...understanding cause and effect
- ...learning to touch, reach, grasp, sit-up, crawl and toddle

l want...

- ...to get ready for school by starting to learn the alphabet and counting
- ...my learning to be as fun, easy and exciting as can be
- ...to show my creativity with drawing and music so my whole brain develops

I need...


- ...challenging activities that can keep pace with my growing mind
- ...intelligent technology that adapts to my level of learning
- ...National Curriculum based content to support what I'm learning at school

Birth-36 months



INTRODUCTION

Let's have some wobbly fun with the **Rock and Roll Bear** by **VTech**[®]. Bear likes to wobble to encourage little one to interact and play. Press the heart, bees or honey pot button to hear fun phrases, sing-along songs, melodies and sounds.

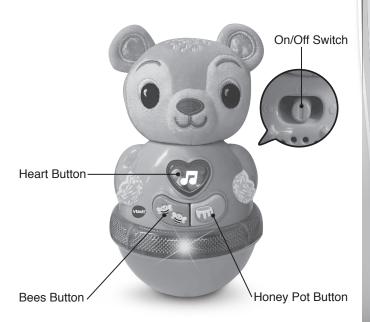

INCLUDED IN THE PACKAGE

- · Rock and Roll Bear
- · Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

GETTING STARTED


WARNING:

Adult assembly required for battery installation.

Keep batteries out of reach of children.

Battery Removal and Installation

- 1. Make sure the unit is turned Off.
- Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw, and then open the battery cover.
- Remove old batteries by pulling up on one end of each battery.
- Install 2 new AAA (AM-4/LR03)
 batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
- 5. Replace the battery cover and tighten the screw to secure.

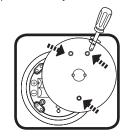

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- · Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- · Remove exhausted batteries from the toy.
- · Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- · Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly. In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled. Learn more at:

www.vtech.co.uk/recycle www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES

On/Off/Volume Switch
 To turn the unit On, slide the On/ Off/Volume Switch to the Low Volume ()) or the High Volume ()) position. You will hear a song, a phrase, sounds and a short tune. To turn the unit Off, slide the On/Off/Volume Switch to the Off ()



2. Automatic Shut-Off

To preserve battery life, the **Rock and Roll Bear** will automatically shut off after approximately 30 seconds without input. The unit can be turned on again by pressing the Heart, Bees or Honey Pot Button.

NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

ACTIVITIES

1. Heart Button

Press the Heart Button to play phrases, sing-along songs, sounds and music.



 Bees Button and Honey Pot Button Press the Bees Button or Honey Pot Button to hear fun phrases, sing-along songs, melodies and sounds.



Motion Sensor
 Push the Bear to trigger the motion sensor to play fun sounds.



MELODIES

- 1. Entertainer
- 2. Man On The Flying Trapeze
- 3. Boys and Girls Go Out to Play
- 4. Glow Worm
- 5. Humpty Dumpty
- 6. Looby Loo
- 7. Mulberry Bush
- 8. Old MacDonald
- 9. Skip to my Lou
- 10. Teddy Bears' Picnic
- 11. Toyland
- 12. Yankee Doodle

SONG LYRICS

Song 1

I'm a wibbly, wobbly bear,

With a big round tummy.

I like to raaaar, raaaar, raaaar, raaaar.

Song 2

Wibble, wobble on the floor, Wobble back, wobble forth, Watch me wobble round and round! We'll have fun together!

Song 3

1,2,3,4 I like counting. Count along with me! Let's count and sing together, 1,2,3,4!

CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat sources.
- Remove the batteries if the unit will not be in use for an extended period of time.
- Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
- If the unit stops working or malfunctions, install a new set of batteries.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

- Turn the unit Off.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit **On**. The unit should now be ready to use again.
- 5. If the unit still does not work, install a new set of batteries.

If the problem persists, please contact our Consumer Services Department, and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

Visit our website for more information about our products, downloads, resources and more.

www.vtech.co.uk www.vtech.com.au

