



Stay In Bed Sleepy Cat



© 2016 VTech Printed in China 91-003193-000 (P)

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

School

want...

can be

Interactive toys to develop their imagination and encourage language development

...to get ready for school

by starting to learn the

alphabet and counting

...my learning to be as

fun, easy and exciting as

...to show my creativity

with drawing and music

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with

...intelligent technology that adapts to my level of

...National Curriculum based content to support what I'm

my growing mind

learning

learning at school

4-10 years

vtech Bally

Toys that will stimulate their interest in different textures. sounds and colours

lam...

- ...responding to colours, sounds and textures
- ...understanding cause and effect
- ...learning to touch, reach, grasp, sit-up, crawl and toddle










INTRODUCTION

Thank you for purchasing the VTech® Stay In Bed Sleepy Cat.

Stay In Bed Sleepy Cat is a cute kitty friend that will encourage and guide your child when learning their daytime and night-time routines. Sleepy Cat's head changes colour to encourage simple understanding of night and day, especially when it's time to sleep and wake. Sleepy Cat includes fun games during the daytime that encourage association with different stage of your child's day but will stay quiet during the night to ensure a peaceful sleep for everyone!

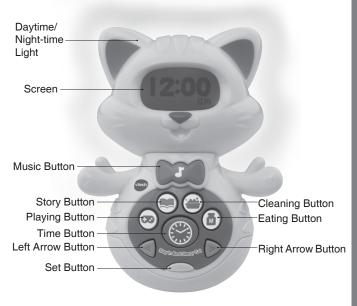

INCLUDED IN THIS PACKAGE

- One VTech® Stay In Bed Sleepy Cat
- One AC adaptor
- One user's manual

WARNING:

 
All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please keep user's manual as it contains important information.

DEMO STRIP REMOVAL:

When the product is taken out of the packaging, please remove the demo strip from the unit to activate normal play mode.



WARNING:

The tape and demo tag are packaging materials, and should be discarded for your child's safety.

Unlock the packaging locks:




- 1 Rotate the packaging lock 90 degrees anti-clockwise.
- 2 Pull out the packaging locks.

GETTING STARTED

BATTERY INSTALLATION

- 1. Make sure the unit is OFF.
- Locate the battery cover on the bottom of the unit.
- Install 3 new AA size (LR6/AM-3) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
- 4. Replace the battery cover and tighten the screws to secure.

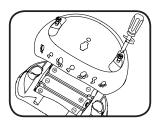

BATTERY NOTICE

Requires 3 AA/LR6 batteries. Or use the adaptor (AC/DC 5V 500mA) included in the package that complies with EN61558 is recommended.

- The use of new alkaline batteries is recommended for maximum performance.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- The toy is not to be connected to more than recommended number of power supplies.
- · Do not dispose of battery in fire.

Disposal of batteries and product



The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit: www.recycle-more.co.uk www.recyclenow.com

CONNECTING THE ADAPTOR

- Connect the adaptor to the adaptor jack on Stay In Bed Sleepy Cat.
- · Plug the adaptor into a mains power socket.
- If the screen shows this image Press the Left/Right Arrow Buttons Press to select if you would like the Daytime/Night-time Light ON or OFF.

Note: The use of an adaptor will override the batteries.

ADAPTOR SAFETY NOTICE

- The toy is not intended for children under 3 years old.
- Please use the adaptor (AC/DC 5V 500mA) included in the package that complies with EN61558.
- Only use the recommended adaptor with this toy.
- The adaptor is not a toy.
- The external flexible cord of this adaptor cannot be replaced; if the cord is damaged, the adaptor should be scrapped.
- Never clean a plugged-in toy with liquid.
- Please examine the adaptor regularly for damage to the cord, plug, enclosure and other parts. In the event of such damage, please stop using the damaged adaptor until the damage has been repaired.

Instructions to parents:

Adaptor and power supplies for toys are not intended to be used as toys, and the use of these products by children shall be under the full supervision of parents.

Note: If the unit stops working or the sound becomes weak, it may be a result of the adaptor connection. Unplug the adaptor for 15 seconds then plug the adaptor back in again. If the problem persists, the adaptor you are using may be faulty.

PRODUCT FEATURES

Time and Other Set-up Features

If the time has not been set, '12:00am' will keep flashing on the screen.

 


Press the **Set Button** of or 2 seconds to enter Set-up mode. Press the **Left/Right Arrow Buttons** to select the setting you want to add, then press the **Set Button** to confirm.

1. Setting the clock (



 Press the Left/Right Arrow Buttons to set the time, press the Set Button to confirm.



2. Setting the morning alarm (getting up time)

 Press the Left/Right Arrow Buttons to set the time, press the Set Button to confirm.



 Press the Left/Right Arrow Buttons to select if you want the alarm ON or OFF, press the Set Button to confirm.



 Press the Left/Right Arrow Buttons to select if you want the Daytime light ON or OFF.



Note: This will only apply if the adaptor is being used.

3. Setting the bedtime alarm 2



Press the Left/Right Arrow Buttons to set the time, press the **Set Button** to confirm.



Press the Left/Right Arrow Buttons to select whether to have the bedtime song play when bedtime starts, press the Set Button to confirm.



Press the Left/Right Arrow Buttons to select if you want the Night-time Light ON or OFF.



Press the Left/Right Arrow Buttons to select if you want to activate the reminder.

 


Note: To help your child understand and practise a good sleeping habit during bedtime/night-time all buttons are invalid (except Set Button).

4. Setting the nap time alarm 340



Press the Left/Right Arrow Buttons to set the time, press the Set Button to confirm.




Press the Left/Right Arrow Buttons to select whether to have a lullaby play or not when nap time starts, press the **Set Button** to confirm.



Press the Left/Right Arrow Buttons to select if you want the Night-time Light ON or OFF.



 
 Press the Left/Right Arrow Buttons to select if you want to activate the reminder.



Note: To help your child understand and practise a good sleeping habit during bedtime/night-time all buttons are invalid (except Set Button).

5. Setting up the Morning teeth brushing alarm

  Press the Left/Right Arrow Buttons to set the time, press the Set Button to confirm.



 Press the Left/Right Arrow Buttons to select if you want to activate the reminder.



6. Setting up the Night teeth brushing alarm

 Press the Left/Right Arrow Buttons to set the time, press the Set Button to confirm.



 
 Press the Left/Right Arrow Buttons to select if you want to activate the reminder.




7. Setting up the Bath time alarm




 Press the Left/Right Arrow Buttons to set the time, press the Set Button to confirm.




  Press the Left/Right Arrow Buttons to select if you want to activate the reminder.



  8. Setting up the Breakfast time alarm [... O






 Press the Left/Right Arrow Buttons to select if you want to activate the reminder.



 9. Setting up the Lunch time alarm







 Press the Left/Right Arrow Buttons to select if you want to activate the reminder.



10. Setting up the Dinner time alarm



Press the Left/Right Arrow Buttons to set the time, press the **Set Button** to confirm.



Press the Left/Right Arrow Buttons to select if you want to activate the reminder.



11. Setting up the Play time alarm





Press the Left/Right Arrow Buttons to select if you want to activate the reminder.



12. Setting the Volume (1)



Press the Left/Right Arrow Buttons to set the volume, press the Set Button to confirm.



Note: If more than one activity is set at the same time, only one voice reminder will be given.

Activity Buttons

Use the **Activity Buttons** to choose and play different games and switch between game mode and clock mode.



Rocking Sleepy Cat

Rock Sleepy Cat to play games or give funny responses in game mode.



Daytime/Night-time Light

During Daytime the yellow light tells your child that it's OK to wake and play. At Bedtime and Nap time, the light changes to blue to soothe your child to sleep and help them understand that they should stay in bed.

Note: Use the adaptor to unlock all light options.

ACTIVITIES

Playing Button



Press the **Playing Button** to play games.

- Mini game 1: Cleaning Time
- Mini game 2: Silly Eyes
- Mini game 3: What's That?
- Big game 1: Follow my eyes
- Big game 2: Remember my Face

If it's not yet Playtime only mini games can be played.



Cleaning time

Rock the cat to clean the screen.



Rock the cat to find the cat's eyes!

What's that?

Pay attention to the object passing by. Press the arrow buttons to tell Sleepy Cat which way the object went.

Follow my eyes

Press the arrow buttons according to the sequence of the winking eyes.

Remember my face

Pay attention to the cat's accessory. Press the Arrow buttons to find the lost accessory. Let your choice stay on the screen for 3 seconds to confirm.

Story Button

Press the **Story Button** to listen to short stories. Press the Arrow buttons to listen to next story.

Cleaning Button



If it's Teeth brushing time or Bathtime when the **Cleaning Button** is pressed, Sleepy Cat will invite your child to rock her to hear the cleaning song.

If it's not Teeth brushing time or Bathtime when the **Cleaning Button** is pressed, a Bathtime or Teeth brushing game will activate. Rock Sleepy Cat to help her clean.















Eating Button

If it's Breakfast time, Lunch time or Dinner time when the Eating Button is pressed Sleepy Cat will encourage your child to eat healthy food.

If it's not Breakfast time, Lunch time or Dinner time when the Eating Button is pressed, feeding games will be activated. Rock Sleepy Cat or press the arrow buttons to feed her.



Music Button



Press the Music Button to listen to Juliabies and funny melodies. Rock Sleepy Cat to increase the tempo. Press the Arrow buttons to listen to the next melody.





Press the Time Button to hear the current time and go in to Clock mode.







Press the Arrow Buttons in Clock mode to listen to the daily schedule.







CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Remove the batteries when the unit is not in use for an extended period of time.
- Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

- Interrupt the power supply by removing the batteries or unplugging the adaptor.
- Let the unit stand for a few minutes, then replace the batteries or plug in the adaptor. The unit should now be ready to play again.
- 3. If the product still does not work, replace with a new set of batteries or check the adaptor for damage.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we at take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.

CLASS 1 LED PRODUCT



PRODUCT REGISTRATION

Visit www.vtech.co.uk/clubvtech/login to register your VTech product

By joining the VTech Club you can also enter competitions, find out about news and events, seek expert advice for parents and let your kids play fun learning games and activities.



PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

- The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
- The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
- 3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
- 4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
- 5. This warranty is personal to the original purchaser and is not transferable.
- 6. Breakages to the LCD screen are not covered by the warranty.
- 7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
- Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor). Please include details of the fault together with your name and address.
- To keep an online record of your warranty, please register your product online at www. vtech.co.uk/warranty

Vtech Electronics EU PLC, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, West Hallam, DE7 6HE

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

