

Parent's Guide



Waterpark



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...



Interactive toys to develop their imagination and encourage language development

l want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

```
4-10 years
```

To learn more about this and other VTech® products, visit www.vtech.co.uk

vtech 🕬

Toys that will stimulate their interest in different textures, sounds and colours

lam...

...responding to colours, sounds and textures

...understanding cause and effect


...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months

INTRODUCTION

Thank you for purchasing the VTech® ZoomiZooz® Waterpark.

Your child will love tumbling the **ZoomiZooz**[®] down the waterfall or launching them from the stingray, sliding them on the turtle lift, or pressing the starfish button to watch them slide! Place the 3 exclusive **ZoomiZooz**[®] on the Magic ZoomiZone which will magically recognise them and introduce their names and fun characteristics!

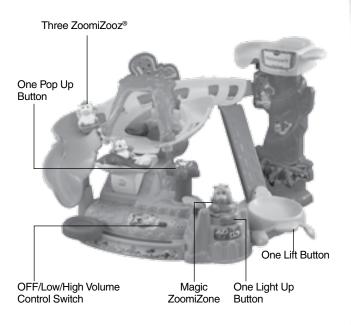

INCLUDED IN THIS PACKAGE



One VTech® ZoomiZooz[®] Waterpark Base



One Swirl Track



One Turtle Base



One Slide Track



One Lifeboat



One Plate



One Protection Shield



One Water Tower Base One WaterTower Top



One Lift Base



One Lift Pole





7 Small Screws









Penguin



Hippo

- One sheet of labels
- One Parent's Guide

WARNING:	All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded
	for your child's safety.
NOTE:	Please keep this Parent's Guide as it contains important information.
WARNING:	For your child's safety, do not aim at face or eyes when launching the ZoomiZooz®
	animals. Do not put, or attempt to launch anything other than the characters provided.


GETTING STARTED

BATTERY REMOVAL AND INSTALLATION

- 1. Make sure the unit is turned OFF.
- 2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw.
- If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
- Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
- 5. Replace the battery cover and tighten the screw to secure the battery cover.

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metalhydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbonzinc) or rechargeable or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.

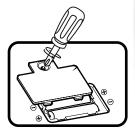

- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:


www.recycle-more.co.uk

www.recyclenow.com

WARNING:

With the **VTech® ZoomiZooz® Waterpark** safety comes first. To ensure your child's safety, adult assembly is required. The package contains 7 small screws. For your child's safety, do not let your child play with the toy until it is fully assembled. The 7 screws that are used to link the play set need to be regularly checked to ensure they are securely tight.

Please stick the labels to the play set securely as indicated on the following page:

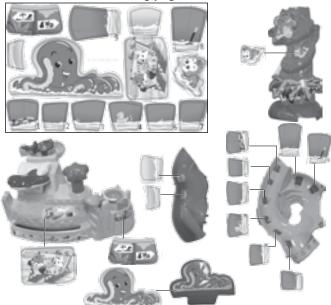

ASSEMBLY INSTRUCTIONS

With the **VTech® Zoomiooz® Waterpark** safety comes first. To ensure your child's safety, adult assembly is required.

1. Screw the **Protection Shield** onto the **Swirl Track** as in image shown below with 4 small screws.





2. Screw the **Swirl Track** onto the **Waterpark Base** as image shown below with 3 small screws.



3. Connect the Lift Base onto the Waterpark Base.





4. Insert the **Turtle Base** onto the **Lift Pole**.



5. Insert the Lift Pole onto the Lift Base and the Swirl Track.



 
6. Connect the Slide Track onto the Swirl Track and the Base

7. Insert the Water Tower Base onto the Lift Base.

8. Insert the Water Tower Top onto the Water Tower Base.

9. Insert the Lifeboat in to the slot.












10. Insert the Plate onto the Swirl Track.

 11. Insert the **Support** onto the bottom of the swirl track.





PRODUCT FEATURES

1. OFF/Low/High Volume Control Switch

To turn the unit **On**, slide the **OFF/ Low/High Volume Control Switch** to the **Low Volume** (■) or the **High Volume** (■) position. You will hear a theme song, a phrase and fun sounds. To turn the unit **Off**, slide the **OFF/Low/High Volume Control Switch** to the **Off** (■) position.



2. Automatic Shut Off

To preserve battery life, the **ZoomiZooz**[®] **Waterpark** will automatically shut off after approximately 70 seconds without input. The unit can be turned on again by pressing any button or putting an animal on the Magic ZoomiZone.

NOTE: If the unit powers down during play, we suggest changing the batteries.

ACTIVITIES

- Slide the OFF/Low/High Volume Control Switch to turn the unit on. You will hear a sing-along song, fun phrase and sounds. The light will flash with the sounds.
- 2. Press the LIGHT UP BUTTON to hear playful sing-along songs, fun phrases and sounds. The light will flash with the sounds.
- 3. Put an animal on the Magic ZoomiZone to introduce the animal, character. Press the launcher to see the animal jump to the turtle lift. The light will flash with the sounds.
- Press the Pop Up Button and the Manta Ray to pop ZoomiZooz[®] onto different parts of the play set, You can hear surprise sounds while playing. The light will flash with the sounds.
- 5. Slide the **Turtle Lift** up and down to hear fun sound effects. The light will flash with the sounds.



SONG LYRICS

Song 1

Hop on the lift, we're ready to swing, up and down, all around our fun will begin soon.

Song 2

Bouncing, sliding, so much fun we'll have! Jump up, roll down, wobble all around in our Waterpark!

Song 3

We are the ZoomiZooz Welcome to our world! We bounce , roll and jump It's so much fun! It'll be an adventure exploring all the way, Come along and join our ZoomiZooz!

CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- 2. Keep the unit out of direct sunlight and away from any direct heat sources.
- 3. Remove the batteries when the unit will not be in use for an extended period of time.
- 4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

- 1. Please turn the unit OFF.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit sit for a few minutes, then replace the batteries.
- 4. Turn the unit **ON**. The unit should now be ready to play with again.
- 5. If the product still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK) Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155 Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785 Website: support.vtech.com.au

 
PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty. Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.



Visit our website for more information about our products, downloads, resources and more.

www.vtech.co.uk www.vtech.com.au



TM & © 2020 VTech Holdings Limited. All rights reserved. **Printed in China.** 91-003861-000®