




Parent's Guide

# Touch & Learn Book



MOON AND ME, related characters, and licensed article TM and © 2019 Tiddle Toddle LLC & Moon and Me Productions Limited. All Rights Reserved.

91-003351-006 

**VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...**

## **vtech** Baby

**Toys that will stimulate their interest in different textures, sounds and colours**

### **I am...**

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

*Birth-36 months*



## **Pre-School**

**Interactive toys to develop their imagination and encourage language development**

### **I want...**

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

*3-6 years*



## **Electronic Learning Computers**

**Cool, aspirational and inspiring computers for curriculum related learning**

### **I need...**

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school


*4-10 years*



To learn more about this and other VTech® products, visit [www.vtech.co.uk](http://www.vtech.co.uk)

# INTRODUCTION

Thank you for purchasing the **VTech® Moon and Me Touch & Learn Book.** Discover the magic of words. Touch the interactive pages to learn words, phonics, objects and to enjoy music and sounds with Pepi Nana and her friends.

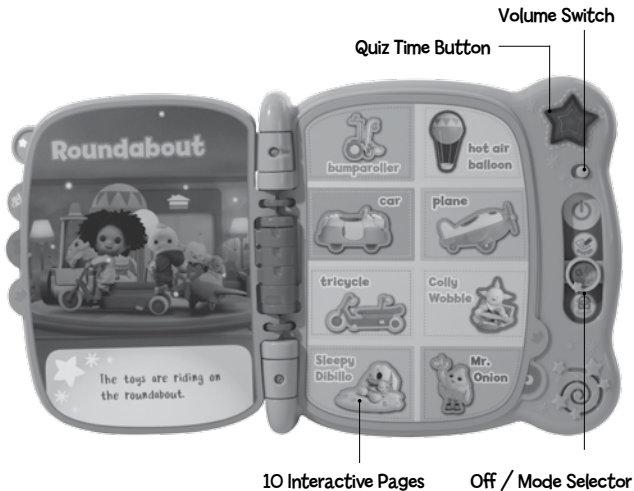

# INCLUDED IN THIS PACKAGE


- One **VTech® Moon and Me Touch & Learn Book**
- One Parent's Guide

## WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

**NOTE:** Please keep this parent's guide as it contains important information.

## Unlock the packaging locks:

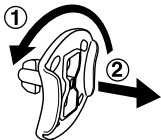


- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging lock.

# GETTING STARTED

## BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the bottom of the unit. Use a coin or screwdriver to loosen the screw.
3. If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new "AA" size (LR6/AM-3) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover and tighten the screw to secure.

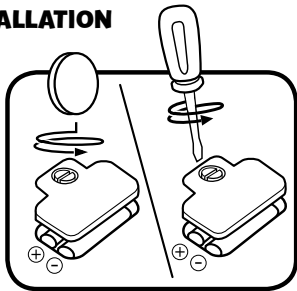

## BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

### Disposal of batteries and product

The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.



Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

[www.recycle-more.co.uk](http://www.recycle-more.co.uk)

[www.recyclenow.com](http://www.recyclenow.com)

# PRODUCT FEATURES

## 1. OFF / MODE SELECTOR

Slide the **OFF / MODE SELECTOR** to turn the unit **ON** and choose Word Explorer mode, Phonics Fun mode or Music & Sounds mode to play. Slide the **OFF / MODE SELECTOR** to the top of the mode selector panel to turn the unit **OFF**.



## 2. 10 INTERACTIVE PAGES

Turn to any of the **10 INTERACTIVE PAGES** and touch the surface to explore and learn.



## 3. QUIZ TIME BUTTON

Press the **QUIZ TIME BUTTON** to play a finding game. The light flashes when a question is given or when the player answers the question correctly.



## 4. VOLUME SWITCH

Slide the **VOLUME SWITCH** to select high or low volume.



## 5. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Moon and Me Touch & Learn Book** will automatically turn off after a few minutes of inactivity. The unit can be turned on again by sliding the **OFF / MODE SELECTOR** or pressing the **QUIZ TIME BUTTON**.

The unit will also automatically turn off when the batteries are very low.

# HOW TO PLAY

To get the most from your **VTech® Moon and Me Touch & Learn Book**, follow these simple instructions:

1. When playing, make sure the book is fully open. The pages should lay flat against the front and back panels of the book.
2. For optimal performance, use one finger to touch the centre of the text or picture.



## INCORRECT OPERATION

To ensure proper touch responses, avoid the following actions when playing with your **VTech® Moon and Me Touch & Learn Book**.

1. Do not touch a picture if the pages are not laying down flat.
2. Do not touch more than one picture at a time.
3. Do not use more than one finger to touch a picture on the page.



- Avoid resting your hand on the page.



## ACTIVITIES

### 1. Word Explorer

Touch the pictures to learn about words and objects related to “Letter Writing”, “Tea Party”, “Music Box”, “Roundabout” and “Bed Time.” Touch the upper, middle and lower story sensors on the left page to hear fun responses.

### 2. Phonics Fun

Touch the pictures to learn the phonic sounds of the beginning letters. Touch the upper, middle and lower story sensors on the left page to hear fun responses.

### 3. Music & Sounds

Touch the upper, middle and lower story sensors on the left page to choose a melody. Touch the words to add some fun sounds.

### 4. Quiz time

Press the quiz time button to play a finding game. Listen to the questions and touch the pictures to answer.

## CARE & MAINTENANCE

- Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Remove the batteries when the unit is not in use for an extended period of time.
- Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.



# TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **ON**. The unit will now be ready to play with again.
5. If the product still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.



# CONSUMER SERVICES

Creating and developing **VTech**<sup>®</sup> products is accompanied by a responsibility that we at **VTech**<sup>®</sup> take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## **UK Customers:**

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: [www.vtech.co.uk/support](http://www.vtech.co.uk/support)

## **Australian Customers:**

Phone: 1800 862 155

Website: [support.vtech.com.au](http://support.vtech.com.au)

## **NZ Customers:**

Phone: 0800 400 785

Website: [support.vtech.com.au](http://support.vtech.com.au)

# PRODUCT WARRANTY/ CONSUMER GUARANTEES

## **UK Customers:**

Read our complete warranty policy online at [vtech.co.uk/warranty](http://vtech.co.uk/warranty).

## **Australian Customers:**

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED - CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [vtech.com.au/consumerguarantees](http://vtech.com.au/consumerguarantees) for further information.

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***www.vtech.co.uk***  
***www.vtech.com.au***



TM & © 2019 VTech Holdings Limited.  
All rights reserved.  
**Printed in China.**  
91-003351-006 