

vtech®

Parent's Guide

Toot-Toot Drivers®


Train Set



91-003715-001 ©UK

INTRODUCTION

Thank you for purchasing the **Toot-Toot Drivers® Train Set**. Travel around the track triggering the four **SmartPoint™** locations included on the train set. The motorised freight train can travel up and down hills, on or off the tracks.

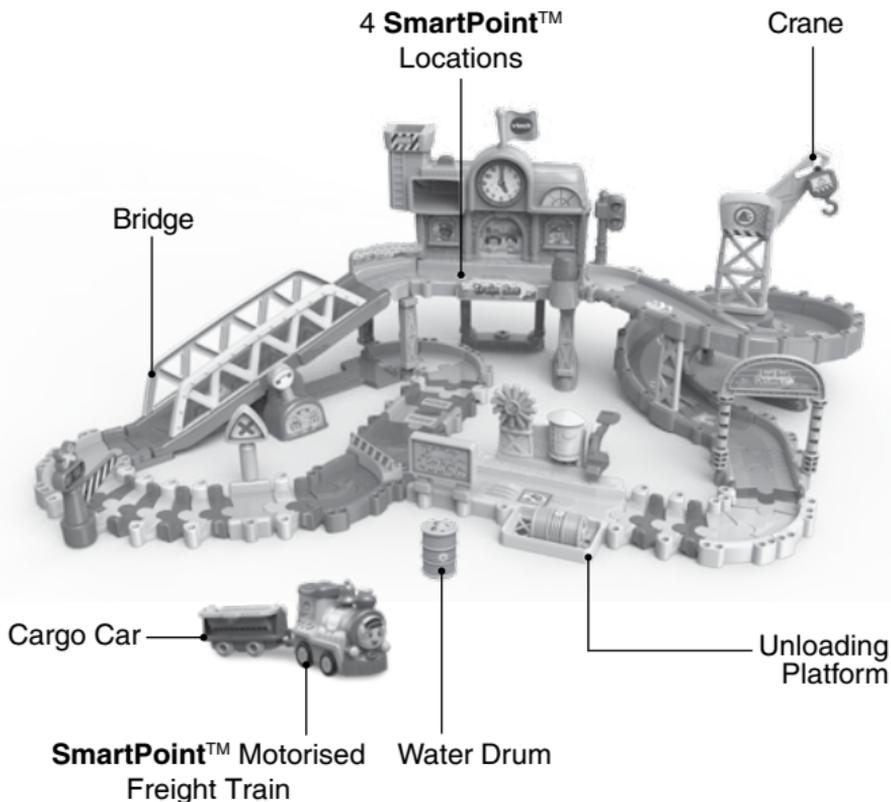

INCLUDED IN THIS PACKAGE

NOTE: This toy is not intended for teething.



One **SmartPoint™**
motorised train



One roof



One train station
wall



One train station
platform




One 45° track



One traffic light



One flag

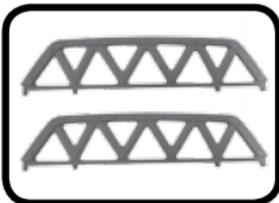

Two bridge
guard rails



One bridge track



One bridge base



One spiral track top



One spiral track bottom



One crane tower



One crane arm



One lifting hook




One crane tower base



One road sign



One track sign

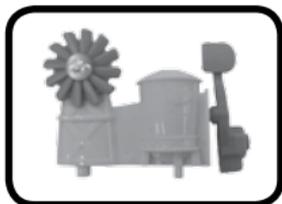

One unloading platform wall




One unloading platform



One switch gate for Y-track



One arch

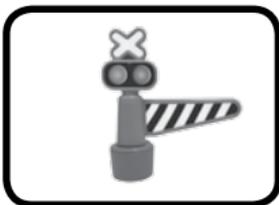

One gate



Two water drums



One spiral track support A



One spiral track support B



One spiral track support C



One adaptor track A



One adaptor track B



One 1/4 track, female A



One 1/4 track, male B



Two 1/4 tracks C



Two track column bases




Seven track columns




Three 45° tracks, female



Seven 45° tracks, male A

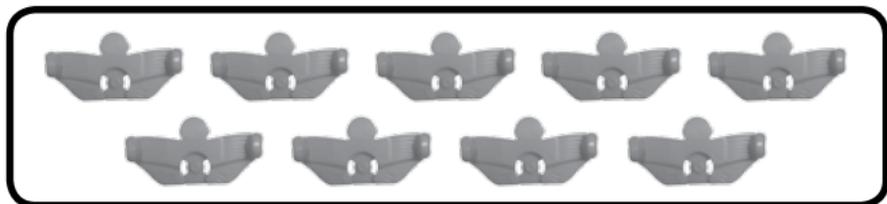

Nine 1/8 tracks

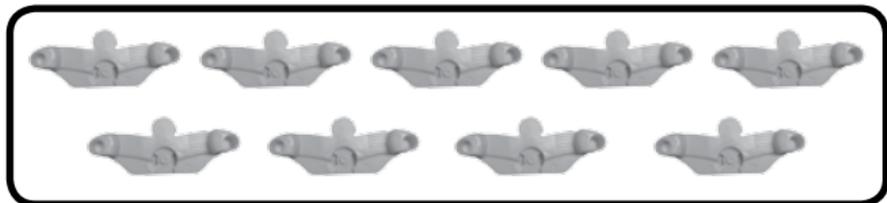


Nine 1/8 flexible-tracks



One label sheet

NOTE:

This play set includes adaptors that allow connection with standard **Toot-Toot Drivers®** tracks. The tracks are not compatible with snap tracks. Adult assembly required.

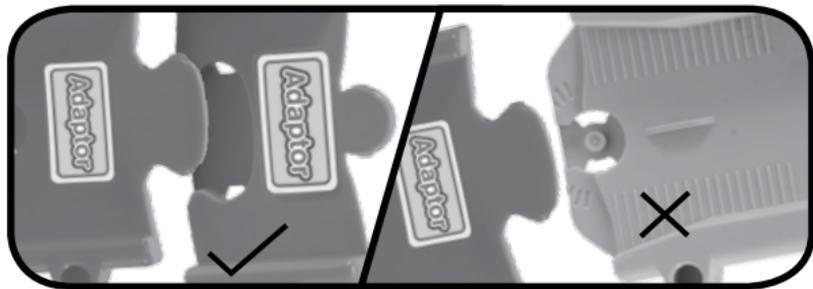**WARNING:**


All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE: Please keep user's manual as it contains important information.

Adult assembly required.

Unlock the packaging locks:

- ① Turn the packaging lock anticlockwise several times.
- ② Pull out and discard the packaging lock.

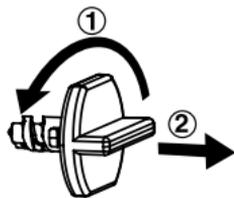


GETTING STARTED

BATTERY REMOVAL AND INSTALLATION

Train

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the train. Use a screwdriver to loosen the screw.
3. If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 3 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
5. Replace the battery cover and tighten the screw to secure.

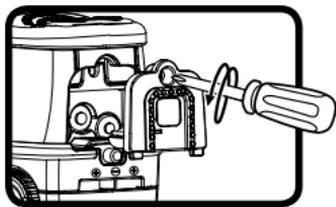

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:



www.recycle-more.co.uk



www.recyclenow.com

**CLASS 1
LED PRODUCT**

LABEL APPLICATION

Please stick the labels to the play set securely as indicated on the following pages:

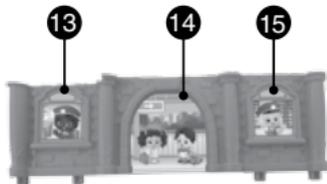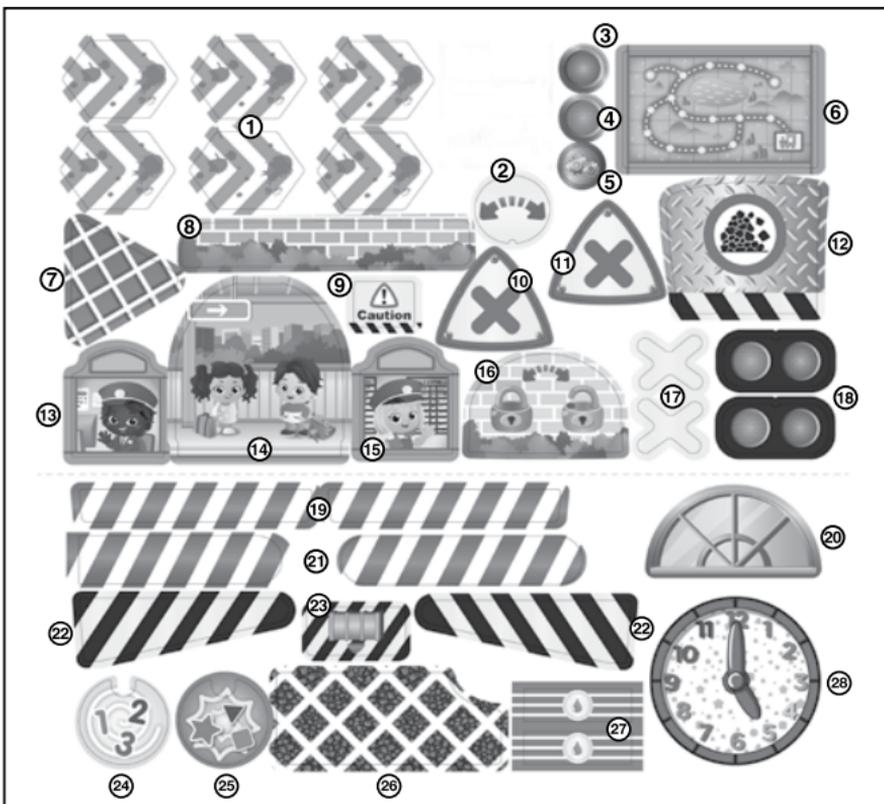


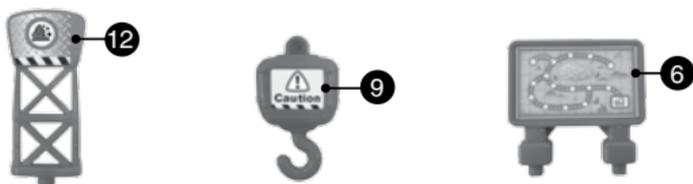
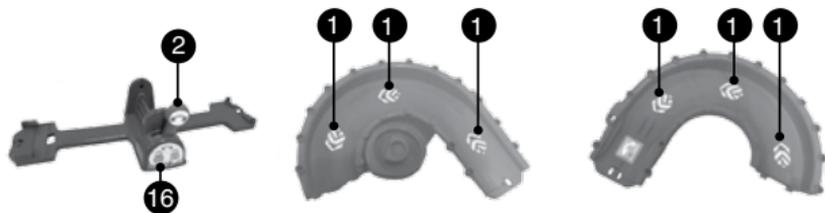


ASSEMBLY INSTRUCTIONS


Toot-Toot Drivers® Train Set

With the **Toot-Toot Drivers® Train Set**, safety comes first. To ensure your child's safety, adult assembly is required.

1. Insert the two **Guard Rails** into the **Bridge Track**, then attach it to the **Bridge Base**. Next, connect one **45° Track Male A**, one **45° Track Female** and one **45° Track Male A** to the right side of the base. Finally, attach two **Flexible Tracks**, one **Adaptor Track B**, one **Adaptor Track A** and a **1/4 Track C** as shown below.

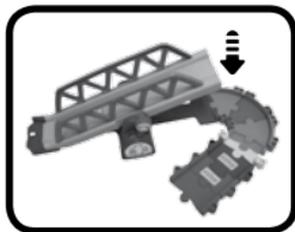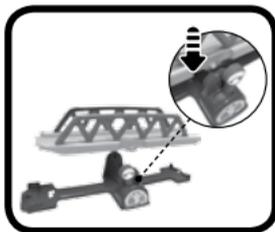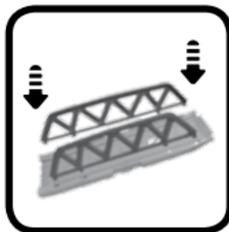


2. Connect one **45° Male Track A** and one **45° Track Female** to the left side of the **Bridge Track Base**, then attach **Flexible Tracks** as shown below.

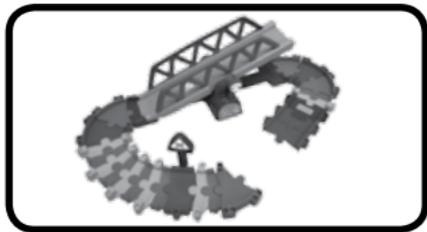


3. Connect with the **Y-Track** as shown below.




4. Insert the **Flag** into the **Roof**, then attach the **Roof** to the **Train Station Wall** as shown below.

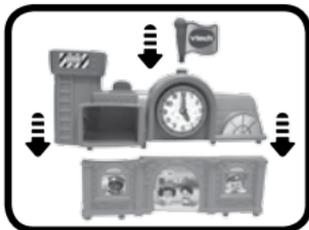


5. Connect the **Train Station Platform** with the **45° Track** on the left and the **45° Male Track A** on the right. Insert the **Traffic Light**, then connect the **Train Station Platform** with the **Train Station Wall** as shown.

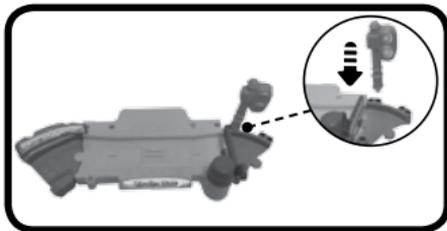



6. Insert the **Track Columns** into the **Track Column Base**, then connect them to the **Train Station Platform**.

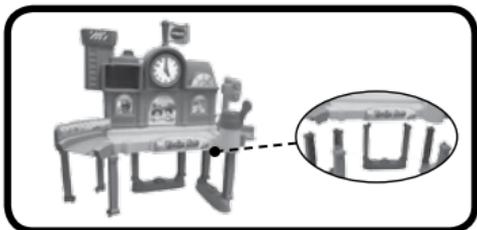


7. Connect the **Train Station Platform** to the **Bridge Track**.

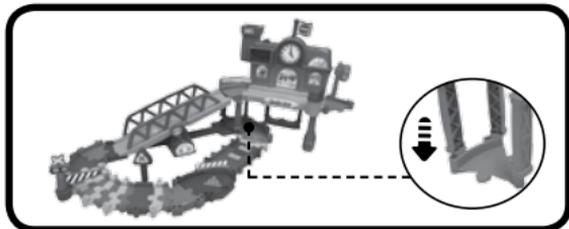


8. Attach the **Crane Arm** to the **Crane Tower**. Next, insert the **Crane Tower** into the **Crane Tower Base**, then attach the **Lifting Hook**.

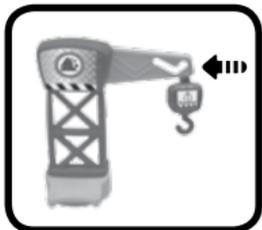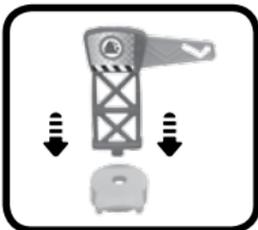

9. Connect the **Bottom Spiral Track** to the **Top Spiral Track**, then secure them with **Spiral Track Supports A, B and C**.

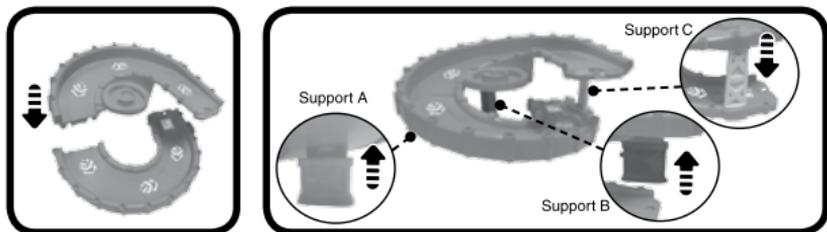


10. Next, insert the **Crane** into the **Spiral Track**, then connect additional track pieces as shown in image B below.

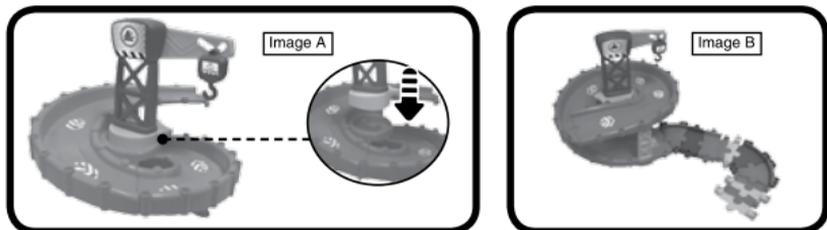


11. Insert the **Windmill** and the **Pump Lever** into the **Unloading Platform**.




12. Connect the **Unloading Platform** to the **Spiral Track**, then insert the **Road Sign** and the **Arch** into the track.

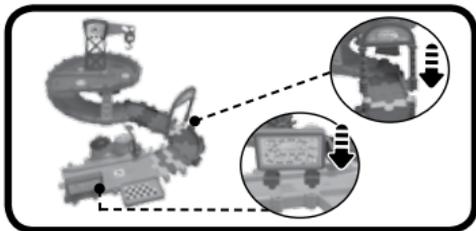

13. Connect the **Spiral Track** to the right side of the **Train Station** on the upper level.

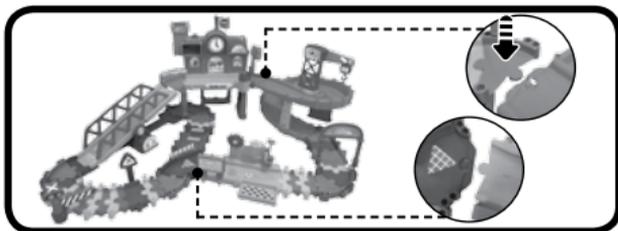

14. Once you've completed the steps above, you are ready to play! Arrange your tracks into the configurations below, or connect this play set to other **Toot-Toot Drivers®** play sets and tracks (each sold separately).

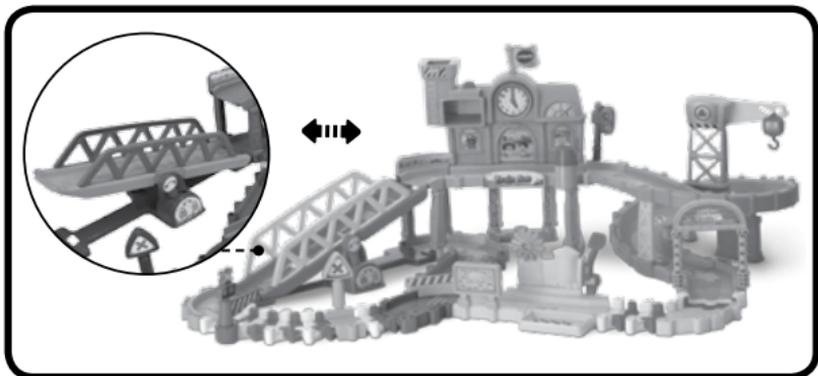

EXPAND & EXPLORE

Connect to the **Toot-Toot Drivers® Track Set** (as shown below) or other **Toot-Toot Drivers®** play sets (each sold separately) to expand the **Train Set** and inspire creativity.




PRODUCT FEATURES


Train

1. Motor/Manual/Off Selector Switch

To turn the Train **On**, Slide the **Motor/Manual/Off Selector Switch** to the **Motor Mode (MOTOR)** or **Manual Play Mode**  position. To turn the train **Off**, slide the **Motor/Manual/Off Selector Switch** to the **Off**  position.

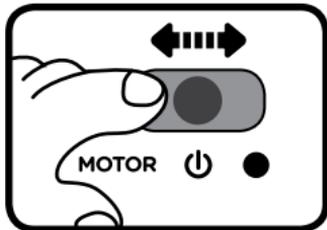

WARNING: For your child's safety, only use the motorised freight train on Toot-Toot Drivers® train tracks. Do not roll the train on your clothing, body or hair while the motorised train is turned on. If something gets caught in the train's wheels while the motor is on, lift the train up so it is no longer touching your child or slide the mode selector switch to the off position to turn the motor off.

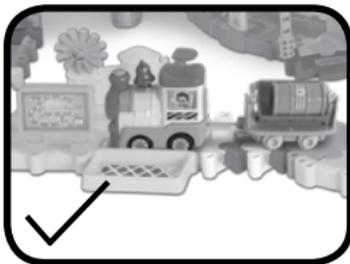

2. Automatic Shut-Off


To preserve battery life, the **Train** will automatically power down after approximately 90 seconds without input when in the **Manual Play Mode** position and approximately 330 seconds without input when in **Motor Mode**. The unit can be turned on again by pressing the **Light Up** button or the **Chimney** button, pushing the **Train** quickly or triggering a **SmartPoint™** location.

NOTE: This product is in Try-Me mode in the packaging. After opening the package, turn the Train off and on again to proceed with normal play. If the unit powers down while playing, we suggest changing the batteries.


ACTIVITIES

Motorised Train


1. Slide the **Motor/Manual/Off Selector** to the **Manual**  or **Motor (MOTOR)** position to turn the Train **On**. You will hear a song, a phrase and sounds. The light will flash with the sounds.

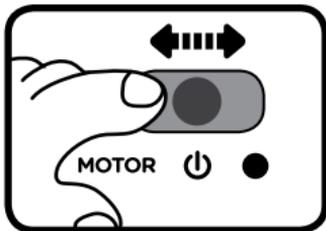

2. Press the **Light Up Button** or **Chimney Button** to hear sounds, songs and phrases. The light will flash with the sounds.

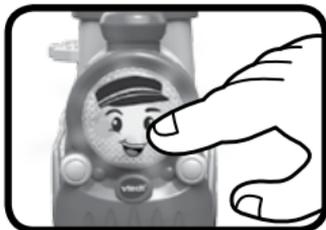

3. Push the **Train** to hear fun sounds. If a melody is already playing, push the vehicle to add fun sounds on top of the melody. The light will flash with the sounds.

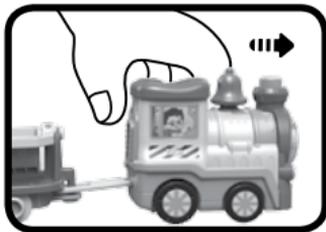

4. For added fun, the Train interacts with the **Toot-Toot Drivers® Train Set**. Simply put the **Train** on one of the play set's four **SmartPoint™** locations to see the light flash and hear fun sounds, short tunes and phrases. The **Train** even interacts with other **Toot-Toot Drivers®** play sets (each play set sold separately).

ACTIVITIES

Train Set



1. Place the **Train** or any **SmartPoint™** vehicle (each sold separately) on any of the play set's four **SmartPoint™** locations to trigger fun sounds, songs or phrases.



2. Place the **Train** on the **SmartPoint™** track on the **Train Station Platform** to load the Water Drums.




3. Flip and lock the lever on the **Bridge** to change levels.

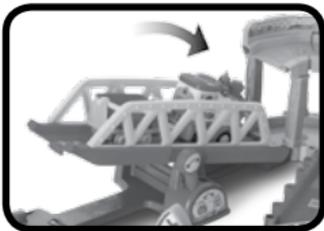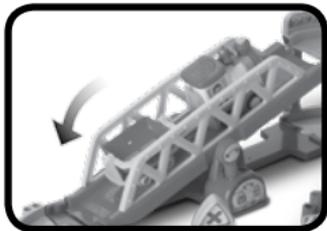

4. Send the **Train** around the **Crane** and down the **Spiral Track**.



5. For role-play fun, drop off the **Water Drums** at the **Unloading Platform**. The **Cargo Basket** handle must be locked in the position shown below to unload the drum.

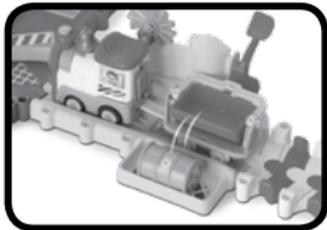

SONGS

1. Toot! Toot! Drivers
Toot! Toot! Drivers
I'm a Toot! Toot! Drivers freight train,
Always chugging along (Toot-Toot).
We have to deliver all the goods.
Together, we can do it all! (Toot-Toot).
2. Toot! Toot! Drivers,
Toot! Toot! Drivers.
3. Freight train drivers sing this song,
do-da, do-da,
Freight train drivers move heavy loads,
All the do-da day.

4. Come along, it's a lot of fun,
Working hard for everyone!

MELODY LIST

1. I've Been Working on the Railroad
2. Oh, Susanna
3. Insy, Winsy, Spider
4. Hickory Dickory Dock
5. Oats, Peas, Beans, and Barley Grow
6. Pease Porridge Hot

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech**[®] products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

Product Warranty / Consumer Guarantees

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

