

vtech®

Instruction Manual

GRWM GET READY WITH ME FASHION JOURNAL



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



4-10 years



I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

 
...National Curriculum based content to support what I'm learning at school

INTRODUCTION


Thank you for purchasing the **VTech® GRWM Fashion Journal**.

Step into the world of fashion with your very own Fashion Journal! Create stylish entries, explore fun My Stylist activities, and enjoy 20 exciting activities and mini games that challenge your typing and logic skills. The **GRWM Fashion Journal** also features a built-in music player, a colour screen, an alarm clock, and more. Choose from four unique characters to personalise your journal style and make it truly your own!

Battery Compartment

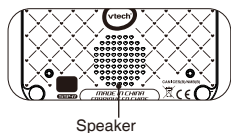

Speaker

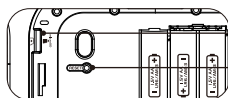 

microSD Card Slot
Reset Button

Escape Button

Camera Button
(Photo/Video
Button)

Flip Camera



Toggle (Star)
Button
MP3 Player
Button
Clock Button
Microphone
2 Volume Buttons
OK Button
6 Activity
Category Buttons
Selection Dial
Unlock Button
(with RGB lights)

10 Number
Buttons
Backspace Button
Enter Button

Shift Button 26 Letter Buttons Save Button Emoticon Button Symbol Button Space Button 4 Arrow Buttons Options Button Help Button

PRODUCT SPECIFICATIONS

Display	2.4" TFT colour LCD
Photo Resolution	320 x 240
Video Resolution	320 x 240 pixels
Video Length limit per file	30 minutes when using a microSD card
Focus Range	1.5 feet - ∞
Internal Memory	128MB built-in memory (Shared with program data; actual memory available for user storage will be less)
File Format	Photos: Standard Baseline jpg Video: avi (Motion jpg) Songs and Voice Memo: mp3
Memory Card Format and Capacity	microSD / microSDHC card (not included) with capacity from 1GB- 32GB are recommended
Batteries	4 AA (LR6) alkaline batteries
Operating Temperature	32-104°F (0-40°C)

STORAGE CAPACITY FOR REFERENCE

Memory size		Photos in 320 x 240	Video in 320 x 240 (minutes)	MP3 song in 128kbps (minutes)
Internal Memory		1,000	2.5	50
Memory card	16 GB	320, 000	540	16,000
	32 GB	640, 000	1,080	32,000

NOTE: The above amounts are approximations. The actual capacity varies depending on the shooting environment.

The video length limit is 1.5 minutes per file when using Video Editor.

INCLUDED IN THIS PACKAGE

- One **GRWM Fashion Journal**
- One Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

 
NOTE: Please save this Instruction Manual as it contains important information.

Environmental Phenomena

Static electricity may cause the **GRWM Fashion Journal** to malfunction. In cases where the **GRWM Fashion Journal** is malfunctioning due to static electricity, remove the battery and reinstall it, and wait for 5 seconds. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

Removing the packaging locks:

- ① Turn the packaging lock anticlockwise several times.
- ② Pull out and discard the packaging lock.

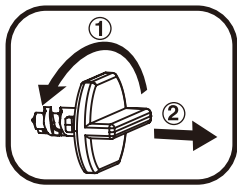

INSTRUCTIONS

 
 
WARNING:

Adult assembly required for battery installation.

Keep batteries out of reach of children.

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 4 new 1.5V AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).

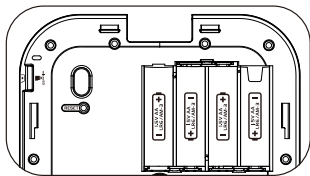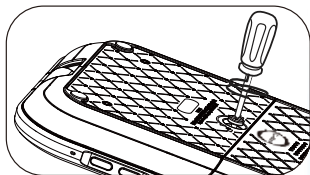

5. Replace the battery cover and tighten the screw to secure.

NOTE: This product is in 'Try me' mode in the packaging. To activate normal play mode, please refer to the "TO BEGIN PLAY" section of this guide.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

 
www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

MEMORY CARD INSTALLATION

- The **GRWM Fashion Journal** is compatible with microSD/microSDHC memory cards up to 32 GB.
- Make sure the journal is turned OFF.
- Locate the memory card slot inside the battery compartment.
- Insert the memory card (not included).
- Once the memory card is detected it will be used as the default memory source of the journal.
- Push the card once to eject.

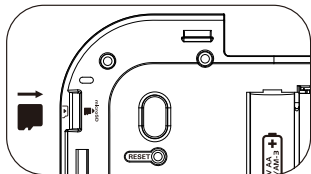

Note: To prevent accidental data loss, make sure you have backed up all important data from your memory card before using it.

PRODUCT FEATURES

1. Unlock Button

When you first set up the journal, you can enable face recognition for quick and secure access. Simply press the **Unlock Button** and look at the screen, following the on-screen instructions while holding the journal about 30 cm away so your face fits inside the circle. Once set up, you can unlock the journal just by showing your face. If you prefer, you can turn **Face Unlock OFF** anytime by going to **Tools & Settings** and selecting **Face Unlock OFF**. When **Face Unlock** is turned on, your face is required to open the journal. If it is turned off but a number password is enabled, pressing the **Unlock Button** will open the cover so you can enter your password. If both **Face Unlock** and the number password are turned off, pressing the **Unlock Button** will simply open the cover and turn on the journal.


Note: To turn the journal off, close the cover or hold down the **Unlock Button** for over one second any time.

2. RESET Button

When you first use the journal, you will need to activate normal mode. Press **Unlock button** to turn on the journal and then press the **RESET Button** until the screen shows the message “Normal Mode”.

Press this button to reset both the face unlock and number password. First, press **Unlock button** to turn on the journal and then press the **RESET Button**. The message “Face unlock and number password cleared” will be displayed on the screen. The journal will then turn on. The next time you turn the journal on, you will be asked to set the face unlock and number password again.

NOTE: A small tool, such as a paperclip, may be required to press the **RESET Button**.

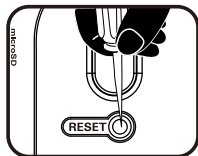

3. OK Button

Press this button to take a photo/video when in **Camera Mode**. Press this button in other activities to confirm your selection.

4. Camera Button







Press this button to open the camera and swap between **Photo and Video Mode**. You can view photos and videos you have taken in the **Gallery**.

5. MP3 Player Button

Press this button to enter **Music Mode**. **Play / Pause Button**: Press this button to enter the **Music Mode** or to play/pause the selected song.

6. Toggle Button (Star Button)

Press this button to select different options in **Camera Mode** and **Music Mode**. Once a option is chosen, release the **Toggle Button** and wait for 1 second. The journal will then enter the selected option.

Mode	Option
Photo Mode	<ul style="list-style-type: none">• Photo Mode • 5 seconds countdown with the camera • Take 5 photos continuously with the camera 
MP3 Player	<ul style="list-style-type: none">• Shuffle: Play the songs in the playlist randomly • Repeat: Repeat the selected song • Default Mode: Play the songs one by one, from the selected song to the end of the playlist 

7. Clock Button

Press the **Clock Button** to see the current date, time and day of the week. It will be displayed for several seconds before turning off.

8. Selection Dial

Turn the dial to choose your character or style when using the unit for the first time or during activities and games. In **MP3 Player Mode**, turn the dial to select a song.

9. 6 Category Buttons



Press one of the **Category Buttons** to choose one of the 6 categories: **Glamour Style Girl, My Fashion Journal, Get Ready With Me, Media Studio, Fashion Games, and Tools and Settings.**

10. 26 Letter Buttons



Press the **Letter Buttons** to write in your journal, enter text in the **Fashion Book**, or type in the typing game.

 
11. 10 Number Buttons



Press the **Number Buttons** to write in your journal or enter text in your **Fashion Book**.

12. 4 Arrow Buttons

Press these buttons to make a selection on the screen or to move in related activities.

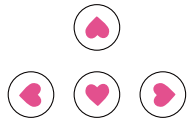

13. Enter Button

Press this button to confirm your selection.

14. Backspace Button

Press this button to delete what you've typed.

15. Shift Button

Hold down this button and a letter or number button to input a capital letter or a symbol.

16. Escape Button

Press this button to go back to the previous screen.

17. Options Button

Press this button to display a pop up bar with options that can be selected in certain activities.

18. Help Button

Press this button to get an instruction, or help in some activities

19. Emoticon Button

Press this button to add icons in your journal entries.

20. Symbol Button

Press this button to insert symbols in your journal entries and in a **Fashion Book**.

21. Save Button

Press this button to save your journal entry, photo, video, book cover and other information you've created. You can review photos, video and book covers in the **Gallery**.

22. Space Button

When typing, use this button to insert a space between words, letters or numbers.

23. Memory Card Slot microSD

Insert a microSD card (not included) here for memory expansion.

24. Supporting Stand

The product includes a stand at the bottom so it can stand upright.

25. Microphone

Speak into the microphone when recording a voice memo or playing a voice game.

26. Volume Buttons



Press these buttons to adjust the volume.

27. Flip Camera

Flip the camera up to take photos or videos, including selfies.



28. AUTOMATIC SHUT OFF

To preserve battery life, the **GRWM Fashion Journal** will automatically switch to **Clock Mode** after 75 seconds of no input, or when the battery power is low. The journal can be unlocked again by pressing the **Unlock Button**.

When the battery power is very low, a warning will be displayed on the screen as a reminder to change your batteries.

TO BEGIN PLAYING

Activating Normal Play Mode:

When you first use the **GRWM Fashion Journal**, you will need to activate normal play mode.

- 1) Open the battery cover. Then, find the **RESET Button** located next to the word **RESET**.
- 2) Press the **Unlock Button** to turn on the journal.
- 3) Press the **RESET Button** after the VTech logo screen.
- 4) The screen will display the message "**Normal Mode**". The cover will then open and you can begin using the journal.
- 5) If you turn off the journal, you will be asked to setup the face unlock option once the **Unlock Button** has been pressed and the cover is open.

Setting Face Unlock:

Press the **Unlock Button**, then ""Follow the steps so your journal can get to know you!" will be heard. Next, follow the below instructions and ensure your face is within the circle.

- The surrounding hearts will change to red one by one when your face is detected.
- If no face is detected, the hearts will stop filling. Adjust your face angle or position so the hearts continue to fill.

- Follow the face icon and mimic the different expressions:

Casual Face: 

Smiling Face: 

Laughing Face: 

Angry Face: 

Funny Face: 



Note: Please ensure your face is in the circle when setting face unlock.

Setting Number Password

If you successfully set face unlock, the cover will open and you will be asked to enter a 4 digit number password.

You will then be asked to repeat the number password.

If the number password is successfully set, you can begin using the journal. To change the number password, go to **Tools and Settings**.

If Face Unlock Is Already Set

A voice saying “Position your face in the circle” will be heard. Please keep your face in the circle until the process is finished.

If the journal recognises your face, you will hear a success sound, and the cover will open.

If the journal doesn't recognise you, or a face isn't detected, you will hear “Your face hasn't been detected.” and the cover will open for you to enter your number password. If the number password is correct, you can begin using the journal.

If the number password is incorrect, “Sorry, this isn't your journal” will be heard and the journal will turn off.

Important Note for Face Unlock

1. Make sure you are facing the journal and that your face is inside the circle when setting up or unlocking.




2. Avoid covering your eyebrows.



3. Try to hold the journal vertically.



4. If you're wearing glasses when setting **Face Unlock**, please always wear the same glasses when trying to unlock the journal. If the unlock process isn't working very well, please try setting face unlock with your glasses removed.

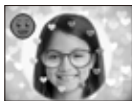

5. Please setup the **Face Unlock** option in good ambient lighting. Avoid setting **Face Unlock** in front of a direct light source or in low light conditions.



RESET the password

When the journal is turned on, you can press the **RESET Button** which is located inside the battery compartment. The screen will show "Face unlock and number password cleared", both **Face Unlock** and the number password will be cleared and the cover will then open. You'll be asked to go through the **Face Unlock** and number password setup process again the next time you turn the journal on.

Date and Time Settings

When you first use the journal, or change the batteries, you will need to set the date and time. You can change the clock background in **Tools and Settings**.

Press the **Save Button** or choose **Enter** to confirm the setting.

ACTIVITIES:

The **VTech® GRWM Fashion Journal** has a total of 20 activities to play.

CAMERA

Press the **Camera Button** to open the camera, then you can press **OK/Enter button** to take photos and videos. Press the button again to change between **Photo and Video Mode**.

In **Photo Mode**: press the **Toggle (Star) Button** to change the option. Press the **OK/Enter Button** to take a photo.

In **Video Mode**: Press the **OK/Enter Button** to start or stop recording a video.

If the journal's memory is full, you can insert a microSD card to expand the journal's memory capacity. You can view photos and videos you have taken in the Gallery.

MP3 PLAYER

Press the **MP3 Player Button** to enter **Music Mode**. Turn the **Selection Dial** or press the **Arrow Buttons** to choose a song. Press the **Toggle Button** (Star Button) to change the option. If a microSD card is inserted, you can select songs from both the internal memory and the microSD card.

You can copy a song or all songs from the unit onto a microSD card. If the journal's memory is full, you can insert a microSD card to expand the journal's memory capacity.

CATEGORY 1: GLAMOUR STYLE GIRL

There are two activities to choose from:

1. DRESS-UP FANTASY

You can change the background image, clothes, and hair accessories.

1) Select a look, 2) Background

Press the **Arrow** and **Enter Buttons** to select and press the **Save Button** or choose the **Save Icon** to save your new picture into the **Gallery** to review later.



2. GLAM CAM

You can use **Arrow Buttons** and press the **Enter Button** to adjust the shape, size and positioning of each girl using the options below, then choose the OK icon to take a photo with your chosen girl.

CATEGORY 2: MY FASHION JOURNAL

Select a date, then create your journal entry using text and special icons. You can also add a photo, video, or voice memo. Once your entry is saved, you can review, edit, or search for it anytime.

Create a New Journal Entry

1. Select the Date

Use the **Arrow Buttons** to select the day and month of your journal entry, then press **Enter/OK** to confirm.

 


2. Enter Information

Select the weather and your mood.

3. Enter Content

Write your secret journal entry using the letters and numbers on the keyboard. Press the **Emoticon Button** to add icons or the **Symbol Button** to insert symbols. Press the **Options Button** to add a photo or video, record a voice memo, change the background, or delete the entire journal entry. Press the **Save Button** to save your journal.

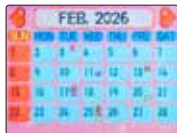

Review a Journal Entry

The current month will be displayed as a calendar. Use the **Arrow Buttons** to select a date with an icon, then press **Enter/OK** to view the journal entry. Press the Up or Down **Arrow Buttons** to scroll through the entry and see any attached pictures. If the entry includes a photo, video, or voice memo, press the **Left or Right Buttons** to review them one at a time. Press the **Options Button** to search for journal entries by date, or to edit or delete an entry.



CATEGORY 3: GET READY WITH ME

There are six activities to choose from:

1. Fitting Room

First, take a photo of your face or select a default face. Then select your skin tone and start dressing up your character using different categories of items.

Choose from different categories to style your look: 1) My Own Pattern, 2) Hair Accessories, 3) Hairstyles, and 4) Clothes. You can also change your skin tone or update your face photo using the **Skin Colour** and **Face Photo** options. Use the **Arrow Buttons** and **Enter/OK Button** to make your selections. When finished, press the **Save Button** or select the **Save Icon** to store your picture in the **Gallery** for later viewing.



2. Makeup

Select a photo from the **Gallery** or take a new photo by positioning your face within the mask shown on the screen. You can add makeup using the following options: 1) Blusher, 2) Eye Shadow, 3) Lipstick, 4) Mascara, and 5) Others. Each item can be adjusted for shape, size, and position. Press the **Options Button** to view the option list, then use the **Arrow Buttons** and **Enter/OK Button** to make your selections. Press the **Save Button** to save your new photo. Saved pictures can be viewed in the **Gallery**.



3. Nail Styler

You can decorate all five nails using different options, including nail shape, nail polish colour, and nail patterns or stickers. You can also change the skin tone of the hand using the **Skin Colour** option and choose a specific nail to decorate using the **Select a Nail** option. Use the **Arrow Buttons** and **Enter/OK Button** to make your selections, then press the **Save Button** to save your new photo. Saved pictures can be viewed in the **Gallery**.



4. My Fashion Book

When you enter this activity, **Add New** and **Book List** (if any) will appear on the screen. Use the **Arrow Buttons** to view existing books and press the **Options Button** to edit or delete a book. If you choose **Add New**, you can select a template, enter your book content, and add a photo. Press the **Save Button** or select the **Save Icon** to save the book in this activity and in the **Gallery**. When adding or changing a photo, you can also adjust its size and position.



5. Model Magic

When you enter this activity, you can choose **Add New** or review your saved magazine covers. If you select **Add New**, you can take a photo by following a selected pose or choose a photo from your saved pose photos. Follow the pose on the screen to take your picture, and it will appear on a magazine cover. Use the **Arrow Buttons** and **Enter/OK Button** to make your selection, then press the **Save Button** to save the selected magazine cover into this activity or **Gallery**. When reviewing saved covers, you can delete a single cover or delete all covers.



6. Fashion Freestyle

There are two sub-activities for selection.

1) Makeup: Choose an event and take a photo of your face. Based on the selected event, you will receive makeup suggestions. You can adjust the shape, size, and position of each makeup item.

Press the **Options Button** to view the option list. Use the **Arrow Buttons** and **Enter/OK Button** to make your selections, then press the **Save Button** to save your new picture. Saved pictures can be viewed in the **Gallery**.



2) **Wardrobe Consultant:** Take photos of your clothes, shoes, and accessories in their corresponding categories and they will be automatically marked with a star for styling. The photos will be saved in the **Wardrobe**, where you can review or delete them at any time. After taking and starring some items, use the **Arrow Buttons** and **Enter/OK Button** to select **Magic Mirror**, which will give you outfit suggestions. There are six categories: **Tops, Bottoms, One Piece, Coats, Shoes, and Accessories.**

CATEGORY 4: MEDIA STUDIO

There are four activities to choose from:

1. Photo Editor

Select a photo from the **Gallery** or take a new photo by positioning your face within the mask shown on the screen. You can then dress up your photo using different categories of items: 1) **Frames**, 2) **Hair Accessories**, 3) **Glasses**, 4) **Earrings**, 5) **Necklaces**, 6) **Face Accessories**, and 7) **Stickers**. Each item can be adjusted for shape, size, and position. Press the **Options Button** to view the option list. Use the **Arrow Buttons** and **Enter/OK Button** to make your selections, then press the **Save Button** to save your new picture. Saved pictures can be viewed in the **Gallery**.



2. Video Editor

Select a special effect to create a new video. Options include 1) **Add Background Music**, 2) **Add Border**, and 3) **Speed Up or Slow Down**. You can add music to your video, apply a cool frame, or adjust the playback speed. Use the **Arrow Buttons** to choose an effect, then press the **Enter/OK Button** to start recording. Press the **Enter/OK Button** again to stop recording. You can then review the video and press the **Save Button** or select the **Save icon** to save it. Saved videos can be viewed in the **Gallery**.



3. Animation Station

Position your face inside the mask shown on the screen and take a photo of yourself or a friend, or choose a default face. You can then record a voice memo to match the picture and watch a fun animation featuring the face and voice. If no voice memo is recorded, a melody will play during the animation. Use the **Arrow Buttons** to make a selection and press the **Enter/OK Button** to confirm.



4. Gallery

Here you can browse all the photos and videos you have taken by using the **Arrow Buttons**. Press the **Options Button** to delete the selected photo or video, or to delete all photos and videos. You can also back up your photos and videos by copying them from the journal to a microSD card. If the journal's memory is full, inserting a microSD card will expand the journal's storage capacity.



CATEGORY 5: FASHION GAMES

There are 5 mini games to play.

1. Glamour Type

Spell the words or sentences to make the model walk on the runway. Press the letter buttons on the QWERTY keyboard to type the words or sentences. When all the words or sentences have been typed in, a rewarding animation will play and show your score. There are 2 different difficulty levels. You can choose a level to play.

Level 1: Type fashion words.

Level 2: Type sentences.



2. Matching Fun

Use the **Arrow Buttons** to select two adjacent items and press the **Enter/OK Button** to swap them. Match three or more identical items in a row or column to make them disappear. When items disappear, the ones above will move down to fill the space. Try to clear as many items as possible within the given time. When a girl icon appears, select it to make all related items disappear.



3. Guess the Password

Guess the correct four-colour jewel sequence to unlock the box. Use the **Arrow Buttons** to choose a jewel, then press the **Enter/OK Button** to confirm. Press the **Help Button** for a hint or instructions. A white heart means the colour and position are correct, while a black heart means the colour is correct but the position is wrong.



4. Voice Changer

Talk into the microphone and your voice can be played back with different effects. Press the **Enter/OK Button** to start talking to the robot. Use the **Arrow Buttons** to choose an effect, then press the **Enter/OK Button** to play your voice with the effect.



5. Magic Teller

Look into the crystal ball and press the **Enter/OK Button** to reveal your lucky items! The following will be shown:

Lucky Colour.

Lucky Animal.

Lucky Number.

Lucky Pals.

Words of Wisdom.



CATEGORY 6: TOOLS AND SETTINGS

There are 9 settings in **Tools and Settings** to choose from:



1. Contrast, Volume, and Background Music

Use the **Arrow Buttons** to adjust the volume and screen brightness. You can also turn the background music on or off. Press the **Enter/OK Button** or the **Save Button** to save your changes.

2. Alarm

Use the **Arrow Buttons** to select the alarm time and alarm sound, or record your own alarm sound. Press the **Enter/OK Button** or the **Save Button** to save your settings. When the alarm is set and activates, an alarm animation will appear along with the selected sound.

3. Date and Time

Use the **Arrow Buttons** to select the date and time. Press the **Enter/OK Button** or the **Save Button** to save your changes. Once the date and time are set, they will appear on the screen in sleep mode when you press the **Clock Button**.

4. Clockface

Use the **Arrow Buttons** to choose different clock backgrounds from the Clock Background folder or the Gallery. Press the **Enter/OK Button** or the **Save Button** to save your changes.

5. Number Password

Use this option to turn the number password on or off, or to change your password. Press the **Arrow Buttons** to enable or disable the number password. To change it, enter your current 4-digit password using the **Number Buttons**, then enter your new password.

6. Face Unlock

Use the **Arrow Buttons** to select **ON** if you want to unlock the journal using face recognition. If you select **OFF**, face unlock will be disabled. When the **Unlock Button** is pressed, the unit cover will open.

7. Event Alert

Use the **Arrow Buttons** to set the date and time for a special event. Press the **Letter Buttons** or **Number Buttons** to enter the event details. Press the **Enter/OK Button** or the **Save Button** to save your settings. When the event time arrives, a pop-up reminder will appear with the details you entered, along with a sound.

8. Music Player Auto-off Timer

Use the **Arrow Buttons** to select a timer, then press the **Enter** or **Save Button** to confirm your settings. Once a timer is set, the **Music Player** will automatically turn off when the selected time ends.

9. Memory Settings

Here you can check how much storage space is available on your journal , and you can also perform a Factory Reset for the journal. If a memory card is inserted, the remaining space on the card will also be displayed , and you can perform Formatting for the memory card here. Please note that a Factory Reset will delete all your personal data from the journal, and a Formatting will delete all saved files, photos, and videos from microSD card.

CARE & MAINTENANCE

1. Keep the journal clean by wiping it with a slightly damp cloth.
2. Keep the journal out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the journal is not in use for an extended period of time.
4. Do not drop the journal on a hard surface and do not expose the journal to excess moisture.

TROUBLESHOOTING

Go through this section if you experience difficulty in operating the **GRWM Fashion Journal**.

Problem	Solution
Journal has stopped working.	<ol style="list-style-type: none"> 1. Let the journal sit for a few minutes without batteries, then replace the batteries. 2. Turn the journal ON. It should now work properly. 3. If the journal does not work, install a brand new set of batteries.
Image taken is not clear.	<ol style="list-style-type: none"> 1. Make sure the journal is held steady. 2. Make sure the lighting conditions of the shooting environment are good. 3. Check to see if the camera lens protection window is clean.
Memory card can't be detected.	<ol style="list-style-type: none"> 1. Check if the memory card is correctly inserted. 2. Check to see if the memory card is the supported type. The journal can only support a microSD or microSDHC card. 3. Check to see if the file system of your memory card is FAT or FAT32, GRWM Fashion Journal does not support NTFS or exFAT file systems. You should back up all important data from your memory card and format it in either the FAT or FAT32 file system before using in your GRWM Fashion Journal.
Cannot save files.	<p>Check if the memory card is full. If there is no memory card inserted, check the GRWM Fashion Journal internal memory.</p>
Screen displays incorrectly.	<p>Turn off the journal and let it sit for a few minutes without batteries, then replace the batteries.</p>

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech**[®] products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

Contact VTech

Tel: 0330 678 0149 (from UK)

+44 330 678 0149 (outside UK)

1800 862 155 (Aus) / 0800 400 785 (NZ)

www.vtech.co.uk

www.vtech.com.au

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

