

vtech®

User's Manual

Toot-Toot Friends™

Magical Unicorn



© 2016 VTech
All rights reserved
Printed in China
91-003227-008 UK

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years

 


To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTech® Toot-Toot Friends™ Magical Unicorn!**

Soar through the kingdom with the **Magical Unicorn** from the **VTech® Toot-Toot Friends™** kingdom. Press Twinkle's heart button to see her walk, move her head and flap her wings. Place the included **MagicPoint** character on one of the two **MagicPoint** locations to trigger fun phrases, sounds, motion and lights.

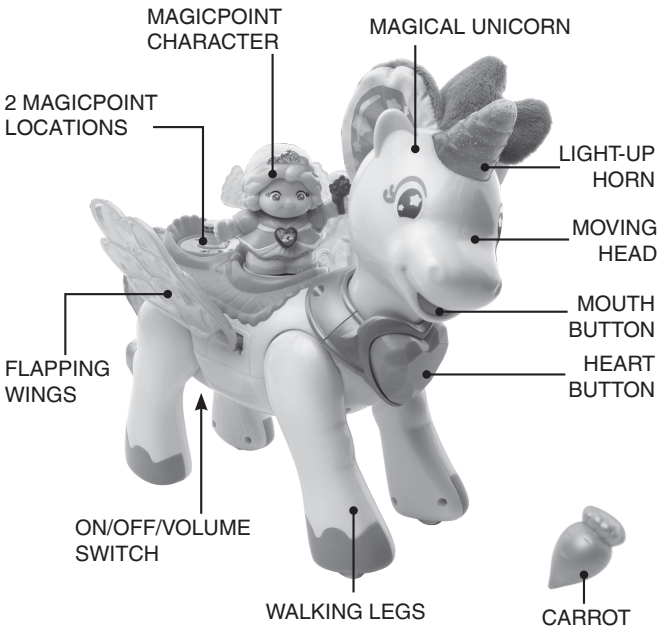

INCLUDED IN THIS PACKAGE

 
NOTE: This toy is not intended for teething.

- One VTech® Toot-Toot Friends™ Magical Unicorn
- One MagicPoint character - Prisma
- One Carrot



Unlock the packaging locks:

There is one packaging lock located on this product.

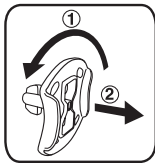

To unlock the packaging lock:

- ① Rotate the packaging lock 90 degrees anticlockwise.
- ② Pull out the packaging lock.

WARNING:

 
 
All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this manual as it contains important information.

GETTING STARTED


BATTERY INSTALLATION - CHARACTER

1. Make sure the unit is **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screws.
3. Install 2 new AAA size (LR03/AM-4) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
4. Replace the battery cover and tighten the screws to secure.

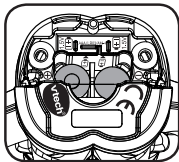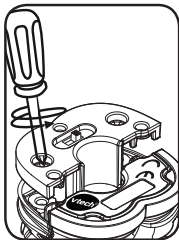

BATTERY INSTALLATION - UNICORN

 1. Make sure the unit is **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw.
3. Install 4 new AA size (LR6/AM-3) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
4. Replace the battery cover and tighten the screw to secure.

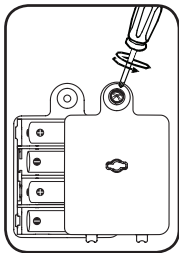

ACTIVATE NORMAL PLAY MODE

By default, this product will be in 'Try me' mode. To activate normal play mode, please follow these steps to exit the try-me mode:

1. Turn on the Unicorn and the included **MagicPoint** character - Prisma.
2. Insert the character onto the Unicorn's front **MagicPoint** location to activate normal play mode.

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

 
PRODUCT FEATURES

PRODUCT FEATURES - CHARACTER

1. ON/OFF SWITCH

The **ON/OFF SWITCH** is located on the bottom of the character.

To turn the unit **ON**, slide the **ON/OFF SWITCH** to the **ON** (⏻) position. To turn the unit **OFF**, slide the **ON/OFF SWITCH** to the **OFF** (●) position.

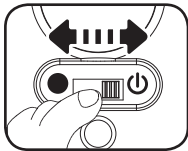

2. AUTOMATIC SHUT-OFF

 
To preserve battery life, the **VTech® Toot-Toot Friends™** character will automatically power down after several minutes of no usage. The unit can only be turned on again by pressing the **LIGHT-UP BUTTON** or placing it on a **MagicPoint** location.

The **LIGHT-UP BUTTON** will flash several times and power down when the unit's battery level is low. Replace with a new set of batteries.

PRODUCT FEATURES - UNICORN

1. ON/OFF/VOLUME SWITCH

The **ON/OFF/VOLUME SWITCH** is located on the bottom of the Unicorn. To turn the unit **ON**, slide the **ON/OFF/VOLUME SWITCH** to **LOW** or **HIGH VOLUME** (🔊 🔊)). To turn the unit **OFF**, slide the **ON/OFF/VOLUME SWITCH** to the **OFF** (●) position.

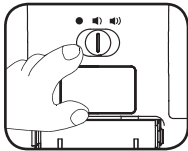

2. UNICORN BUTTONS

The Unicorn has a **HEART BUTTON** and a **MOUTH BUTTON**. Press the buttons to see Twinkle move her head, walk and flap her wings.



 
3. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Toot-Toot Friends™ Magical Unicorn** will automatically power down after several minutes of no input. The Unicorn can be turned on again by pressing the **HEART BUTTON**, **MOUTH BUTTON** or by placing the included **MagicPoint** character on, or by removing it from the front **MagicPoint** location.

Note: If the unicorn powers down while playing, we suggest to replace the batteries with a new set.

ACTIVITIES - CHARACTER

1. Press the character's **LIGHT-UP BUTTON** to hear phrases, songs, melodies and fun sounds. The light will flash with the sounds.
2. Place the character on one of Twinkle's two **MagicPoint** locations to hear phrases, fun sounds and sing-along songs. The character can also interact with other selected **VTech® Toot-Toot Friends™** playsets (each sold separately).

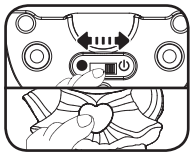

ACTIVITIES - UNICORN

1. Press the **HEART BUTTON** to hear melodies and to see Twinkle shake her head, walk and flap her wings. The horn will also light-up in multiple colours.
2. Press the Carrot to Twinkle's **MOUTH BUTTON** to trigger responses.



3. Place the included **MagicPoint** character on the front **MagicPoint** location to trigger fun phrases, sounds, motion and lights.



4. Place the included **MagicPoint** character on the back **MagicPoint** location to hear fun responses.



CARE & MAINTENANCE

1. Keep the unit and its metal parts clean by wiping them with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions while playing with the **MagicPoint** accessory, please remove the character from the accessory and place the character back onto the **MagicPoint**.

If the unit still isn't functioning, or if for some reason the unit stops working or malfunctions on its own, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

TECHNICAL SUPPORT

If you have a problem that cannot be solved by using this manual, we encourage you to visit us online or contact our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to assist you.

Before requesting support, please be ready to provide or include the information below:

- The name of your product or model number (the model number is typically located on the back or bottom of your product).
- The actual problem you are experiencing.
- The actions you took right before the problem started.

Internet: www.vtech.co.uk

Phone: 01235 546810 (from UK), or +44 1235 546810 (outside UK)

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 01235 546810 (from UK) and +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.



**CLASS 1
LED PRODUCT**



PRODUCT REGISTRATION

Visit www.vtech.co.uk/clubvtech/login
to register your VTech product

By joining the VTech Club you can also enter competitions, find out about news and events, seek expert advice for parents and let your kids play fun learning games and activities.



PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor). Please include details of the fault together with your name and address.
9. To keep an online record of your warranty, please register your product online at www.vtech.co.uk/warranty

Vtech Electronics EU PLC, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, West Hallam, DE7 6HE

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

