

vtech®

Parent's Guide

# Secret Safe<sup>™</sup>

## Diary Selfie Music<sup>™</sup>



91-003512-006 (UK)

**VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...**

## **vtech** Baby

**Toys that will stimulate their interest in different textures, sounds and colours**

### **I am...**

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



## **Pre-School**

**Interactive toys to develop their imagination and encourage language development**

### **I want...**

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



## **Electronic Learning Computers**

**Cool, aspirational and inspiring computers for curriculum related learning**

### **I need...**

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning


...National Curriculum based content to support what I'm learning at school

4-10 years



# INTRODUCTION

Protect your secrets without the worry of prying eyes! The diary will unlock when it sees your face! Features front and rear cameras for selfies, photos and videos. The diary also includes a built-in music player, a colourful screen, alarm clock, address book and more! 20 great activities include 3 virtual pets, the My Stylist application and games that challenge your typing, maths and logic skills! Connect to a PC or use a microSD card to transfer your songs onto the diary!

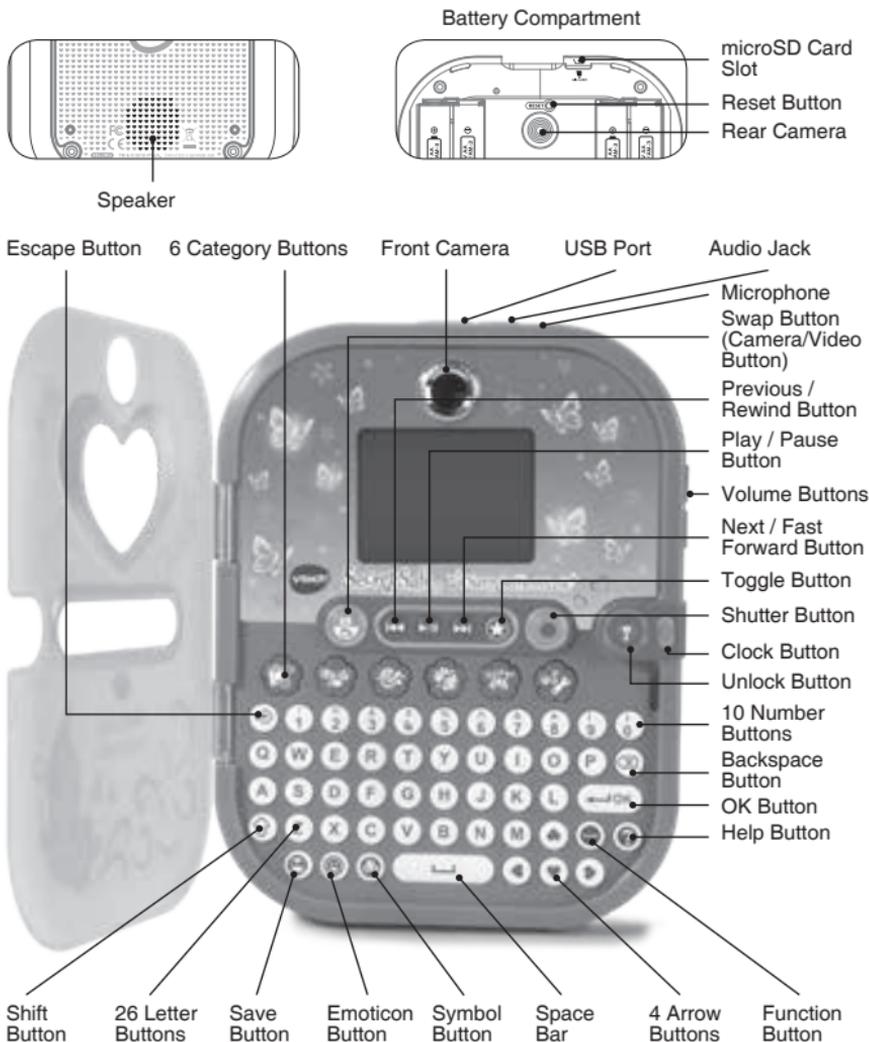

# PRODUCT SPECIFICATIONS

<b>Display</b>	2.4" TFT colour LCD
<b>Photo Resolution</b>	320 x 240
<b>Video Resolution</b>	320 x 240 pixel
<b>Video Length limit per file</b>	30 minutes when using a microSD card
<b>Focus Range</b>	1.5 feet - ∞
<b>Internal Memory</b>	128MB built-in memory (Shared with program data; actual memory available for user storage will be less)
<b>File Format</b>	Photos: Standard Baseline JPEG Video: AVI (Motion JPEG) Songs and Voice Memo: MP3
<b>Memory Card Format and Capacity</b>	microSD / microSDHC card (not included) with capacity from 1GB-32GB are recommended
<b>Connectivity</b>	USB 2.0 cable (not included) for computer connection
<b>Batteries</b>	4 AA (LR6) alkaline batteries
<b>Operating Temperature</b>	32-104°F (0-40°C)

## STORAGE CAPACITY FOR REFERENCE

Memory size	Photos in 320 x 240	Video in 320 x 240 (minutes)	MP3 song in 128kbps (minutes)	
Internal Memory	1,200	3	60	
Memory card	2 GB	40,000	67	2,000
	4 GB	80,000	135	4,000
	8 GB	160,000	270	8,000
	16 GB	320,000	540	16,000
	32 GB	640,000	1,080	32,000

**NOTE:** The above amounts are approximations. The actual capacity varies depending on the shooting environment.  
The video length limit is 1.5 minutes per file when using Video Editor.

# INCLUDED IN THIS PACKAGE

- One VTech® Secret Safe Diary Selfie Music
- One parent's guide
- One quick start guide

## WARNING:


All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

**NOTE:** Please keep this parent's guide as it contains important information.

This product is only to be connected to equipment of Class II (marked on the marking plate with a symbol: )

## Unlock the packaging locks:

- ① Turn the packaging lock anticlockwise several times.
- ② Pull out and discard the packaging lock.


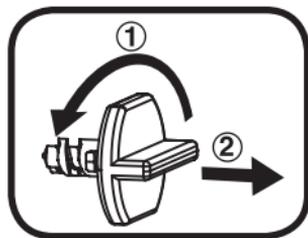


# GETTING STARTED

## BATTERY INSTALLATION

Secret Safe Diary Selfie Music uses 4 AA size batteries.

- Make sure the diary is turned OFF.
- Locate the battery cover on the back of the diary.
- Open the battery cover.
- Install 4 new AA batteries as illustrated. (The use of new, alkaline batteries is recommended for maximum performance).
- Replace the battery cover.

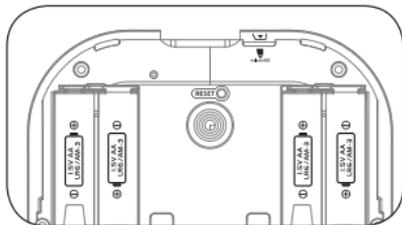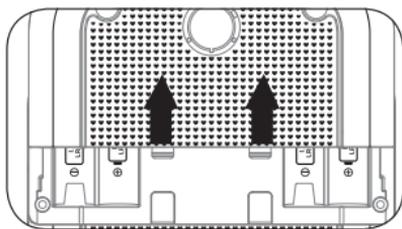

**NOTE:** This product is in 'Try me' mode in the packaging. To activate normal play mode, please refer to the "TO BEGIN PLAY" section of this guide.

# BATTERY NOTICE

## Note:

1. The time and date will be reset each time the batteries are replaced. When you next turn on the diary, you will be asked to set the time and date.
  2. Do not remove the batteries when the diary is on as it could cause data loss or an error in the program.
- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
  - Use only batteries of the same or equivalent type as recommended.
  - Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
  - Do not use damaged batteries.
  - Insert batteries with the correct polarity.
  - Do not short-circuit the battery terminals.
  - Remove exhausted batteries from the toy.
  - Remove batteries during long periods of non-use.
  - Do not dispose of batteries in fire.
  - Do not charge non-rechargeable batteries.
  - Remove rechargeable batteries from the toy before charging (if removable).
  - Rechargeable batteries are only to be charged under adult supervision.

## Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.


For more information, please visit:

[www.recycle-more.co.uk](http://www.recycle-more.co.uk)

[www.recyclenow.com](http://www.recyclenow.com)

# MEMORY CARD INSTALLATION

- The diary is compatible with microSD/microSDHC memory cards up to 32 GB.
- Make sure the diary is turned OFF.
- Locate the memory card slot inside the battery compartment.
- Insert the memory card (not included).
- Once the memory card is detected it will be used as the default memory source of the Diary.
- Push the card once to eject.

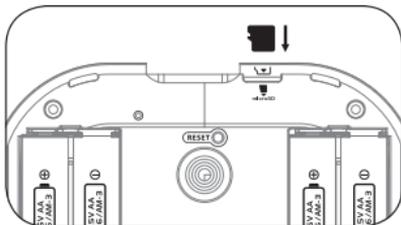

**Note:** To prevent accidental data loss, make sure you have backed up all important data from your memory card before using it.

## PRODUCT FEATURES

### 1. Unlock Button

Press this button to unlock the diary using the face unlock function. Just look into the screen and follow the instructions. Keep about 30cm between your face and the camera to ensure your face is fully shown in the circle. You can now setup face unlock and unlock the diary with your face. You can turn the face unlock function off by entering My Tools and selecting face unlock OFF.


With the face unlock function turned ON, you will need to show your face to unlock the diary. With it turned OFF and number password turned ON, pressing the Unlock Button will open the cover so you can enter your number password to access the diary. With the face unlock function and number password turned OFF, pressing the Unlock Button will open the cover and turn on the diary.

**Note:** To turn the diary off, close the cover or press the Unlock Button during the number password or face recognition process.

## 2. RESET Button

When you first use the diary you will need to activate normal play. Press the Unlock Button and then press the RESET Button until the screen shows the message 'Normal Mode'.

Press this button to reset both the face unlock and number password. First, press the Unlock Button and then press the Reset Button. The message "Face unlock and number password cleared" will be displayed on the screen. The diary will then turn on. The next time you turn the diary on, you will be asked to set the face unlock and number password again.

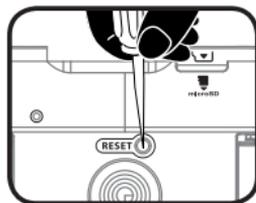

**NOTE:** A small tool, such as a paperclip, may be required to press the RESET button.

## 3. Shutter Button

Press this button to enter Camera Mode. Press it again to take a photo or a video.

You can view photos and videos you have taken in the Gallery.

## 4. Swap Button (Camera/Video Button)

Press this button to swap between Photo and Video mode.

## 5. 3 Music Buttons

Press these buttons to enter Music Mode

**Play / Pause Button:** Press this button to enter the music mode or to play/pause the selected song.

**Next / Fast Forward Button:** Press this button to go to the next song or hold this button to fast forward the song.

**Previous / Rewind Button:** Press this button to go to the previous song or hold this button to rewind the song.

## 6. Toggle Button (Star Button)

Press this button to select different functions in Camera, Video and Music Mode. Once a function is chosen, release the Toggle Button and wait for 1 second. The diary will then enter the selected function.

Mode	Function
Camera	<ul style="list-style-type: none"> <li>• Rear facing camera </li> <li>• Front facing camera </li> <li>• 5 seconds countdown with rear facing camera </li> <li>• 5 seconds countdown with front facing camera </li> <li>• Take 5 photos continuously with rear facing camera </li> <li>• Take 5 photos continuously with front facing camera </li> </ul>
Video	<ul style="list-style-type: none"> <li>• Rear facing camera </li> <li>• Front facing camera </li> </ul>
Music Player	<ul style="list-style-type: none"> <li>• Shuffle: Play the songs in the playlist randomly </li> <li>• Replay: Play the entire playlist again </li> <li>• Repeat: Repeat the song </li> <li>• Default mode: Play the songs one by one, from the selected song to the end of the playlist </li> </ul>

## 7. Clock Button

Press the Clock button to see the current date, time and day of the week. It will be displayed for several seconds before turning off.

## 8. 6 Category Buttons

Press one of the Category Buttons to choose one of the 6 categories:

My Photo and Voice Diary, My Pet Friend, My Stylist, Media Mania, My Games and Activities, My Tools.



## 9. 26 Letter Buttons

Press the Letter buttons to write in your diary and enter information in My Address Book, or to type in games.



## 10. 10 Number Buttons

Press the number buttons to write in your diary and enter information in My Address Book.



## 11. 4 Arrow Buttons

Press these buttons to make a selection on the screen or to move in related activities.



## 12. OK Button



Press this button to confirm your selection.

## 13. Backspace Button



Press this button to delete what you've typed.

## 14. Shift Button



Hold down this button and a letter or number button to input a capital letter or a symbol.

## 15. Escape Button



Press this button to go back to the previous screen.

## 16. Function Button



Press this button to display a pop up bar with functions that can be selected in certain activities.

## 17. Help Button



Press this button to repeat the current question or instruction, or to get help in some activities.

## 18. Emoticon Button



Press this button to add icons in your diary entries and in My Address Book.

## 19. Symbol Button



Press this button to insert symbols in your diary entries and in My Address Book.

## 20. Save Button



Press this button to save your diary entry, photo, video and other information you've created.

## 21. Space Bar

When typing, use this button to insert a space between words, letters or numbers.

## 22. USB Port

Plug a USB cable (not included) into the USB port to connect the diary to a computer for file transfers.

## 23. Memory Card Slot microSD

Insert a microSD card (not included) here for memory expansion.

## 24. Supporting Stand

The product has a supporting stand at the bottom to allow it to stand upright.

## 25. Audio Jack

You can insert earphones or headphones (not included) here to listen to songs and more.

## 26. Microphone

Speak into the microphone when recording a voice memo or playing a voice controlled game.

## 27. Volume Buttons

Press these buttons to adjust the volume.

## 28. AUTOMATIC SHUT OFF

To preserve battery life, the **Secret Safe Diary Selfie Music** will automatically switch to clock mode after several minutes without input, or when the battery power is low. The diary can be unlocked again by pressing the Unlock button.

When the battery power is very low, a warning will be displayed on the screen as a reminder to change your batteries.

## CONNECTING TO A COMPUTER

You can connect the **Secret Safe Diary Selfie Music** to a PC or Mac computer using a USB cable (not included). Once connected, you can transfer files between the diary and computer. Please follow the below steps to make the connection.

- Turn the diary **OFF** before connecting to a computer.

- Pull up the rubber cover of the USB port at the top of the diary.
- Insert the USB cable (small end) into the USB port of the diary.
- Insert the larger end of the USB cable into a USB port on your computer. A USB port is usually marked with this symbol: 
- Two removable drives called "**VTech 1636**" and "**VT SYSTEM**" will appear. "**VTech 1636**" is for storage of your data. "**VT SYSTEM**" is for storage of system data and cannot be accessed.

**Note:** If there is a memory card in the **Secret Safe Diary Selfie Music**, the removable drive will show the content in the memory card only.

### To avoid any potential damage to your Secret Safe Diary Selfie Music

- When a USB cable is not connected to the diary, please ensure that the USB rubber cover is fully covering the USB port of the diary.



### NOTE:

Once the diary is connected to your computer, do not insert or remove a memory card and do not disconnect the diary while files are transferring. After you have finished, remove the diary by following the steps to safely remove hardware from your computer. You can then physically disconnect the diary from the computer.

To backup data from the diary, copy and paste your data onto a location on your computer.

### To back up photo or video files taken by the diary:

- Locate and open the DCIM folder in the removable drive **VTech 1636**.
- Your photo and video files will be placed in subfolders inside the **100VTECH** folder. Copy and paste your photo and video files onto a location on your computer for back up.

### To back up song MP3 files:

- Locate and open the **MUSIC** folder in the removable drive **VTech 1636**.
- Copy and paste the files to a location on your computer for back up.

### **To back up voice files recorded by the diary:**

- Locate and open the **VOICE** folder in the removable drive **VTech 1636**.
- Copy and paste the files to a location on your computer for back up.

### **To transfer photo or video files to the diary:**

- Select the photo or video files you would like to transfer from your computer first.
- Locate and open the **DOWNLOAD** folder in the removable drive **VTech 1636**, then copy and paste the photo files into the **PHOTO** subfolder, or **VIDEO** subfolder for video files.

### **To transfer song MP3 files to the diary:**

- Select the MP3 song files you would like to transfer from your computer first.
- Copy and paste the song files into the **MUSIC** folder.

## **SYSTEM REQUIREMENTS FOR COMPUTER CONNECTION:**

Microsoft® Windows® 7, Windows® 8 or Windows® 10.

macOS version 10.7, 10.8, 10.9, 10.10, 10.11, 10.12 or 10.13.

Microsoft® and Windows logos are trademarks of Microsoft Corporation in the United States and other countries. Macintosh and Mac logos are trademarks of Apple Inc. in the United States and other countries. All other trademarks are the property of their respective owners.

## **TO BEGIN PLAY**

### **Activating Normal Play Mode:**

When you first use the diary, you will need to activate normal play mode.

- 1) Open the battery cover. Then, find the **RESET** Button located next to the word **RESET**.
- 2) Press the **Unlock** Button to turn on the diary.
- 3) Press the **RESET** Button after the **VTech** logo screen.
- 4) The screen will display the message 'Normal Mode'. The cover will then open and you can begin using the diary.
- 5) Once the cover is closed and the **Unlock** Button has been pressed, you will be asked to setup the face unlock function.

## Setting Face Unlock:

Press the Unlock button, then “Follow the instructions so the diary can learn who you are” will be heard. Next, follow the below instructions and ensure your face is within the circle.

- The surrounding hearts will change to red one by one when your face is detected.
- If no face is detected, the hearts will stop filling in. Adjust your face angle or position to make sure the hearts keep filling in.
- Follow the face icon and mimic the different expressions:

Casual Face:



Smiling Face:



Laughing Face:



Angry Face:



Funny Face:



**Noted:** Please ensure your face is in the circle when setting face unlock.

## Setting Number Password

If you successfully set face unlock, the cover will open and you will be asked to enter a 4 digit number password.

You will then be asked to repeat the number password.

If the number password is successfully set, you can begin using the diary. To change the number password, go to My Tools.

## IF FACE UNLOCK IS ALREADY SET

A voice saying “Position your face in the circle” will be heard. Please keep your face in the circle until the process is finished.

If the diary recognises your face, you will hear “hello, welcome back!” and the cover will open.

If the diary doesn't recognise you, or a face isn't detected, you will hear “Your face hasn't been detected.” and the cover will open for you to enter your number password. If the number password is correct, you can begin using the diary.

If the number password is incorrect, “Sorry, this isn't your diary” will be heard and the diary will turn off.

# Important Note for Face Unlock

1. Please ensure you are fully facing the diary and that your face is in the circle when setting and unlocking.



2. Avoid covering your eyebrows.



3. Try to hold the diary vertically.



4. If you're wearing glasses when setting face unlock, please always wear the same glasses when trying to unlock the diary. If the unlock process isn't working very well, please try setting face unlock with your glasses removed.



5. Please setup the face unlock function in good ambient lighting. Avoid setting face unlock in front of a direct light source or in low light conditions.



## RESET the password

When the diary is turned on, you can press the RESET Button which is located inside the battery compartment. The screen will show "Face unlock and number password cleared", both face unlock and the number password will be cleared and the cover will then open.

You'll be asked to go through the face unlock and number password setup process again the next time you turn the diary on.

## **Date and Time Settings**

When you first use the diary, or change the batteries, you will need to set the date and time. You can also change the clock background here. Press the Save Button or choose OK to confirm the setting.

## **ACTIVITIES:**

The **VTech® Secret Safe Diary Selfie Music** has a total of 20 activities to play.

## **CAMERA**

Press the Shutter Button to enter Camera Mode. In this mode you can take photos and videos. Press the Swap Button to change between photo and video mode.

In Photo mode: press the Toggle (Star) button to change the function. Press the Shutter button to take a photo.

In Video mode: Press the Toggle (Star) button to change the function. Press the Shutter Button to start or stop recording a video.

If the diary's memory is full, you can insert a microSD card to expand the diary's memory capacity.

You can view photos and videos you have taken in the Gallery.

## **MUSIC PLAYER**

Press the Play / Pause Button to enter Music Mode and select a song to listen to. Press the Toggle Button (Star Button) to change function. Press the Next / Fast Forward Button or Previous / Rewind Button to quickly go to a different section of the song.

If there is a microSD card inserted into the diary, you can select a song to listen to from both the internal memory and the microSD card memory.

You can transfer new songs from a computer and save them onto the diary. You can also backup your songs by copying them to a computer.

If the diary's memory is full, you can insert a microSD card to expand the diary's memory capacity.

## CATEGORY 1: MY PHOTO AND VOICE DIARY

Select a date, then write your diary using text and special icons. You can also add a special photo and voice memo to your diary. After the diary has been saved, you may review, edit and search for it anytime you would like.



### CREATE A NEW DIARY

#### 1. Select the Date

Use the Arrow Buttons to select the day and month of your diary entry, then press OK to confirm.



#### 2. Enter information

Select the weather, your mood and add a special icon.

#### 3. Enter content

Write your secret diary entry using the letters and numbers on the keyboard. Press the Icon Button to add icons. Press the Symbol Button to add symbols. Press the Function Button to add a photo, record a voice memo, change the background or delete the whole diary. Press the Save Button to save the diary.

### Review a diary

The current month will be shown as a calendar, use the Arrow Buttons to select a date with an icon and press OK to confirm. You can then see the content of the diary entry. Press the Up or Down Arrow Buttons to look at the content and see the attached photo. Press the Function Button to search your diary entries by selecting the date. You can also press the Function Button to edit or delete the diary entry.



Transfer voice memos or backup your voice memos by copying them to a computer.

## CATEGORY 2: MY PET FRIEND

Here you can look after your very own virtual pet! You can choose between 3 different pets: a cat, a dog or a horse.



## 1. Showing your face to your pet

Once you have selected a pet, you can show it your face. A window will appear on screen for you to position your face in. Then, your pet will give you a happy reaction once it recognises you. If it doesn't recognise you, it will give an unhappy reaction.

## 2. Give your pet a name.

Now you can give your pet a name.

## 3. Press the Function Button to display 7 icons with different actions:

### Pet Profile


Here you can check your pet's name and status: Satisfaction Level, Happiness Level and Beauty Level. You can also change the name of your pet.

Press the Escape Button to go back to the main pet screen.

Satisfaction Level – See if your pet is hungry.

Happiness Level – See if your pet is happy.

Beauty Level – See if your pet needs a wash.

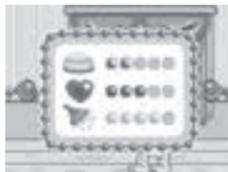

### Pet Care

Here are the actions you can choose to look after your pet.



Feed your pet when it is hungry.



Play a mini game with your pet.



Give your pet a shower when they need one.



Give your pet medicine when they are unwell.

### Dog's Mini Game:

The dog is on its way home. There are bones scattered on the path. Help the dog find the best path to collect all of the bones, so it can get home safely.

### Cat's Mini Game:

Some objects are falling down, help the cat collect them. Press the Left or Right Arrow Buttons to move the cat and press OK to collect the objects.

### Horse's Mini Game:

Help the horse run in a race! Press OK to make the horse jump over the fences.

### Location Change

Here you can change the location of your pet.

### Pet Chest

Use these items to decorate your pet's home.

### Face Recognition

Select this function or press the Unlock Button to show your face in your pet's window.

### Take a photo

Here you can take a photo with your pet! Simply press the Shutter Button or press OK to take a group photo.

### Pet Reset

Here you can reset your pet. You will be taken to the pet selection screen to choose another pet to look after.

## CATEGORY 3: MY STYLIST

There are three activities in this category.

### MY STYLIST 1 – MY DRESSING ROOM

In this activity you can take a photo of your face or select one from your previously taken photos. Then, you can dress yourself up with different categories of items:

1) My Own Pattern, 2) Hair Accessories, 3) Hair Styles, 4) Clothes. If you select Auto Mode, the diary will randomly choose a style for you. Press the Arrow and OK Buttons to play and press the Save Button to save your new picture. You can press the Snapshot icon to save your style in the Gallery to review later.



## MY STYLIST 2 – MY STYLISH MAKEUP


Select a photo from the Gallery or take a photo by positioning your face in the mask shown on the screen.



Add make up using these functions: 1) Blush, 2) Eye Shadow, 3) Mascara, 4) Lip Stick, 5) Others. You can adjust the shape, size and positioning of each object added. Press the Function button to show the function list. Press the Arrow and OK Buttons to play and press the Save Button to save your new photo. You can view pictures you have saved in the Gallery.

## MY STYLIST 3 - MY ADDRESS BOOK

Here you can enter your information, as well as your friend's information and save it. You can also take a photo to save in each section.

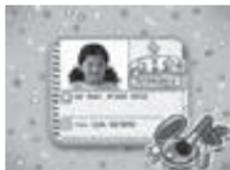

### My Information

Choose this icon to take a photo or to select an image before entering your details. Enter your name, phone number, birthday, address and email address. Then, save your information. Type any letters and numbers on the keyboard and press the Emoticon Button to add icons. Press the Symbol Button to add symbols and press the Save Button to save. You can edit any of this information anytime. Press the Function Button to edit or delete your personal information.

### Add New Contact

Select this to take a friend's photo or select a cool image for your friend. Enter your friend's information: name, phone number, birthday, address, email address and their special information. Then, save the information. Type any letters and numbers on the keyboard and press the Emoticon Button to add icons. Press the Symbol Button to add symbols and press the Save Button to save the information.

### Friend List

If you have created contacts, they will appear here in alphabetical order.

Use the Arrow Buttons or press the Letter Buttons to select a contact. Press OK to view their information. When viewing their information, press the Function Button to edit or delete the content.

## CATEGORY 4: MEDIA MANIA

There are four activities for you to choose from: Photo Editor, Video Editor, Animation Station and Gallery.

### Media Mania 1 - Photo Editor

Select a photo from the Gallery or take a photo by positioning your face in the mask shown on the screen.

You can then dress yourself up with different categories of items:

1) Frames, 2) Hair Accessories, 3) Glasses, 4) Earrings, 5) Necklaces, 6) Face Accessories, 7) Stickers. You can adjust the shape, size and positioning of each object added. Press the Function Button to show the function list. Press the Arrow and OK Buttons to play and then press the Save Button to save your new picture. You can view pictures you have saved in the Gallery.



### Media Mania 2 – Video Editor

Select a special effect and create a new video.

1) Add Background Music, 2) Add Border, 3) Speed Up or Slow Down. You can add background music to your video. You can also add a cool frame or adjust the speed of the video. Press the Arrow and OK Buttons to play and then press the Save Button to save your video. You can view videos you have saved in the Gallery.



### Media Mania 3 – Animation Station

Position your face in the mask shown on the screen and take a picture of yourself or your friend. You can then record a voice memo to match the picture and see a fun animation featuring the face and voice.



### Media Mania 4 – Gallery

Here you can look through all of the pictures and videos you have taken. Press the Function Button to delete the selected photo or video, or to delete all photos and videos.

You can transfer new photos and videos to your diary from a computer. You can also backup your photos and videos by copying them from your diary to a computer.

If the diary's memory is full, you can insert a microSD card to expand the diary's memory capacity.



## CATEGORY 5: MY GAMES AND ACTIVITIES

There are 10 games and activities for you to play.

### My Games and Activities 1 – Typing Test

Can you type all of the letters or words that are shown on the screen before the time runs out?

There are 4 difficulty levels:

Level 1: Type the lowercase letters

Level 2: Type the words

Level 3: Type the lowercase letters, uppercase letters and numbers

Level 4: Type the phrase or the sentence

If you type all of the letters and words correctly twice before the time runs out, you will move on to the next level.

### My Games and Activities 2 – Number Fun

The diary will ask you to choose the higher or lower amount shown on screen. You will then need to choose the higher or lower amount 10 times correctly. There are 6 difficulty levels. If you answer everything correctly two rounds before the time runs out, you will move on to the next level.

Level 1: Shows 2 boxes. Select the box which has more or less objects inside of it.

Level 2: Shows 2 boxes with dice in. Select the box with the higher or lower total shown on the dice.

Level 3: Shows 2 or 3 single digit numbers. Select the bigger or smaller number.

Level 4: Shows 2 or 3 multiple digit numbers. Select the bigger or smaller number.

Level 5: Shows 2 addition or subtraction equations. Choose the side which has the greater or lesser value.

Level 6: Shows 2 multiplication or division equations. Choose the side which has the greater or lesser value.



## My Games and Activities 3 – Sudoku

Complete the 2x2 or 2x3 grid by filling in each space with a digit, but without repeating any digit in the same row, column and box. Press the number button or use the arrow buttons to fill in the grid. There are 3 difficulty levels. If you finish two Sudoku puzzles continuously, you will move on to the next level.



Level 1: 2x2 Shapes

Level 2: 2x2 Numbers

Level 3: 2x3 Numbers

## My Games and Activities 4 – Bubble Blast

Clear as many bubbles as possible. Connect 3 same colour bubbles to make them disappear. Press the arrow buttons to adjust the direction of the bubble launcher, Press the OK button to launch bubbles from the bubble launcher on the bottom of the screen. There are 3 difficulty levels. If you clear all bubbles twice continuously, you will move on to the next level.



Level 1: 4 or 5 colour bubbles

Level 2: 6 or 7 colour bubbles

Level 3: 8 colour bubbles

## My Games and Activities 5 – Order Up

Customers will place their food orders. You will then need to choose the correct food from the food list to complete the customer's order. If you cannot finish a customer's order in a certain time, they will be unhappy and leave.



There are 3 difficulty levels. If you complete a customer's orders twice continuously, you will move on to the next level.

Level 1: 2 orders for each customer

Level 2: 3 orders for each customer

Level 3: 4 orders for each customer

## My Games and Activities 6 – Parrot Pal

Talk into the microphone and your voice will be played back with a parrot effect. Press the OK button to start talking to the parrot.



## My Games and Activities 7 – Jumping Challenge

Help the hamster with their adventure!

Press the OK button or speak into the microphone to help the hamster jump.



## My Games and Activities 8 – Bridge Building

Can you build bridges to get over the islands? Press and hold the OK button or speak into the microphone to build a bridge. Then, release OK, or stop speaking when you think the bridge is the correct length to cross over to the next island.



## My Games and Activities 9 – Crystal Ball

Look into the crystal ball and press OK to see your lucky things! These items will be shown to you:

Words of Wisdom

Lucky Colour

Lucky Animal

Lucky Number

Lucky Item



## My Games and Activities 10 – Face Fun

Do you and your friends look alike? Let's find out! Show your face in the square and press OK to start scanning. If your face is recognised, you can then show your friend's face in the square and press OK to start scanning. You will then see how similar you both are!



## CATEGORY 6: MY TOOLS

There are 8 settings in My Tools to choose from:

### 1. Contrast, Volume, and Background music

– Use the Arrow Buttons to adjust the volume and screen brightness. You can also turn the background music on or off. Press OK or the Save Button to save your changes.

2. Alarm – Press the Arrow Buttons to select an alarm time and sound. Or, you can record your own alarm sound! Press OK or the Save



Button to save your changes. When the alarm is set and it activates, you will see the alarm animation and an accompanying sound.

**3. Date and Time** – Press the Arrow Buttons to select a date, time and clock background. Press OK or the Save Button to save your changes. When you have set the time and date, it will show on the screen in sleep mode by pressing the clock button. You can also choose different clock backgrounds from the clock background folder or the Gallery.

**4. Number Password** – You can turn the number password on or off or change your number password here. Press the Arrow Buttons to turn the number password on or off. Press the Number Buttons to enter your current 4 digit number password, then you can input your new number password.

**5. Face Unlock** – Use the Arrow Buttons to select ON if you want to use your face to unlock the diary. If you select OFF, you will not need to unlock the diary using your face. When the unlock button is pressed, the cover will open.

**6. Event Alert** – Use the Arrow Buttons to set a special event date and time. Press the Letter or Number buttons to enter your event details. Press OK or the Save Button to save your settings. If you have set a special event, it will remind you with a pop up showing the details you entered and an accompanying sound.

**7. Music Player Auto-off Timer** – Use the Arrow Buttons to select a timer and Press OK or the Save Button to save your settings. Once you select a timer, the Music Player will turn off in the set time.

**8. Memory Settings** – Here you can see how much space is left on your diary. If there is a memory card in the diary, it will show how much space is left on the memory card. You can format the memory here also. If you do Format the memory, then the diary or the microSD card with all your saved files, photos and videos will be deleted.

## CARE & MAINTENANCE

1. Keep the diary clean by wiping it with a slightly damp cloth.
2. Keep the diary out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the diary is not in use for an extended period of time.
4. Do not drop the diary on a hard surface and do not expose the diary to excess moisture.

# TROUBLESHOOTING

Go through this section if you experience difficulty in operating **Secret Safe Diary Selfie Music**.

Problem	Solution
Diary stop working	<ol style="list-style-type: none"><li>1. Let the diary sit for a few minutes without batteries, then replace the batteries.</li><li>2. Turn the diary ON. It should now work properly.</li><li>3. If the diary does not work, install a brand new set of batteries.</li></ol>
Image taken is not clear	<ol style="list-style-type: none"><li>1. Check if the diary is held steadily.</li><li>2. Make sure the lighting conditions of the shooting environment are good.</li><li>3. Check to see if the camera lens protection window is clean.</li></ol>
Cannot connect to computer	Check the connections on the USB cable between the diary and the computer and review the appropriate connection procedure in this manual.
Memory card can't be detected	<ol style="list-style-type: none"><li>1. Check if the memory card is correctly inserted.</li><li>2. Check to see if the memory card is the supported type. The diary can only support a microSD or microSDHC card.</li><li>3. Check to see if the file system of your memory card is FAT or FAT32, <b>Secret Safe Diary Selfie Music</b> does not support NTFS or exFAT file systems. You should back up all important data from your memory card and format it in either the FAT or FAT32 file system before using in your <b>Secret Safe Diary Selfie Music</b>.</li></ol>

Cannot save files	<p>Check if the memory card is full.</p> <p>If there is no memory card inserted, check the <b>Secret Safe Diary Selfie Music</b> internal memory.</p>
Can't view transferred music, video or photo files	<ol style="list-style-type: none"> <li>1. Check if the transferred files are put in the correct directory in the <b>Secret Safe Diary Selfie Music</b>. Photos should be put in the DOWNLOAD/PHOTO folder, videos should be put in the DOWNLOAD/VIDEO folder and songs should be put in the MUSIC folder when <b>Secret Safe Diary Selfie Music</b> is connected to a computer.</li> <li>2. <b>Secret Safe Diary Selfie Music</b> only supports the below formats: photos in Standard Baseline JPEG, videos in AVI (Motion JPEG) and songs in MP3.</li> </ol>
Screen displays incorrectly	<p>Turn off the diary and let it sit for a few minutes without batteries, then replace the batteries.</p>

If the problem persists, please call our Consumer Services Department on 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK) and a service representative will be happy to help you.

**IMPORTANT NOTE:**

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.

<b>Player</b>		<b>Headphones</b>	
Maximum output voltage	$\leq 150\text{mV}$	Wide band characteristic voltage	$\geq 75\text{mV}$

**CLASS 1  
LED PRODUCT**



## PRODUCT REGISTRATION

Visit [www.vtech.co.uk/clubvtech/login](http://www.vtech.co.uk/clubvtech/login)  
to register your VTech product

By joining the VTech Club you can also enter competitions, find out about news and events, seek expert advice for parents and let your kids play fun learning games and activities.



## PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor). Please include details of the fault together with your name and address.
9. To keep an online record of your warranty, please register your product online at [www.vtech.co.uk/warranty](http://www.vtech.co.uk/warranty)

Vtech Electronics EU PLC, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, West Hallam, DE7 6HE

**THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.**

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.



**Visit our website for more  
information about our products,  
downloads, resources and more.**

***[www.vtech.co.uk](http://www.vtech.co.uk)***



TM & © 2018 VTech Holdings Limited.  
All rights reserved.  
**Printed in China.**  
91-003512-006 (UK)