

Parent's Guide

My 1st Football Friend



91-003436-001

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...



Electronic Learning


Computers

To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the My 1st Football Friend by VTech®.

This soft football features a friendly smiling light up face button and two crinkle paper goalkeeper gloves. Your little dribbler will love kicking, passing and shaking the ball. Press the smiling face button or roll the ball to trigger the motion sensor and learn about colours, numbers, feelings, opposites and to hear a variety of playful sounds, songs, phrases and melodies.

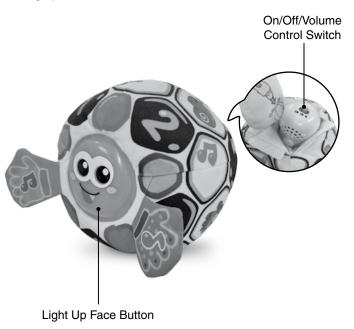

INCLUDED IN THIS PACKAGE

- One My 1st Football Friend
- One parent's guide
- WARNING: All packing materials, such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.
 NOTE: Please keep this parent's guide as it contains important information.

GETTING STARTED BATTERY INSTALLATION

- 1. Make sure the unit is turned OFF.
- Locate the battery cover on the electronic module inside the unit. Use a screwdriver to loosen the screw.
- Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
- 4. Replace the battery cover and tighten the screw to secure.



BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metalhydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbonzinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.



Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit: www.recycle-more.co.uk

www.recyclenow.com

WASHING INSTRUCTIONS

NOTE: The football is hand washable. Please remove the electronic module from the ball before washing.

Removable Electronic Module

- 1. To remove the **Electronic Module**, undo the Velcro-like attachments and open the fabric covering on the back of the football. Pull the **Electronic Module** out.
- 2. To insert the **Electronic Module**, push it into the football, ensuring that the light up end goes in first. See the image on the fabric covering for reference. You will hear the electronic module snap into place when it's inserted properly. Close the fabric covering and seal the Velcro-like attachments.





PRODUCT FEATURES

 On/Off/Volume Control Switch To turn the unit ON, slide the On/ Off/Volume Control Switch on the electronic module to the Low Volume ((■))) or High Volume (■))) position. You will hear a song, a fun phrase and a playful sound. To turn the unit OFF, slide the On/Off/Volume Control Switch to the OFF (●) position.



2. Automatic Shut Off

 
To preserve battery life, the **My 1st Football Friend** will automatically shut off after approximately 40 seconds without input. The unit can be turned on again by pressing the light up face button.

NOTE: If the unit shuts off during play, we suggest replacing the batteries.

ACTIVITIES

1. Light Up Face Button

Press the **Light Up Face Button** to learn about colours, numbers, feelings, opposites and to hear a variety of playful sounds, songs, phrases and melodies.



2. Motion Sensor

Kick, pass or shake the ball to activate the **Motion Sensor** and to hear a variety of playful sounds, songs, phrases and melodies.



SING-ALONG SONG LYRICS

SONG 1

It's time for the match! And I bet... You'll get the ball in the back of the net!

SONG 2

Left or Right? Where should we put the ball? High or Low? Let's bend it around the wall!

SONG 3

1, 2, 3, 4, 5, Football makes me feel alive. 6, 7, 8, 9, 10, So let's go and play with our friends.

MELODY LIST

- 1. Land of Hope and Glory
- 2. Cwm Rhondda (Guide Me, O Thou Great Redeemer)
- 3. The Stars and Stripes Forever
- 4. When the Saints Go Marching In
- 5. La Donna È Mobile
- 6. I Shall Not Be Moved
- 7. One Man Went to Mow
- 8. Battle Hymn of the Republic
- 9. Simple Gifts
- 10. Camptown Races
- 11. The Wild Rover
- 12. Turkey in the Straw
- 13. Yankee Doodle
- 14. Alphabet Song
- 15. Skip to my Lou

CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- 2. Keep the unit out of direct sunlight and away from any direct heat source.
- 3. Remove the batteries when the unit will not be in use for an extended period of time.
- 4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
- 5. The football is hand washable. Please remove the electronic module before washing the ball.

TROUBLESHOOTING

 
If for some reason the program/activity stops working or malfunctions, please follow these steps:

- 1. Please turn the unit OFF.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit sit for a few minutes, then replace the batteries.
- 4. Turn the unit **ON**. The unit should now be ready to play with again.
- 5. If the product still does not work, install a brand new set of batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546 810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.





PRODUCT REGISTRATION

Visit www.vtech.co.uk/clubvtech/login to register your VTech product

By joining the VTech Club you can also enter competitions, find out about news and events, seek expert advice for parents and let your kids play fun learning games and activities.



PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

- 1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
- The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
- VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
- 4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
- 5. This warranty is personal to the original purchaser and is not transferable.
- 6. Breakages to the LCD screen are not covered by the warranty.
- 7. Returns to VTech Electronics Europe plc should include a cheque or postal order for \pounds 1.50 towards the cost of return postage and packaging.
- Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
 Please include details of the fault together with your name and address.
- 9. To keep an online record of your warranty, please register your product online at www. vtech.co.uk/warranty

Vtech Electronics EU PLC, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, West Hallam, DE7 $6\mathrm{HE}$

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

Visit our website for more information about our products, downloads, resources and more.

vtech.co.uk



TM & © 2017 VTech Holdings Limited. All rights reserved. **Printed in China.** 91-003436-000@