

**vtech**<sup>®</sup>  
baby

# Instruction Manual

## Cuddle & Play Koala



91-003920-008 <sup>UK</sup>

**VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...**

## **vtech** Baby

**Toys that will stimulate their interest in different textures, sounds and colours**

### **I am...**

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

*Birth-36 months*



## **Pre-School**

**Interactive toys to develop their imagination and encourage language development**

### **I want...**

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

*3-6 years*



## **Electronic Learning Computers**

**Cool, aspirational and inspiring computers for curriculum related learning**

### **I need...**

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

 
*4-10 years*



To learn more about this and other VTech® products, visit [www.vtech.co.uk](http://www.vtech.co.uk)

# INTRODUCTION

Meet the adorable **Cuddle & Play Koala** by **VTech®**! This cute, soft fabric koala is great for on-the-go play. Koala's textured fabrics provide tactile stimulation and encourages interaction. Press Koala's tummy to see his mouth light up and to hear exciting music, cool songs and fun phrases which support and encourage language development.

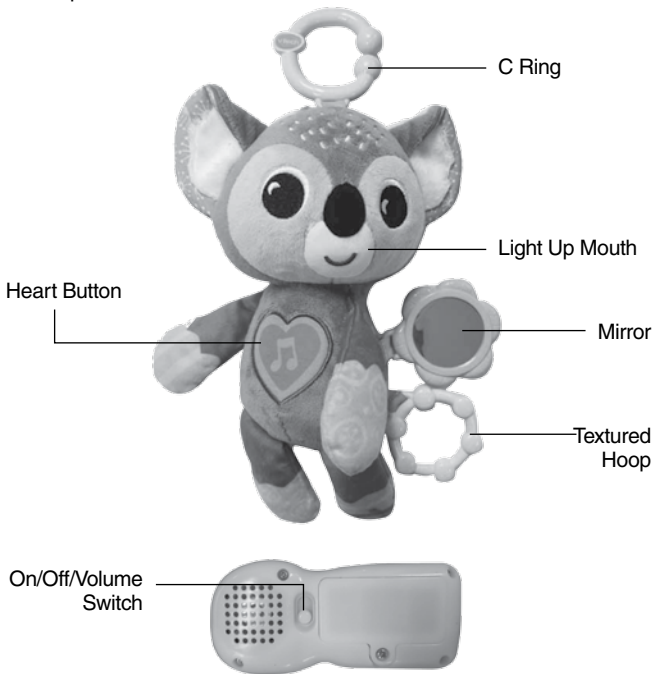

# INCLUDED IN THIS PACKAGE

- Cuddle & Play Koala
- Instruction Manual

## WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

## NOTE

Please keep this Instruction Manual as it contains important information.

### WARNING:

Keep this soft toy out of the sleeping environment for babies under twelve months to avoid suffocation risk.

 
### WARNING:

Remove product from the Infant Carrier when the vehicle is moving.

# GETTING STARTED

## Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Locate the battery cover on the back of the electronic module. Use a screwdriver to loosen the screw and then open up the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AAA batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended)
5. Replace the battery cover and tighten the screw to secure.

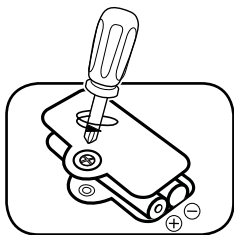

## WARNING:

Adult assembly required for battery installation.  
Keep batteries out of reach of children.

## BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

## Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point\* so all of its materials can be recycled.

Learn more at:

[www.vtech.co.uk/recycle](http://www.vtech.co.uk/recycle)

[www.vtech.com.au/sustainability](http://www.vtech.com.au/sustainability)

\* Visit [www.recyclenow.com](http://www.recyclenow.com) to see a list of collection points near you.




## INSTRUCTIONS FOR SURFACE WASHING

The **Cuddle & Play Koala** is surface washable only. Please remove the **Electronic Module** from the koala before cleaning.

1. Open the hook-and-loop closure on the back of the koala and remove the **Electronic Module**.
2. Wipe down the koala with a damp cloth.
3. After surface washing, re-insert the **Electronic Module** and secure the hook-and-loop closure.

## PRODUCT FEATURES

### 1. On/Off/Volume Switch

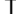To turn the unit **On**, slide the **On/Off/Volume Switch** to the Low volume  or the High volume  position. You will hear a song, a phrase and a short tune. To turn the unit **Off**, slide the **On/Off/Volume Switch** to the **Off**  position.



### 2. Automatic Shut-Off

To preserve battery life, the **Cuddle & Play Koala** will automatically shut off after approximately 35 seconds without input. The unit can be turned on again by pressing the **Heart Button**, or by activating the **Motion Sensor**. Triggering the

motion sensor continuously for approximately 10 minutes without any other input will cause the unit to shut off. Press the **Heart Button** to turn the unit back on.

 
## NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

## ACTIVITIES

### 1. Heart Button

Press the **Heart Button** to hear about the koala and to hear sing-along songs, playful sounds and melodies. The light will flash with the sound.

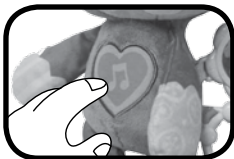

### 2. Motion Sensor

Shake the koala to activate the motion sensor and hear a variety of playful sounds and short tunes. If a melody is playing, activate the motion sensor to hear fun sounds play over the melody. The light will flash with the sound.



## MELODY LIST

1. For He's a Jolly Good Fellow
2. The Entertainer
3. One Man Went to Mow
4. Bicycle Built for Two
5. On Top of Old Smokey
6. A Tisket, A Tasket
7. Old King Cole
8. Oats, Peas, Beans and Barley Grow

9. Skip to My Lou
10. Little Boy Blue
11. Aiken Drum
12. Teddy Bears' Picnic
13. Looby Loo
14. Humpty Dumpty
15. Boys and Girls Go Out to Play
16. There Is a Tavern in the Town
17. Lazy Mary, Will You Get Up?
18. London Bridge
19. Alphabet Song
20. Glow-Worm

## **SONG LYRICS**

### **Song 1**

Hello, peek-a-boo!  
Koala's here to play,  
I've got lots of hugs for you,  
Let's cuddle and snuggle all day!

### **Song 2**

Hello my friend, hold me tight!  
Snuggle me, cuddle me!  
I love when I am with you!  
Koala cuddles!

### **Song 3**

Look in the mirror, who do I see?  
I see you smiling back at me!



# CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. The plush koala is surface washable only. Please remove the **Electronic Module** from the koala before cleaning.

# TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play with again.
5. If the product still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

# CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## **UK Customers:**

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)  
Website: [www.vtech.co.uk/support](http://www.vtech.co.uk/support)

## **Australian Customers:**

Phone: 1800 862 155  
Website: [support.vtech.com.au](http://support.vtech.com.au)

## **NZ Customers:**

Phone: 0800 400 785  
Website: [support.vtech.com.au](http://support.vtech.com.au)

# PRODUCT WARRANTY/ CONSUMER GUARANTEES

## **UK Customers:**

Read our complete warranty policy online at [vtech.co.uk/warranty](http://vtech.co.uk/warranty).

## **Australian Customers:**

**VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –  
CONSUMER GUARANTEES**

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [vtech.com.au/consumerguarantees](http://vtech.com.au/consumerguarantees) for further information.

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***www.vtech.co.uk***  
***www.vtech.com.au***

