 


vtech®

User's Manual

# Toot-Toot Drivers®

## Gold Mine Train Set

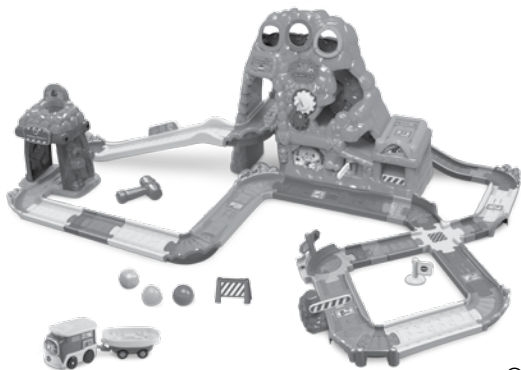

© 2016 VTech  
All rights reserved  
**Printed in China**  
91-003240-013<sup>(K)</sup>

**VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...**

## **vtech** Baby

**Toys that will stimulate their interest in different textures, sounds and colours**

### **I am...**

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

**Birth-36 months**



## **Pre-School**

**Interactive toys to develop their imagination and encourage language development**

### **I want...**

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

**3-6 years**



## **Electronic Learning Computers**

**Cool, aspirational and inspiring computers for curriculum related learning**

### **I need...**

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

**4-10 years**

 


To learn more about this and other VTech® products, visit [www.vtech.co.uk](http://www.vtech.co.uk)

# INTRODUCTION

Thank you for purchasing the **VTech® Toot-Toot Drivers® Gold Mine Train Set!**


It's a gold rush at the **Toot-Toot Drivers® Gold Mine Train Set!** Turn on the motorised freight train and watch as it chugs around the tracks through the tunnels and up hills on its own.

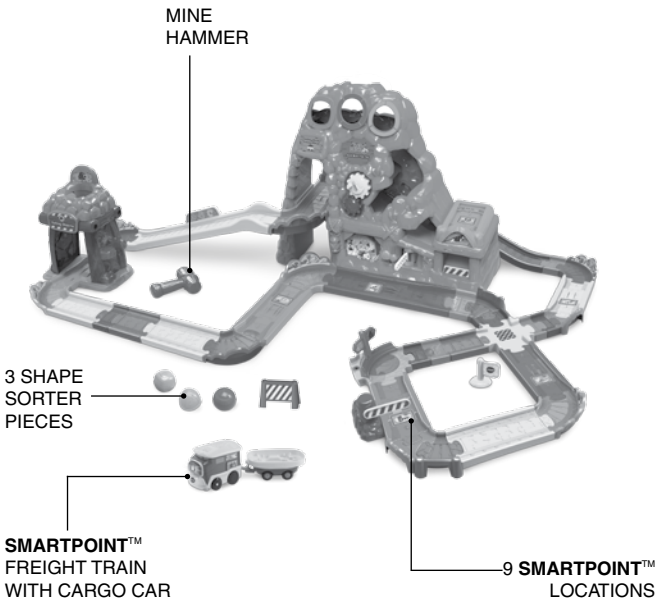

# INCLUDED IN THIS PACKAGE



 One **SmartPoint™** freight train with cargo car

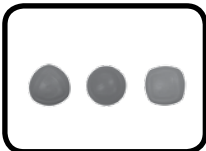

Three shape sorter pieces



One flag accessory



One mountain



One **SmartPoint™** mountain straight track



One gate



One **SmartPoint™** L snap track



One **SmartPoint™** straight track with gate



Two ramp snap tracks



One mine shaft



One **SmartPoint™** mine shaft base



One mine hammer

\*Snap tracks only compatible with other snap tracks.


INCLUDED IN THIS PACKAGE



One 90-degree  
snap track



 
One support

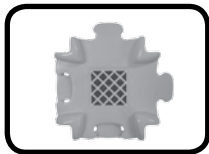

One cross  
track



 One cross  
track sign

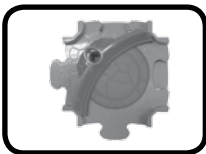

One cross track  
with switch



Eight 1/4  
straight tracks




Three 90-degree  
tracks, female



Three 90-degree  
tracks, male



 Three straight  
tracks

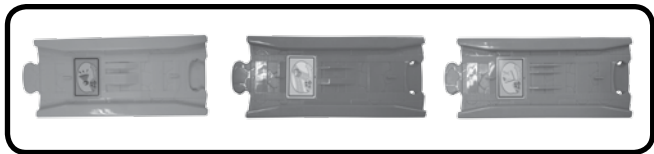

Three **SmartPoint™** straight tracks

INCLUDED IN THIS PACKAGE



Two 45-degree tracks, male



Two 45-degree tracks, female



 
Two 1/2 straight tracks




One Gate



User's manual

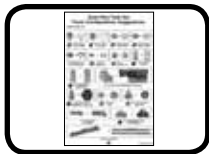

One track configuration sheet

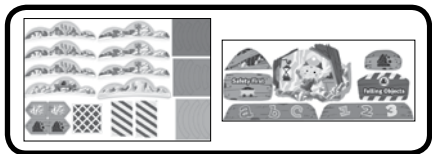 


Two label sheets

**WARNING:** All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy and should be discarded for your child's safety.

**NOTE:** Please keep this user's manual as it contains important information.


**Adult assembly required. For your child's safety, do not let your child play with the toy until it is fully assembled.**
 
## Unlock the packaging locks:

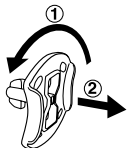

① Rotate the packaging lock anti-clockwise 90 degrees.


 
② Pull out the packaging lock.

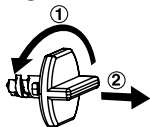

① Turn the packaging lock anti-clockwise several times.

② Pull out and discard the packaging lock.

  
**WARNING:** For your child's safety, only use the motorised freight train on Toot-Toot Drivers® train tracks. Do not roll the train on your clothing, body or hair while the motorised train is turned on. If something gets caught in the train's wheels while the motor is on, lift the train up so it is no longer touching your child or slide the mode selector switch to the off position to turn off the motor.

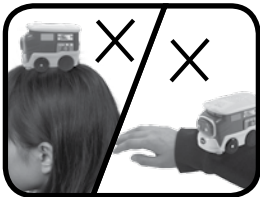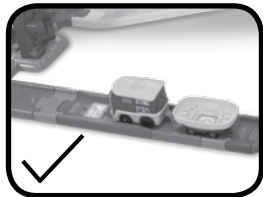

# GETTING STARTED

## BATTERY INSTALLATION – FREIGHT TRAIN

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the rear cabinet of the train. Use a screwdriver to loosen the screw.
3. Install three new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover by laying it flat against the battery slot and tightening the screw to secure it.

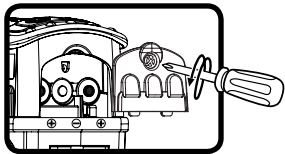

## BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.



## Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

 
Help protect the environment by disposing of your product or batteries responsibly.

 
For more information, please visit:

[www.recycle-more.co.uk](http://www.recycle-more.co.uk)

[www.recyclenow.com](http://www.recyclenow.com)

**Please stick the labels to the play set as indicted below:**

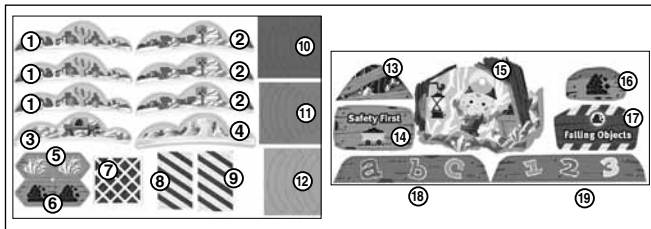

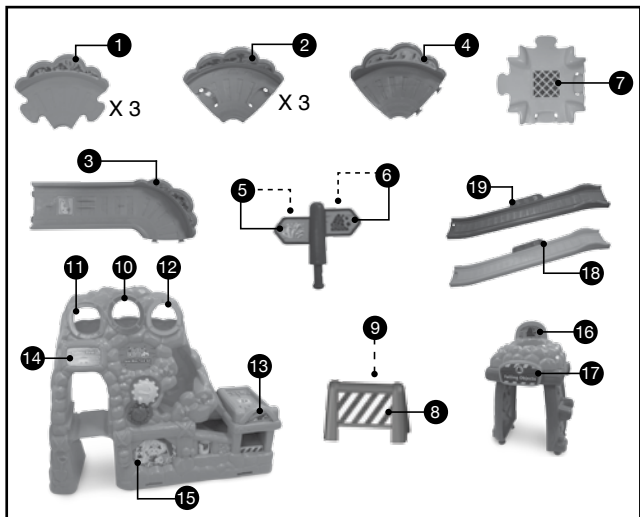



## ASSEMBLY INSTRUCTIONS

With the **VTech® Toot-Toot Drivers® Gold Mine Train Set**, safety comes first. To ensure your child's safety, adult assembly is required.

1. Pinch the joint of the cargo car and insert it into the slot on freight train.



  2. Insert the **GATE** into the slot on the pillar.

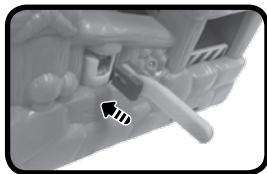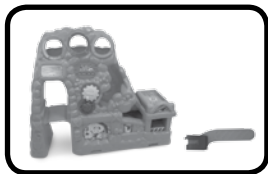



3. Tilt the **SMARTPOINT™ MOUNTAIN** and insert the **MOUNTAIN STRAIGHT TRACK** into the slot on the **SMARTPOINT™ MOUNTAIN** as shown below. You will hear a “click” sound to indicate that the track is securely attached.





4. Insert the **L SNAP TRACK** into the slot on the **SMARTPOINT™ MOUNTAIN** tunnel as shown below.



  5. Attach the **RAMP SNAP TRACK** to the **L SNAP TRACK** as shown below. You will hear a “click” sound to indicate that they are attached securely.

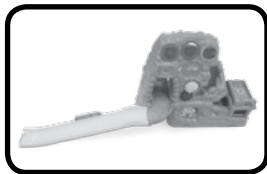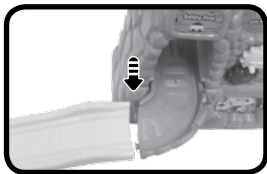

  
6. Insert the **SUPPORT** into the slot on the **90-DEGREE SNAP TRACK**. Then, attach the **90-DEGREE SNAP TRACK** to the **L SNAP TRACK** as shown below. You will hear a “click” sound to indicate that they are attached securely.

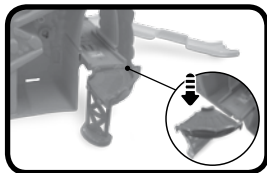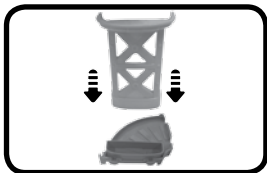



7. Attach the other **RAMP SNAP TRACK** to the **90-DEGREE SNAP TRACK**. You will hear a “click” sound to indicate that they are attached securely.



 
8. Insert the **MINE SHAFT BASE** into the bottom of the **MINE SHAFT** as shown below. You will hear a “click” sound to indicate the pieces are securely attached.

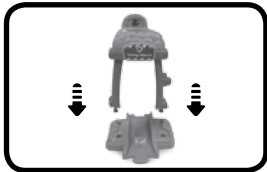

  9. Insert the **CROSS TRACK SIGN** into the slot on the **CROSS TRACK SWITCH** as shown below. You will hear a “click” sound to indicate the signpost is securely attached.

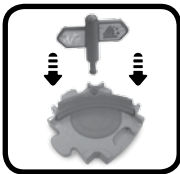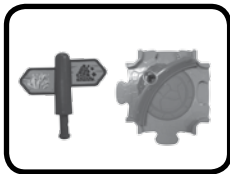


 10. After the above steps, connect these pieces to the included track pieces. You can configure them into different arrangements.

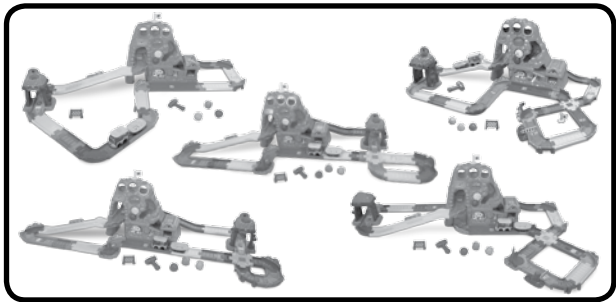

## EXPAND & EXPLORE

 
To expand the **Gold Mine Train Set** and inspire creativity, connect to the **Toot-Toot Drivers® Deluxe Train Track Set play set**(as shown below).

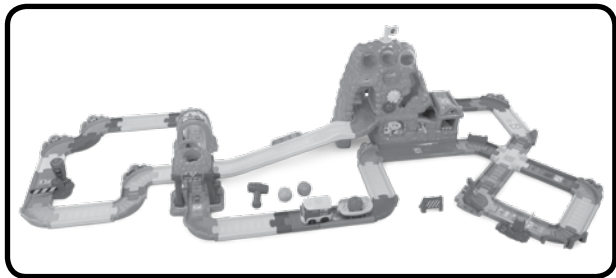

## PRODUCT FEATURES – TRAIN

### 1. OFF/MOTOR SELECTOR SWITCH

 To turn the train **ON**, slide the **OFF/ MOTOR SELECTOR SWITCH** to the **MOTOR MODE ( MOTOR )** or **MANUAL PLAY MODE ( ⏻ )** position. To turn the train **OFF**, slide the **OFF/MOTOR SELECTOR SWITCH** to the **OFF ( ● )** position.

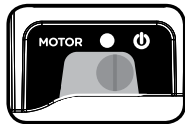



### 2. AUTOMATIC SHUT-OFF

To preserve battery life, the included train will automatically power-down after approximately 50 seconds without input while the motor is off. The unit can only be turned on again by pressing the light-up button, pushing the train quickly or triggering a **SMARTPOINT™** location.

**Note:** This product is in try-me mode in the packaging. After opening the package, turn the vehicle **OFF** and **ON** again to proceed with normal play. If the unit powers down while playing, we suggest changing the batteries.

 
## ACTIVITIES – FREIGHT TRAIN

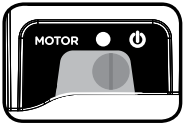1. Slide the **OFF/MOTOR SELECTOR SWITCH** to turn the train **ON**. You will hear a song, phrases and train sounds. The train will move forward automatically when it's in **MOTOR MODE**. (Note: The train's front wheel needs to be on a firm surface in order to trigger the motor.) The light will flash with the sounds.
2. In **MOTOR MODE**, the motor will stop automatically two seconds after you remove the train from the tracks. The motor will restart once the train is put back down.
3. In **MANUAL MODE**, push the train to hear fun sounds and melodies. While a melody is playing, push the train again to add fun sounds on top of the melody. The light will flash with the sounds.
4. Press the light-up button to hear train sounds, phrases and songs. Press and hold the light-up button to stop the motor in **MOTOR MODE**. The motor will restart after the button is released. The light will flash with the sounds.
5. While in **MANUAL MODE**, push the train over **SMARTPOINT™** locations included in the play set to hear fun sounds and phrases. The light will flash with the sounds.
6. While in **MOTOR MODE**, let the train run through **SMARTPOINT™** locations included on the play set to hear fun sounds and phrases. The light will flash with sounds.

7. While the motor is **OFF**, if there is no input for about 8 seconds, you will hear a sound and phrase. After another 8 seconds of no input, a song will play. If there is no input for an additional 8 seconds, the unit will play a short tune and then go into sleep mode. While the motor is running, you will hear train sounds, then the train will enter sleep mode after 5 minutes of no input. The unit can only be activated by pressing the light-up button, pushing the train quickly or triggering a **SMARTPOINT™** location.
8. In **MANUAL MODE** the train even interacts with other **Toot-Toot Drivers tracks®** (sold separately).

## ACTIVITIES – GOLD MINE TRAIN SET

 1. Push the train or let the train run through any of the seven **Gold Mine Train Set SmartPoint™** locations to trigger fun sounds, phrases and short tunes.
2. Insert the **SHAPE SORTER PIECES** into the mountain's corresponding shape sorter slots and watch as they tumble down to the mountain base.

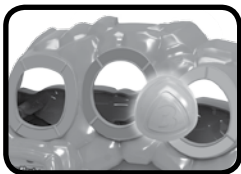




- Run the train across the **MOUNTAIN STRAIGHT TRACK**. Once the train pushes through the **GATE**, it will release the **SHAPE SORTER PIECES** from the mountain and onto the **CARGO CAR**.



- Put any **SmartPoint™** vehicle (each sold separately) on the **SmartPoint™ CARGO CAR** to get a lift.



 - Place a **SHAPE SORTER PIECE** on top of the **MINE SHAFT** and tap it through with the **MINE HAMMER** for put-and-take fun!

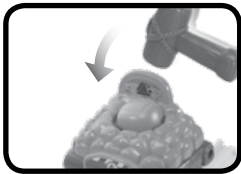

## CARE & MAINTENANCE

- Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Remove the batteries when the unit will not be in use for an extended period of time.
- Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

## IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.

CLASS 1  
LED PRODUCT



# PRODUCT REGISTRATION

Visit [www.vtech.co.uk/clubvtech/login](http://www.vtech.co.uk/clubvtech/login)  
to register your VTech product

By joining the VTech Club you can also enter competitions, find out about news and events, seek expert advice for parents and let your kids play fun learning games and activities.



## PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor). Please include details of the fault together with your name and address.
9. To keep an online record of your warranty, please register your product online at [www.vtech.co.uk/warranty](http://www.vtech.co.uk/warranty)

Vtech Electronics EU PLC, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, West Hallam, DE7 6HE

**THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.**

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.



