



Quick Start Guide



SING-ALONG KEYBOARD

We aim to reduce our environmental impact and have reduced the amount of paper used for our printed Manuals. The full version of the Instruction Manual is available online through the following link or by scanning the QR code.



For UK
vtech.co.uk/manuals



For AUS/NZ
vtech.com.au/support/product_manuals

INCLUDED IN THIS PACKAGE

- One **Sing-Along Keyboard**
- Two Legs
- One Microphone Stand
- One Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

 
NOTE:

Please save this Quick Start Guide as it contains important information.

CAUTION:

Adult assembly required. For your child's safety, do not let your child play with the toy until it is fully assembled.

Unlock the packaging locks and exit Try-Me Mode:

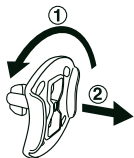

- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks.

NOTE: The unit is in Try-Me Mode while it is in the box. Try-Me Mode will exit automatically after the packaging locks are removed and the unit is taken out of the box. The microphone recording feature will then be available in normal mode.



If the keyboard does not exit Try-Me Mode automatically, please follow the steps below:

Move the Off/Mode 1/Mode 2 Switch to OFF.

 
Press the 1st, 2nd, and 5th piano keys (C, D, and G) from the left at the same time.

While holding the keys, move the switch to Mode 2.

Three piano keys will flash, indicating the unit has reset to normal mode.

Taking out the Microphone:

1. Open the gift box.
2. Carefully cut the paper string on the back of the inner card. Do not cut the cord connecting the microphone to the base unit.
3. Pull out the string and take off the microphone.

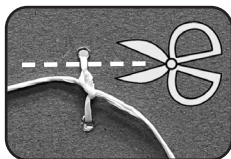


INSTRUCTIONS

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

BATTERY REMOVAL AND INSTALLATION

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 3 new 1.5V AA (LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

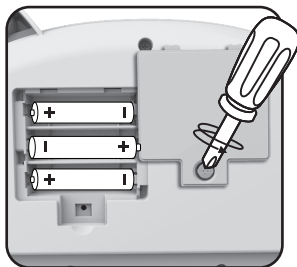

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health. The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

 
www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.


ASSEMBLY INSTRUCTIONS

NOTE: Adult assembly required.

1. Insert the 2 legs into the back of the Bluey Sing-Along Keyboard as illustrated on the right.

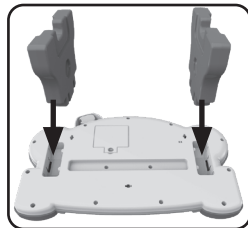

 2. Insert the microphone stand into the hole on top right of the Bluey Sing-Along Keyboard as illustrated on the right.

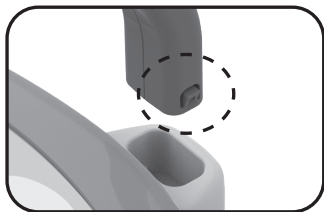

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. If the unit stops working or malfunctions, install a new set of batteries.

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

Contact VTech

Tel: 0330 678 0149 (from UK)
+44 330 678 0149 (outside UK)
1800 862 155 (Aus) / 0800 400 785 (NZ)
www.vtech.co.uk
www.vtech.com.au



**BBC
STUDIOS**

BLUEY (word mark and character logos) are trade marks of Ludo Studio Pty Limited and are used under licence.
BLUEY logo © Ludo Studio Pty Limited 2018. Licensed by BBC Studios. BBC is a trade mark of the British
Broadcasting Corporation and is used under licence. BBC logo © BBC 1996