



Instruction Manual

LEARNING PHONE



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTech® Disney-Pixar Toy Story 5 Learning Phone**. Jessie, Buzz Lightyear, Woody, Lilypad, Smarty Pants, Snappy and Atlas are waiting for you to pick up! The built-in learning games and apps help to develop skills with numbers, shapes, comparison and more. Answer the call and play.



INCLUDED IN THE PACKAGE

- One VTech® Disney·Pixar Toy Story 5 Learning Phone
- One Quick Start Guide


WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please keep this Quick Start Guide as it contains important information.

Unlock the Packaging Locks:

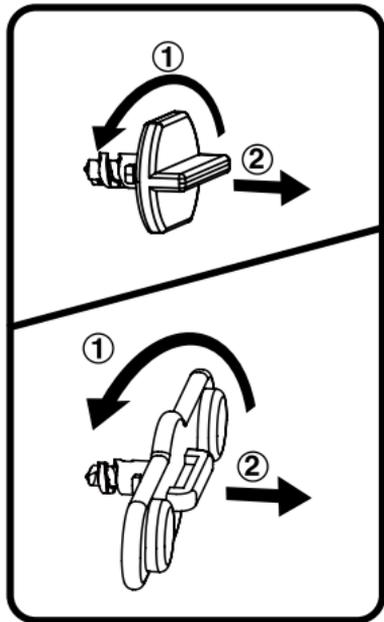


- ① Turn the packaging locks several times anticlockwise.
- ② Pull out and discard the packaging locks.

GETTING STARTED

Battery Removal and Installation

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

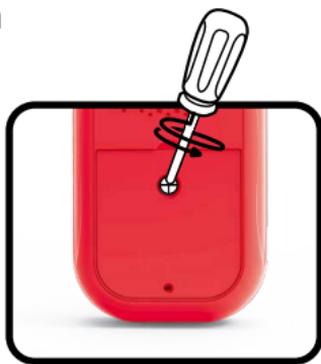

WARNING:

Adult assembly required for battery installation.

Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

 Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES

1. On/Off Button

To turn the unit **On**, press the **On/Off Button**. Press the **On/Off Button** again to turn the unit **Off**.

2. Character Buttons



Press **Jessie**, **Buzz Lightyear**, **Woody**, **Lilypad**, **Smarty Pants**, **Snappy** or **Atlas** to play interactive learning activities with the characters.

3. Challenge Button

Press the **Challenge Button** to answer questions related to all characters.

4. Number Buttons



Press a **Number Button** to learn about numbers or to answer number-related questions.

5. **OK Button** 

Press the **OK Button** to confirm your choice.

6. **Left/Right Buttons** 

Press the **Left/Right Buttons** to select an activity or navigate the menus.

7. **Phone Call Button** 

Press the **Phone Call Button** to make a pretend phone call. You will hear the phone ringing and will then be able to leave a message on the answering machine.

8. **Cancel Call Button** 

Press the **Cancel Call Button** at any time to exit the current activity.

9. **Microphone** 

The **Microphone** is used for the voice activation feature. Be sure to keep the **Microphone** about 10 centimetres from your mouth for best results.



10. Light Bar

The **Light Bar** will flash or light with 6 colours when giving a response.



11. Settings Button

Press the **Settings Button** to choose from several unique ringtones, adjust the screen contrast and turn the background music **On** or **Off**.

12. Backlight On/Off Button

Press the **Backlight On/Off Button** to turn the backlight On/Off.

13. Automatic Shut-Off

To preserve battery life, the **Toy Story 5 Learning Phone** will automatically turn **Off** after several minutes of inactivity.

The unit can be turned **On** again by pressing the **On/Off Button**. The unit will also automatically turn **Off** when the batteries are very low. A warning will be displayed on screen as a reminder to change the batteries.

Note: This toy phone has reduced volume to adhere to safety regulations for close-to-the-ear toys.

ACTIVITIES

The **VTech® Toy Story 5 Learning Phone** offers a total of 8 activities to play.

1. Number Blast

Buzz Lightyear is showing off his laser blasting skills to Jessie. Help Buzz Lightyear hit numbers by pressing **Number Buttons**.



2. Galloping Shapes

Jessie and Bullseye are on their way back home to Bonnie's house. Press the **OK Button** to make Bullseye jump over the obstacles and collect the shapes.




3. More or Less

Woody is looking for Jessie. Help him find the correct doors by comparing the value of dots or numbers. Press the **Left** or **Right Button** to choose, then press the **OK Button** to confirm.



4. The Pond Messages

Chat using different emojis. Press the **Left** or **Right Button** to choose an emoji, then press the **OK Button** to confirm.

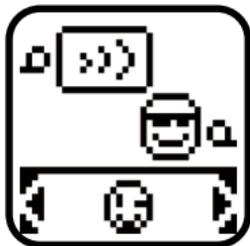

5. Smarty Pants Recharge

Smarty Pants is out of battery! Help Jessie to charge up Smarty Pants by saying, "Wake up, Smarty Pants!" into the **Microphone**.



6. Snappy Photos

Take photos of different characters with Snappy. Press the **OK Button** to take a photo.



7. Atlas's Map

Explore different places with Atlas. Scroll and choose different locations on screen to watch an animation related to that location. Press the **Left** or **Right Button** to choose, then press the **OK Button** to confirm.



8. Toy Story Challenge

Answer questions about all the characters. Press the **Character Buttons** to answer.



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

CONSUMER SERVICES

Creating and developing VTech products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

