



# LeapStory Sleep Trainer™

 


## Instruction Manual

This Manual contains important information. Please keep it for future reference.

# INTRODUCTION

Thank you for purchasing **LeapStory Sleep Trainer™**! Your child's bedtime companion with soothing sleep and wake lights, 60+ songs and stories, nature sounds and more!

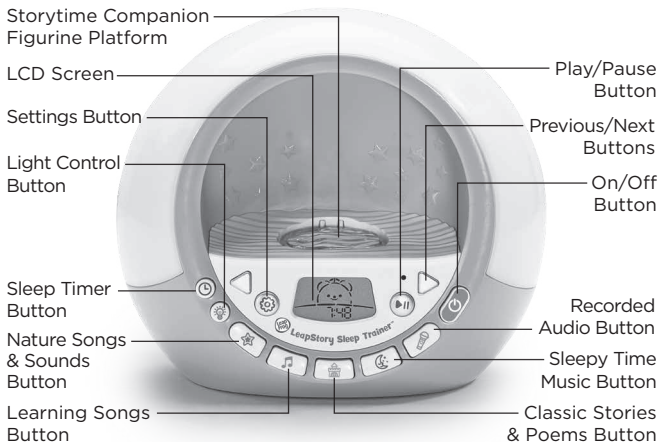

Classic Stories  
& Poems  
Figurine



Sleepy Time  
Figurine



Learning  
Songs  
Figurine





# INCLUDED IN THIS PACKAGE

- **LeapStory Sleep Trainer™**
- Three Storytime Companion Figurines
- Quick Start Guide

## WARNING

 
All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

## NOTE

Please save this Instruction Manual as it contains important information.


### Unlock the packaging locks:

- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks and discard.

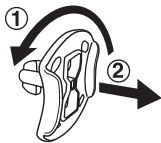

### Unlock the packaging locks:

 - ① Turn the packaging lock anticlockwise several times.
- ② Pull out and discard the packaging lock.

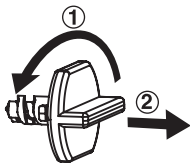


# GETTING STARTED

## Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 4 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

### WARNING

 Adult assembly required for battery installation.  
Keep batteries out of reach of children.

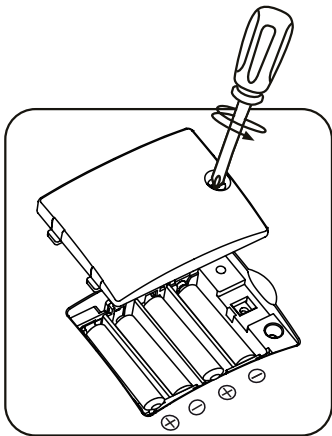

## **IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## **RECHARGEABLE BATTERIES**

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point\* so all of its materials can be recycled.

Learn more at:

[www.leapfrog.co.uk/recycle](http://www.leapfrog.co.uk/recycle)

[www.leapfrog.com.au/recycle](http://www.leapfrog.com.au/recycle)

\* Visit [www.recyclenow.com](http://www.recyclenow.com) to see a list of collection points near you.

# SAFETY INFORMATION

## Safety information when using power supply for toys

Note: The USB charger or AC/DC adaptor is referred to as “power supply” throughout the manual.

LeapFrog recommends a power supply of the below specification:

USB port for power supply:

The power input to USB port is DC  5V, with a minimum of 0.5A.

- If using a USB charger or AC/DC adaptor, this toy should only be used with a power supply suitable for use with toys.
- The power supply is not a toy.
- This toy is not intended for use by children under 3 years old.
- Do not connect the toy to more than the recommended number of power supplies.
- Never clean a plugged in toy with liquid.
- Please examine the power supply periodically for conditions that may result in the risk of fire, electric shock, or injury to persons (such as damage to the supply cord, output cord, plug, blades, housing, or other parts) and that, in the event of such conditions, the power supply should be scrapped.
- Power supplies for toys are not intended to be used as toys, and the use of these products by children shall be under the full supervision of parents.

## Unplug the USB cable or the AC adaptor if any of the following conditions exist:

- The AC adaptor, plug or USB cable has become frayed or damaged.
- The AC adaptor, plug or USB cable has been exposed to rain, liquid or excessive moisture.
- The enclosure of the AC adaptor, plug or USB cable has become damaged.
- You suspect the AC adaptor, plug or USB cable needs service or repair.

### Information about external power supplies:

|                                                 |                                                           |
|-------------------------------------------------|-----------------------------------------------------------|
| Ecodesign Information                           | (EU) 2023/826 amending Regulation (EC) No. 1275/2008      |
| Manufacturer's name                             | VTECH                                                     |
| Product type                                    | Toy                                                       |
| Model No.                                       | 6219                                                      |
| Power consumption in standby mode (Watt)        | 0.2 W                                                     |
| Default time to switch to standby mode (minute) | 1.5 minutes                                               |
| Adaptor Information                             | AC/DC adaptor, Conform to the ERP norm, DC output 5V/0.5A |

### Cleaning

 
Disconnect all cords before cleaning. Clean the product with a slightly damp cloth (cold water). Do not use soap, detergent or other chemicals. Never submerge the unit in water. Allow to dry thoroughly before re-use.

Do not connect to any power supply if wet or damaged.

# PRODUCT FEATURES

## 1. Power Switch

Slide the **Power Switch** to the **ON** position and then press the **ON/OFF Button** on the front of the device to power the toy **ON** or **OFF**. The time and alarms will be reset each time the **Power Switch** is moved to the **OFF** position. Slide the **Power Switch** to the **OFF** position if you will not use this toy for a long time.

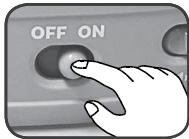


## 2. Volume Dial

Slide the **Volume Dial** left or right to adjust the volume level.



## 3. USB Port

 To power the device using a USB Power Cable (not included), insert the end of the cable into the **USB Type-C® Port**.

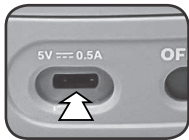


## 4. Record Switch

Slide the switch on the back of the device to record your own story, up to 10 minutes long. The newly recorded story will overwrite any previously recorded audio. To play your recorded story, press the **Recorded Audio Button** on the front of the device.



## 5. On/Off Button

 Press the **On/Off Button** on the front of the device to put it in power-saving mode. The LCD display will remain **On** during power-saving mode. Press the **On/Off Button** again to exit power-saving mode. Use the **Power Switch** on the back of the device to turn it completely off.

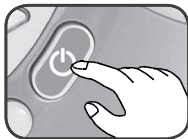


## 6. LCD Screen

The **LCD Screen** displays the clock.



## 7. Light Control Button

 This device displays soothing lights on its top and on the **Storytime Companion Figurine Platform**. Press this button to turn one or both sets of lights **On/Off**.

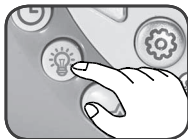


## 8. Settings Button

Hold the button for 3 seconds to adjust the following settings:


- Clock time
- Bedtime and Wake-Up Time
- Nap Time and Wake-Up Time
- Alarm **On/Off**

 Press the **Settings Button** to cycle through the options. Use the **Previous/Next Arrows** to adjust the setting and **Play/Pause** to confirm it.

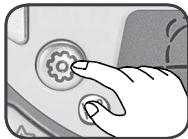

## 9. Sleep Timer Button

 Press the button to activate soothing songs and lights to help your child relax. First, press the button one, two, or three times to set the time duration to 15, 30, or 45 minutes. (Press it a fourth time to turn the feature **Off**.) Then, select a playlist by pressing a category button or putting a figurine on the pedestal. (To activate the specially created sleep training song press the **Sleepy Time Music Button**.) While the Sleep Timer is on, the device will play songs or stories in the currently selected category. When the timer is up, the device will go into power-saving mode.

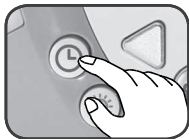

## 10. Nature Songs & Sounds Button

This button plays soothing nature sounds and nature-inspired songs.



## 11. Learning Songs Button

This button plays a variety of fun learning songs.



## 12. Classic Stories & Poems Button

Press this button to hear classic poems and entertaining stories.



 
### 13. Sleepy Time Music Button

Press this to hear calming lullabies and the sleep training song.




### 14. Recorded Audio Button

Press this to play back the audio you've recorded with the **Record Switch**.

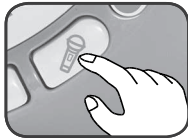


### 15. Play/Pause Button

 Press this to start or pause the audio.

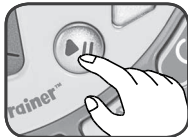

### 16. Previous/Next Buttons

 Use these buttons to play the previous or next audio item in the category you've selected.

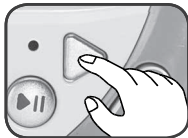

### 17. Storytime Companion Figurine Platform

Put one of the **Storytime Companion Figurines** on the platform to change the playlist.

- The **Bird** plays **Learning Songs**
- The **Bear** plays **Classic Songs & Poems**
- The **Koala** plays **Lullabies**



Pressing the **Nature Songs & Sounds Button**, **Learning Songs Button**, **Classic Stories & Poems Button**, or **Sleepy Time Music Button** can change the playlist whether or not the **Storytime Companion Figurine** is on the platform.

## 18. Automatic Shut Off

To save power, the device will automatically enter power-saving mode after about 50 seconds if a story or song is not playing. To save batteries, it's recommended to plug the **LeapStory Sleep Trainer™** device into an external USB power supply (not included) using a USB Power Cable (not included).

## 19. Night Light

A soothing night light will turn on at bedtime, nap time, and when the sleep timer is activated.

If the toy is externally powered, the night light will remain on for the entire duration. Otherwise, it will turn off after ten minutes to conserve power.

# ACTIVITIES

## Listen to a Story, Poem or Song

Press a category button or place a **Storytime Companion Figurine** on the platform to choose a category. Then press the **Previous/Next Buttons** to cycle through the playlist. Songs and stories will play automatically after their titles are announced.

## **Included Stories, Poems and Songs**

### **Nature Sounds & Songs**

1. Ocean Dreams
2. Rainfall in Forest
3. Ocean Waves - Music of the Sea
4. Earth's Song
5. Animals Round the World Go to Sleep at Night
6. Desert Sunset
7. Gentle Storm
8. Ocean Waves
9. Nature Sounds

### **Learning Songs**

1. Old MacDonald Had a Farm
2. Pat-a -Cake, Pat-a-Cake
3. London Bridge is Falling Down
4. All The Colours Of The Rainbow
5. Every Letter Makes a Sound
6. The Muffin Man
7. Counting 1 to 10
8. Hello Around The World
9. The Shapes Song
10. The Days of the Week
11. Twinkle, Twinkle Little Star
12. Pretend With Me
13. On the Farm We Can Play
14. Being a Puppy
15. 10 Grapes

## **Classic Stories and Poems**

1. Beauty and the Beast
2. Hansel and Gretel
3. World of the Dinosaurs
4. The Three Billy Goats Gruff
5. Cinderella
6. The Frog Prince
7. The Three Little Pigs
8. Jack and the Beanstalk
9. The Ugly Duckling
10. The Gingerbread Man
11. The Grand Old Duke of York
12. The Owl and the Pussy Cat
13. Incy Wincy Spider
14. Jack and Jill
15. Jack Be Nimble
16. A Wise Old Owl
17. Baa, Baa, Black Sheep
18. Sleeping Beauty
19. Goldilocks and the Three Bears
20. Round and Round the Garden
21. Robin Hood and the Golden Arrow
22. The Midas Touch
23. The Elves and the Shoe Maker
24. The Tortoise and the Hare
25. The Emperor's New Clothes
26. Theseus and the Minotaur
27. The Fox and the Crow
28. The Boy Who Cried Wolf

## **Sleepy Time Songs**

1. Sleep Training Song
2. Brahms' Lullaby
3. Frere Jacques
4. Hush Little Baby
5. It's Bedtime Solar System
6. Good Night My Sleepy Friend
7. Owl Helps Bunny Sleep
8. Moonlight Music Meditation
9. Pachelbel's Canon in D
10. Beethoven's Ode to Joy
11. Bach's Minuet in G
12. Ocean Waves - Music of the Sea

## **CARE & MAINTENANCE**

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. Examine the USB Type-C® Cable regularly, checking for damage to the cable, plugs and other parts. Do not use the USB Type-C® Cable if there is any damage.

# TROUBLESHOOTING

Check this section if you experience difficulty with operating the **LeapStory Sleep Trainer™** device.

| Problem                                                                             | Possible Cause                        | Correction                                            |
|-------------------------------------------------------------------------------------|---------------------------------------|-------------------------------------------------------|
| Your <b>LeapStory Sleep Trainer™</b> device has stopped working or does not turn on | Incorrect battery polarities.         | Ensure that the batteries are installed correctly.    |
|                                                                                     | Weak batteries.                       | Replace with new batteries.                           |
|                                                                                     | USB Type-C® Power connection problem. | Ensure that the USB Type-C® cable connection is good. |

## Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **Off** and back **On**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

# CONSUMER SERVICES

Creating and developing **LeapFrog®** products is accompanied by a responsibility that we at **LeapFrog®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## **UK Customers:**

Phone: 01702 200244 (from UK) or +44 1702 200244 (outside UK)

Website: [www.leapfrog.co.uk/support](http://www.leapfrog.co.uk/support)

## **Australian Customers:**

Phone: 1800 862 155

Website: [support.leapfrog.com.au](http://support.leapfrog.com.au)

## **NZ Customers:**

Phone: 0800 400 785

Website: [support.leapfrog.com.au](http://support.leapfrog.com.au)

# PRODUCT WARRANTY/ CONSUMER GUARANTEES

## **UK Customers:**

Read our complete warranty policy online at [leapfrog.com/warranty](http://leapfrog.com/warranty).

## **Australian Customers:**

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED -  
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [leapfrog.com/en-au/legal/warranty](http://leapfrog.com/en-au/legal/warranty) for further information.



***Visit our website for more  
information about our products,  
downloads, resources and more.***

***leapfrog.com***

A subsidiary of VTech Holdings Limited.

© 2025 LeapFrog Enterprises, Inc.

All rights reserved.

**IM-621900-000**

**Version:1**