

# Parent's Guide



Elserthe Velodreptor



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

# chool

Interactive toys to develop their imagination and encourage language development

# Ineed...

...challenging activities that can keep pace with my growing mind

Electronic Learning

Cool, aspirational and inspiring computers

Computers

for curriculum related learning

- ...intelligent technology that adapts to my level of learning
- National Curriculum based content to support what I'm learning at school

### l want...

...to get ready for school by starting to learn the alphabet and counting

- ...my learning to be as fun, easy and exciting as can be
- ...to show my creativity with drawing and music so my whole brain develops

#### vtech Bally Toys that will

stimulate their interest in different textures. sounds and colours

#### lam...

- ...responding to colours, sounds and textures
- ...understanding cause and effect
- ...learning to touch, reach, grasp, sit-up, crawl and toddle








To learn more about this and other VTech® products, visit www.vtech.co.uk

# INTRODUCTION

My name is **Blister the Velociraptor**, and I'm looking for a few good dinos to join my squad. But let me warn you – you've got to be at your best to keep up with me! I'm fast and ferocious with sharp, curved claws that make me as tough as any dino.

I make a pretty tough helicopter too! I patrol the skies with my searchlight shining down from above. Once I've got a target in my sights, there's nowhere for it to hide!

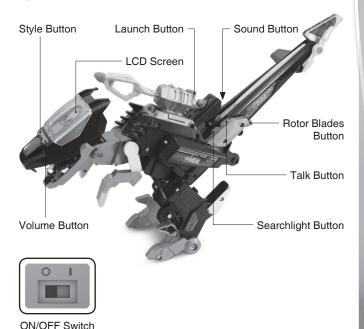

# **INCLUDED IN THIS PACKAGE**

- One VTech® SWITCH & GO DINOS® Blister the Velociraptor
- One parent's guide

WARNING: All packing materials such as tape, plastic sheets,

packaging locks, removable tags, cable ties and packaging screws are not part of this toy and should be discarded for your child's safety.


NOTE: Please keep this parent's guide as it contains

important information.

# **GETTING STARTED**

#### **BATTERY INSTALLATION**

- 1. Make sure the unit is turned OFF.
- Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw.
- Install 2 new AA (LR6/AM-3) batteries into the main unit following the diagram inside the battery box. (The use of new, alkaline batteries is recommended for maximum performance).
- 4. Replace the battery cover and tighten the screw to secure.

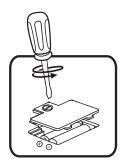

#### **BATTERY NOTICE**

- Use new alkaline batteries or fully charged NI-MH (Nickel Metalhydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.

- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

#### Disposal of batteries and product



The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

## PRODUCT FEATURES

#### 1. ON/OFF SWITCH

Slide the ON/OFF Switch to ON (I) to turn the unit ON. Slide the ON/OFF Switch to OFF (O) or hold the Talk Button for a few seconds to turn the unit OFF.



#### 2. STYLE BUTTON

Press the **Style Button** to select the dino eyes you prefer in dino mode.

Press the **Style Button** to select the pilot you prefer in helicopter mode.





#### 3. TALK BUTTON

Press the **Talk Button** to hear the dino or pilot talk.



#### 4. SOUND BUTTON

Press the **Sound Button** to hear cool sound effects.



#### 5. VOLUME BUTTON

Press the **Volume Button** to adjust the volume.

There are four levels available: low, medium, high, and mute.



#### 6. SEARCHLIGHT BUTTON

Press the **Searchlight Button** to turn on the searchlight.



#### 7. LAUNCH BUTTON

Press the **Launch Button** to launch the rocket.



#### 8. ROTOR BLADES BUTTON

Press the **Rotor Blades Button** to spin the rotor blades.




#### 9. MOTION SENSOR


Move the helicopter through the air to hear fun flying sounds!

#### 10. AUTOMATIC SHUT-OFF


To preserve battery life, the unit will automatically shut-off after several minutes without input.

# **HOW TO SWITCH THE BLISTER**

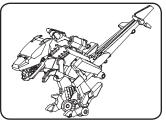

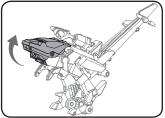


1. Velociraptor mode.

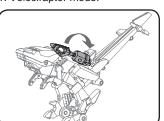

2. Move the head up.



3. Move the launcher across.

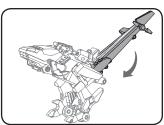


4. Fold the arms.




5. Move the tail down.


6. Flip the rotor blades to the front of the helicopter.

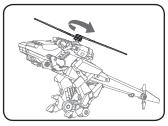

7. Spread the rotor blades.

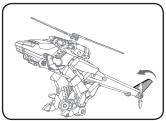


8. Turn the rear wing at the end of the tail forward.

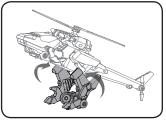

9. Flip the legs up.



10. Turn the feet up.

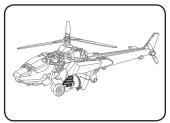

11. Move the wings down.



12. Helicopter mode.

Note: To change the helicopter back into a dino, reverse the order of the steps above.

# **CARE & MAINTENANCE**

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Remove the batteries when the unit is not in use for an extended period of time.
- Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

- Please turn the unit OFF.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit **ON**. The unit should now be ready to play with again.
- 5. If the product still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.



# **CONSUMER SERVICES**

Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

#### **UK Customers:**

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

#### **Australian Customers:**

Phone: 1800 862 155

Website: support.vtech.com.au

#### **NZ Customers:**

Phone: 0800 400 785

Website: support.vtech.com.au

# PRODUCT WARRANTY/ CONSUMER GUARANTEES

#### **UK Customers:**

Read our complete warranty policy online at vtech.co.uk/warranty.

#### **Australian Customers:**

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

# Visit our website for more information about our products, downloads, resources and more.

www.vtech.co.uk www.vtech.com.au

