

vtech[®]
Baby

User's Manual

Pop & Roll Ball Tower



© 2015 VTech
Printed in China
91-003051-011

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

Pre-School

Interactive toys to develop their imagination and encourage language development

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

Birth-36 months

3-6 years

4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the VTech® Pop & Roll Ball Tower learning toy!
There's a lot to explore with the **Pop & Roll Ball Tower**. Coloured balls spin, slide and take a ride to teach children about numbers and colours. Drop the balls into the top of the tower and listen as it identifies their colour. Kids can then push the lever to spin the balls and watch them spiral down the track!

 
**ON/OFF/VOLUME
CONTROL SWITCH**

**MODE SELECTOR
SWITCH**

**LIGHT-UP
NUMBER
BUTTONS**

LEVER

**FOUR
BALLS**

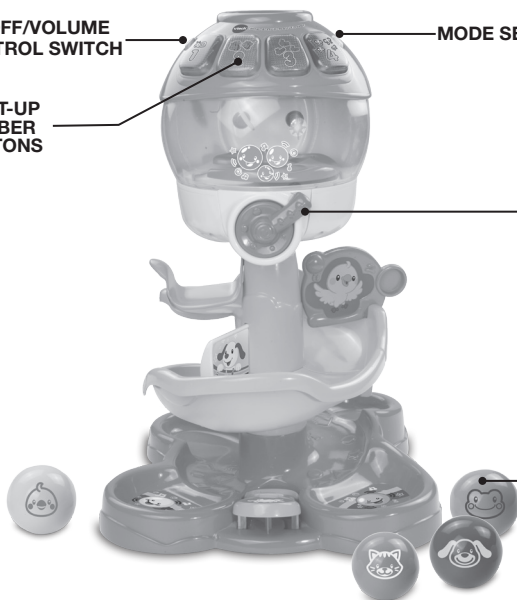

INCLUDED IN THIS PACKAGE

- One instruction manual
- Two screws
- One VTech® Pop & Roll Ball Tower activity panel



- Two spiral track pieces



- One base



- Four balls

 


WARNING: All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this instruction manual as it contains important information.

Included In This Package

Unlock the packaging locks:

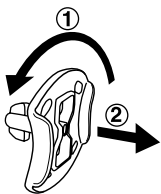


- ① Rotate the packaging locks 90 degrees counter-clockwise.
- ② Pull out the packaging locks.

GETTING STARTED

BATTERY INSTALLATION

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the activity panel. Use a screwdriver to loosen the screw.
3. Install 2 new AAA (LR03/AM-4) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

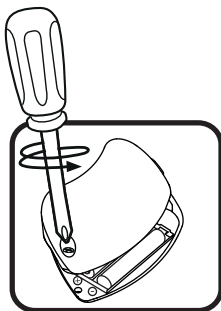

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.

- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

ASSEMBLY INSTRUCTIONS

With the **VTech® Pop & Roll Ball Tower**, safety comes first. To ensure your child's safety, adult assembly is required.

WARNING! This unit contains 2 screws (small part). For your child's safety, do not let your child play with the toy until it is fully assembled.

1. Insert the orange spiral track piece into the bottom of the **Pop & Roll Ball Tower** activity panel. You will hear it click into place when it is assembled correctly.



 
2. Insert the top of the green spiral track piece into the bottom of the orange spiral track piece. You will hear it click into place when it is assembled correctly.



3. Insert the base into the bottom of the green spiral track piece. You will hear it click into place when it is assembled correctly.



4. Please attach the two screws securely to the bottom as shown. Once you have assembled the **Pop & Roll Ball Tower** according to the instructions in the manual, please insert the two screws into bottom of the tower and tighten them until secure.

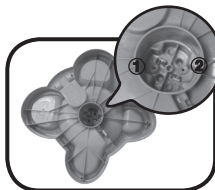





PLEASE NOTE:

This toy was designed to only be used with the balls that were included with this item at the time of purchase. Do not insert anything (body parts or foreign objects) into the hole on the top of the toy. For your child's safety, adult supervision is recommended.


PRODUCT FEATURES

1. ON/OFF/VOLUME CONTROL SWITCH

To turn the unit **ON**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **LOW VOLUME** () or the **HIGH VOLUME** () position. To turn the unit **OFF** (), slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **OFF** () position.



2. MODE SELECTOR SWITCH

To choose a mode of play, slide the **MODE SELECTOR SWITCH** to the **COLOUR MODE** () or the **NUMBER MODE** (**123**) position.

3. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Pop & Roll Ball Tower** will automatically power-down after approximately 60 seconds without input. The unit can be turned on again by pressing any button, pushing the lever or sliding the mode selector switch.

ACTIVITIES

1. Slide the **on/off/volume control switch** to turn the unit on. You will hear a playful sound, songs and fun phrases, depending on the mode. The lights will flash with the sounds.



 
2. Press the **light-up number buttons** to learn about colours and insects and hear fun songs in the colour mode. In the number mode you will learn about numbers and counting and hear a variety of melodies. The lights will flash with the sounds.



3. Drop the balls into the **magic slot** on the top of the activity panel to learn colours, hear fun sounds and short tunes in the colour mode. In the number mode you will hear the animal on the ball identified and hear fun sounds and short tunes. The lights will flash with the sounds.



4. Push the **lever** to see the balls spin around inside the activity panel and drop a ball onto the track. You will hear fun sounds and short tunes in the colour mode and playful sounds in the number mode. The lights will flash with the sounds.

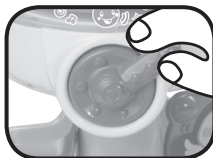


5. When the balls drop onto the track from the activity panel, you will hear playful sounds and encouraging phrases in the colour mode. In the number mode you will hear the balls counted as they drop onto the track. The lights will flash with the sounds.



Note: Please keep the product away from direct sunlight as the electronic function on the ball dropping feature will stop working.



 6. Slide, turn and press the pieces on the track for more fun.

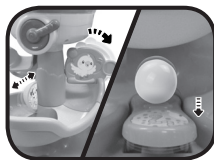

MELODY LIST

1. A-Tisket, A-Tasket
2. Three Blind Mice
3. Three Little Kittens
4. Sing a Song of Sixpence
5. Animal Fair
6. Here We Go Round the Mulberry Bush
7. Pop! Goes the Weasel
8. Camptown Races
9. One, Two, Buckle My Shoe
10. Muffin Man
11. Aiken Drum
12. Down by the Riverside

SUNG SONG LYRICS

SONG 1

We can make a rainbow,
Drop in the balls.
Orange, yellow, green and blue!

SONG 2

We have 4 balls,
Count them with me,
1-2-3-4, yeah!



SONG 3

The slow little snail is orange,
Do you like orange?

SONG 4

Do you like yellow?
The buzzing bees are yellow.



SONG 5

The crawling caterpillars are green,
Do you like green?

SONG 6


Do you like blue?
The beautiful butterflies are blue.



CARE & MAINTENANCE

- 
1. Keep the unit clean by wiping it with a slightly damp cloth.
 2. Keep the unit out of direct sunlight and away from any direct heat source.
 3. Remove the batteries when the unit will not be in use for an extended period of time.
 4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
- 

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
 2. Interrupt the power supply by removing the batteries.
 3. Let the unit stand for a few minutes, then replace the batteries.
 4. Turn the unit **ON**. The unit should now be ready to play again.
 5. If the product still does not work, replace with an entire set of new batteries.
- 



If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.



CLASS 1
LED PRODUCT



PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.