



Instruction Manual

Tune In TV



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

 
 
4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTech® Tune In TV!** Find discoveries on every channel with this amazing TV! Press the buttons on the remote to magically flip through channels and turn the volume dial on the TV to adjust the volume.

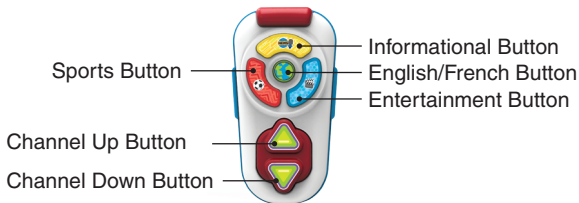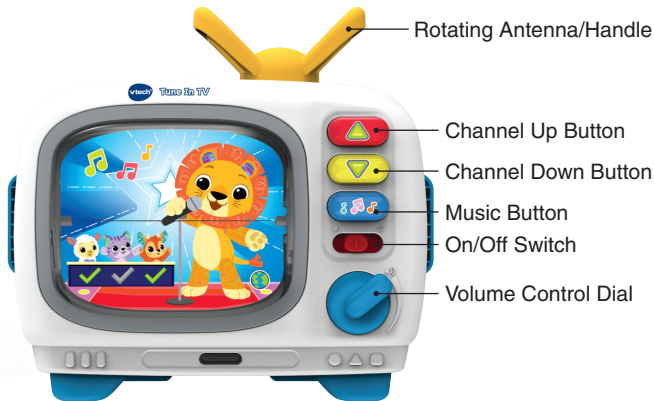

INCLUDED IN THE PACKAGE

- **Tune In TV**
- 1 Remote Control
- Quick Start Guide

WARNING

 
All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.


Removing the Packaging Locks

- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks and discard.

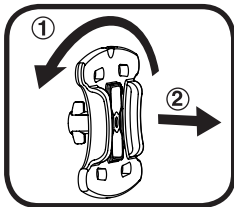

Removing the Packaging Locks

 - ① Turn the packaging locks anticlockwise several times.
- ② Pull out the packaging locks and discard.

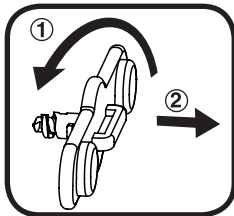

WARNING:

 
Adult assembly required for battery installation.

Keep batteries out of reach of children.

INSTRUCTIONS


Battery Removal and Installation-TV

1. Make sure the unit is turned OFF.
2. Find the battery cover located on the back of the unit. Use a screwdriver to loosen the screw, and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AA (AM-3/LR6) batteries following the diagram inside the battery box (for best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

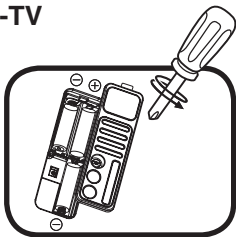

Battery Removal and Installation-Remote Control

 1. Find the battery cover located on the back of the unit. Use a screwdriver to loosen the screw, and then open the battery cover.
2. Remove old batteries by pulling up on one end of each battery.
3. Install 2 new AAA (AM-4/ LR03) batteries following the diagram inside the battery box (for best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
4. Replace the battery cover and tighten the screw to secure.

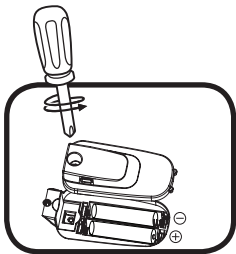

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.



Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:



www.vtech.co.uk/recycle

 
www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES

1. On/Off Switch

To turn the unit **On**, slide the **On/Off Switch** to the **On** () position. You will hear fun sounds, a phrase, and a song. To turn the unit **Off**, slide the **On/Off Switch** to the **Off** () position.

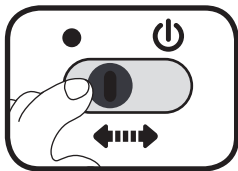

2. Remote Control

The **Remote Control** works up to 13 feet away from the TV unit. Be sure there are no obstructions directly between the **Remote Control** and the **TV**. The **Remote Control** becomes inactive approximately 1 hour after the **TV** enters sleep mode.

3. Automatic Shut-off

To preserve battery life, the **Tune In TV** will automatically power down after approximately 40 seconds of inactivity. To reactivate the unit, press any of the three light up buttons on the TV, turn the volume dial, or use the remote control within one hour. Please note, the remote control will not function if the TV has been in sleep mode for approximately one hour.

NOTE

If the TV and remote control power down, the lights fade during play, or the short 'no power' tune is heard, we recommend replacing the batteries.

Television Activities

1. Light Up Channel Up/Down Button

Press the **Light Up Channel Up/Down Button** to change the channel, it will go to the previous/next channel of the current channel. You will hear fun sounds, friendly phrases and music. The lights will flash with the sound.



2. Light Up Music Button

Press the **Light Up Music Button** to play 12 sing-along songs and 9 melodies with classic, pop and rock styles. The lights will flash with the sound.




3. Volume Control Dial

 
Turn the **Volume Control Dial** to select the desired volume.



Remote Control Activities

1. Informational Button

Press the **Informational Button**  to explore channels featuring the Weather, Wildlife, News, and the Art Studio. Enjoy imaginative phrases, engaging sounds, and short tunes, accompanied by flashing lights.

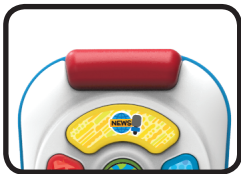


2. Sports Button

Press the **Sports Button**  to explore channels featuring a Football Match and a Kart Race. Enjoy imaginative phrases and songs, engaging realistic football and car sounds, accompanied by flashing lights.




3. English/French Button

Press the **English/French Button**  to access 5 bilingual channels in English and French. Enjoy dynamic sounds, fun phrases, and songs, with lights that flash along with the sound.



4. **Entertainment Button**

Press the **Entertainment Button**  to explore channels such as a Talent Show, Talk Show, Cooking, and a Film. Meet new characters and embark on exciting adventures, all accompanied by lively sound effects and flashing lights.



5. **Channel Up/Down Button**

Use the **Channel Up/Down Buttons** to navigate through channels, switching to the previous or next one seamlessly. Each change is accompanied by entertaining sound effects, phrases, and songs, with lights flashing in sync.



MELODIES

1. Für Elise - Beethoven
2. Piano Sonata in C, K545 1st Movement - Mozart
3. Blue Danube Waltz
4. Do You Know the Muffin Man?
5. Yankee Doodle
6. Hickory Dickory Dock
7. Incy Wincy Spider
8. Oh Where, Oh Where Has My Little Dog Gone?
9. One, Two, Buckle My Shoe

SONG LYRICS

Song 1

Friends near and at home,
Raise your hands high!
The wonderful show begins,
With fun and laughter, oh my!

Song 2

Old MacDonald had a farm, E-I-E-I-O!
And on that farm he beat boxed, boom-buh-boom-buh-Tss!
With a drum kick here and a snare hit there,
Here a beat, there a box, everywhere he beat boxed!
Old MacDonald had a farm, E-I-E-I-O!

Song 3

Tous les animaux du monde,
Tous les animaux sont nos amis,
Du lion à la colombe,
Du renard au ouistiti !

Song 4

Friends near and far,
Raise your hands up!
Shine bright like a star!
Shine bright like a star!

Song 5

1, 2, 3, 4,
Levez vos bras,
5, 6, 7 et 8,
Chantons à pleine voix !

Song 6

We are the winners!
Hooray, hooray!
We are the winners!
Hooray, hooray!

Song 7

Nous sommes les champions,
Hourra ! Hourra !
Nous sommes les champions,
Hourra ! Hourra !

Song 8

Salads on the menu today,
So let's chop up some leafy greens,
Mix in some red tomatoes,
And throw in some crunchy carrots too!

Song 9

Pour faire notre plat,
Il faut des tomates,
Et mélanger avec la salade !

Song 10

Elephants are clever, they use their trunks to drink,
Silly monkeys hang, and love to swing and sway!

Song 11

Red, orange, and blue,
Yellow, purple, and green,
Colours bright and true,
Let's paint a rainbow scene!

Song 12

ABCDEFGHIJKLM
NOPQRSTUVWXYZ and Z

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play with again.
5. If the unit is not working properly, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department, and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

