

vtech®

Parent's Guide

Too-Too Friends™

Pirate Ship



91-003548-009 ©

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school



4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTech® Toot-Toot Friends™ Pirate Ship!** Place Captain Monty, Sailor Stanley and the Monkey on the **MagicPoint™** location to hear fun sounds and music. Press the cannon button to launch the cannonball and to hear fun sounds. You can also open up the ship to reveal a treasure island for more pirate role play fun!

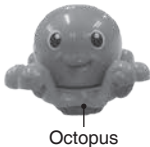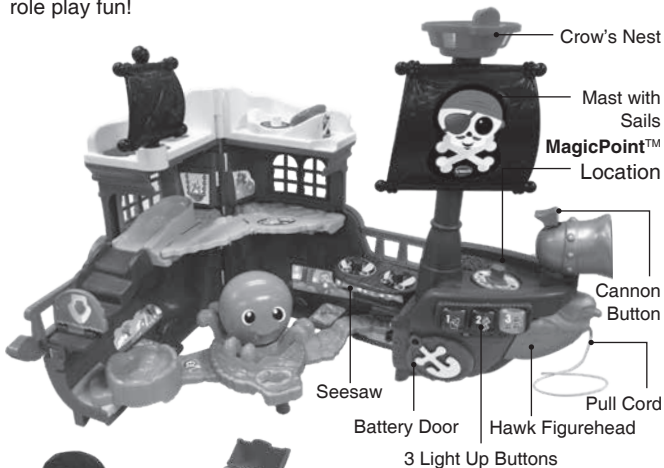

INCLUDED IN THIS PACKAGE

NOTE: This toy is not intended for teething.

This toy is not intended for play in water.



- One character - Captain Monty



- One character - Sailor Stanley



- One character - Monkey



- One octopus



- One cannonball



- One treasure chest



- One mast with sails



- One cannon




- One hawk figurehead



- One small sails



- One pirate ship with **MagicPoint™**

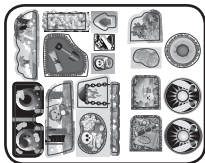


- One label sheet

- One parent's guide

Removing the packaging locks:

(There are two packaging locks located on the octopus).

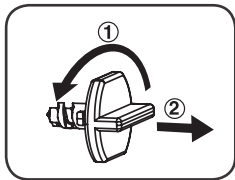

- ① Turn the packaging locks anticlockwise several times.
- ② Pull out and discard the packaging locks.


WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this parent's guide as it contains important information.

WARNING:



For your child's safety, please do not put anything but the cannonball included with the product into the cannon.

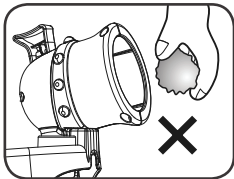

GETTING STARTED

Battery Installation - Pirate Ship

1. Make sure the toy is turned **OFF**.
2. Locate the battery cover on the bottom right of the pirate ship. Use a screwdriver to loosen the screw.
3. Install 2 new AA size (LR6/AM-3) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
4. Replace the battery cover and tighten the screw to secure.

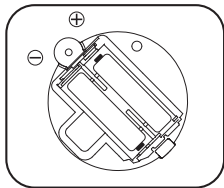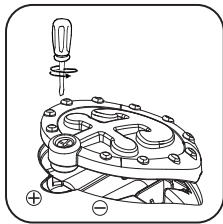

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

CAUTION:

Adult assembly required. For your child's safety, do not let your child play with this toy until it is fully assembled.


ASSEMBLY INSTRUCTIONS

With the **VTech® Toot-Toot Friends™ Pirate Ship**, safety comes first. To ensure your child's safety, adult assembly is required.


1. Insert the **Mast with Sails** into the mounting hole behind the **MagicPoint™** as shown in the picture. Then firmly push the mast into place, and you will hear a click when it is properly inserted.




2. Insert the **Small Sails** into the mounting hole beside the helm as shown in the picture. Then push down firmly and you will hear a click when it is properly inserted.

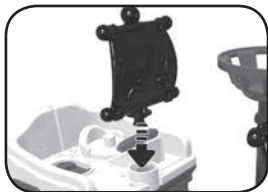

3. Insert the **Cannon** into the mounting hole on the front deck as shown in the picture. Push down firmly and you will hear a click sound when properly inserted.




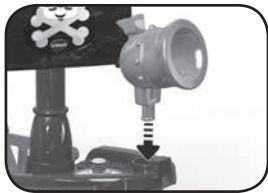



4. Attach the **Hawk Figurehead** to the small nub on the front of the ship as shown in the picture. Push firmly towards the ship and you will hear a click sound when properly inserted.

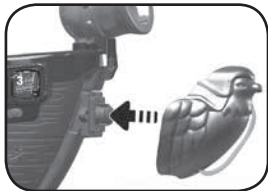

LABEL APPLICATION

Please stick the labels to the play set securely as indicated below.

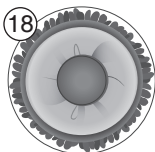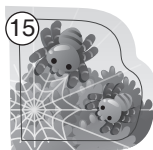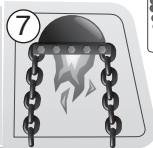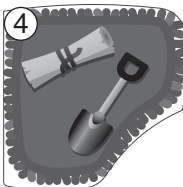

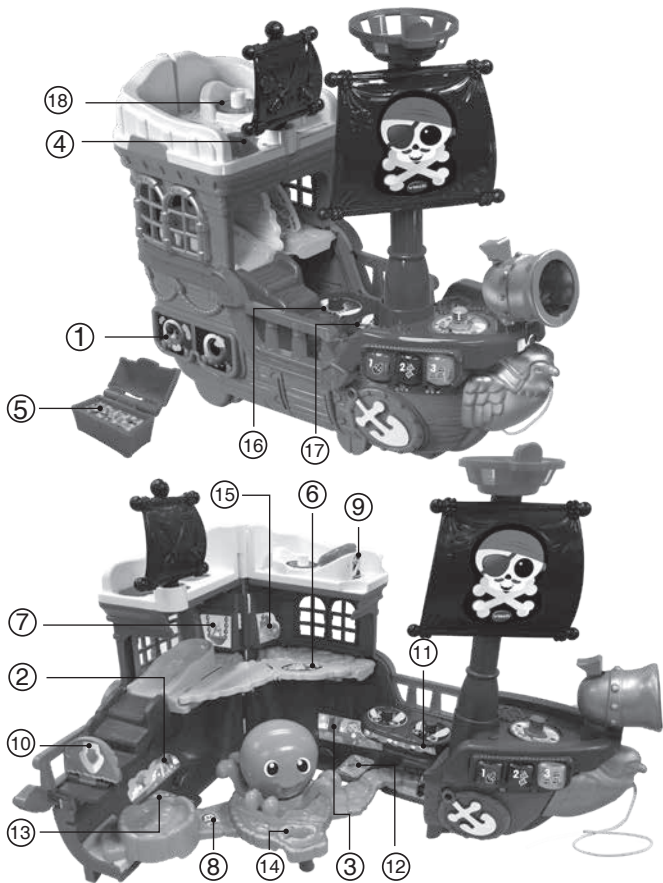

PRODUCT FEATURES - PIRATE SHIP


1. Off/Volume Switch

To turn the pirate ship ON, slide the switch to either the **Low Volume** (🔊) or **High Volume** (🔊🔊) position. To turn the pirate ship OFF, slide the switch to the **Off** (●) position.



2. Mode Switch

Slide the **Mode Switch** to the left to enter **Explore Mode**. Slide the **Mode Switch** to the middle to enter **Role Play Mode**. Slide the **Mode Switch** to the right to enter **Music & Songs Mode**.

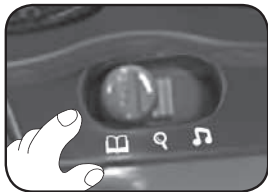


3. Light Up Buttons

Press the three **Light Up Buttons** to learn about colours and objects, to play pirate role play games, and to hear songs, music and fun sounds.



4. Cannon Button

Insert the cannonball into the cannon, then press the **Cannon Button** to launch and hear fun sounds.

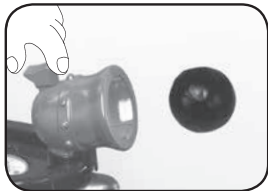

5. MagicPoint™ Location


There is one **MagicPoint™** located on the front deck of the ship. Place the characters onto the **MagicPoint™** location to hear fun responses.

The **MagicPoint™** location can also interact with other **VTech® Toot-Toot Friends™** characters (each sold separately).




6. Transformation

The ship can be transformed from a ship to a treasure island. Open the ship or close the ship to hear fun responses.

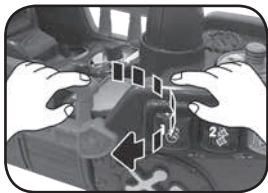

7. Pull Cord and Storage

Remove the **Pull Cord** from the storage compartment on the bottom of the **Hawk Figurehead** and hold it to pull the ship along. For your child's safety we suggest you store the **Pull Cord** in the compartment until your child is walking. We also recommend that you supervise your child when using the **Pull Cord**.

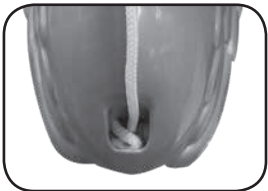

8. Automatic Shut Off

To preserve battery life, the **Pirate Ship** will automatically power down after several minutes of no input. The ship can be turned on again by sliding the **Off/Volume Switch** to the **Low Volume** position or **High Volume** position, or by sliding the **Mode Switch** to the **Explore Mode**, **Role Play Mode** or **Music & Songs Mode** position.

NOTE: If the ship powers down while playing, we suggest installing a brand new set of batteries.

ACTIVITIES - PIRATE SHIP

Slide the **Off/Volume Switch** to either the **Low Volume** or **High Volume** position to turn the pirate ship on.

1. Mode 1: Explore

Slide the **Mode Switch** to the left position to enter this mode. Press the **Light Up Buttons** to learn about colours, objects, letters, counting and more!

Place the characters onto the **MagicPoint™** location to hear the characters talk and introduce themselves, or press the **Cannon Button** to hear fun sounds.



2. Mode 2: Role Play

Slide the **Mode Switch** to the middle position to enter this mode. Press the **Light Up Buttons**, **Cannon Button** and place the characters onto the **MagicPoint™** location to play fun pirate role play games!



3. **Mode 3: Music & Songs** 🎵

Slide the **Mode Switch** to the right position to enter this mode. Press the **Light Up Buttons** to hear pirate themed melodies and songs. Place the characters onto the **MagicPoint™** location to hear the characters talk and sing, or press the **Cannon Button** to hear fun sounds.



MOTOR SKILL DEVELOPMENT

Explore the **Pirate Ship** and find all of these great manipulative features which encourage motor skill development.

The play set can be transformed from a ship to a treasure island, providing two fun scenarios to play! .



Pirate Ship Mode

When the ship is closed, you can go on an adventure with Captain Monty, Sailor Stanley and the Monkey:

1. Place a character on the **Crow's Nest** to overlook the sea and island.



2. Place a character by the **Helm**, then turn it to pretend that the character is sailing the ship.




3. Place two characters on the **Seesaw** and move them up and down.




4. Twist the **Small Sails** and **Mast with Sails** in different directions.



5. Insert the **Cannonball** into the **Cannon**, then press the **Cannon Button** to launch the **Cannonball**.

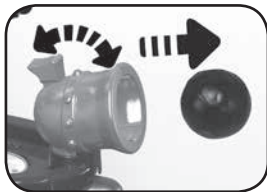


6. Hold the cord fastened on the **Hawk Figurehead** and pull the ship along.

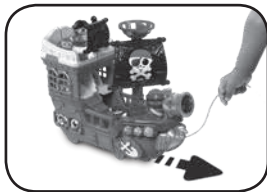

Treasure Island Mode

When the ship is open, you can explore the treasure island for fun:

1. Flip the **Stair Door** down and place a character on it. Then pull out the **Plank** and drop the **Cannonball** into the hole. You can see the **Cannonball** roll down the stairs and knock down the character as shown in the picture.
2. Flip the **Stair Door** up and drop the **Cannonball** into the hole. You can see the **Cannonball** roll down the stairs and bounce onto the ground floor as shown in the picture.
3. Place the **Octopus** on the beach and turn its legs.
4. Move the **Octopus** back and forth to see its legs spin.

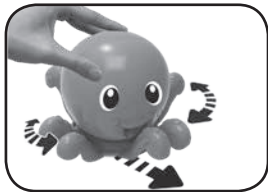

5. Open and Close the **Treasure Chest**.



CARE & MAINTENANCE

1. Keep the product and its metal parts clean by wiping them with a slightly damp cloth.
2. Keep the product out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the product is not in use for an extended period of time.
4. Do not drop the product on a hard surface and do not expose the product to excess moisture or water.

TROUBLESHOOTING

If for some reason the toy stops working or malfunctions whilst a character is on the **MagicPoint™** location, please remove the character and place them back onto the **MagicPoint™**.

If the toy still does not function, or if for some reason the toy stops working or malfunctions on its own, please follow these steps:

1. Please turn the toy **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the toy stand for a few minutes, then replace the batteries.
4. Turn the toy **ON**. The toy should now be ready to play with again.
5. If the toy still does not work, install a new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing VTech products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.



CLASS 1
LED PRODUCT

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

