

**vtech®**

# Instruction Manual

## Singing Sounds Microphone





**VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...**

## **Pre-School**

**Interactive toys to develop their imagination and encourage language development**

## **vtech Baby**

**Toys that will stimulate their interest in different textures, sounds and colours**

### **I am...**

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

**Birth-36 months**



### **I want...**

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

**3-6 years**



## **Electronic Learning Computers**

**Cool, aspirational and inspiring computers for curriculum related learning**

### **I need...**

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

**4-10 years**



To learn more about this and other VTech® products, visit [www.vtech.co.uk](http://www.vtech.co.uk)



# INTRODUCTION

Thank you for purchasing the **Singing Sounds Microphone**. Sing along to the 15 built-in songs with or without the vocal track! You can also sing along to your favourite songs by connecting your own personal battery powered external music player via *Bluetooth®*! Enjoy playing around with the 5 funny voice effects and more! Let's start your music show!






## INCLUDED IN THIS PACKAGE

- One Singing Sounds Microphone
- Quick Start Guide

**WARNING:** All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

**NOTE:** Please keep this Instruction Manual as it contains important information.

### Removing the Packaging Locks

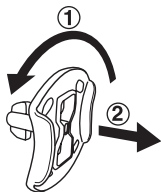

- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks.




## GETTING STARTED

The **Singing Sounds Microphone** is in try-me mode in the packaging. To exit try-me mode, just slide the On/Off Switch from ON to OFF to ON again.

## BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw. Then, remove the cover.
3. If a depleted battery is present, remove it by pulling up on one end of the battery.
4. Install 3 new AAA (LR03/AM-4) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
5. Replace the battery cover and tighten the screw to secure.

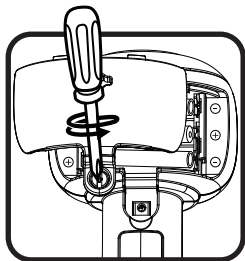

### WARNING:

Adult assembly required for battery installation.  
Keep batteries out of reach of children.



## **IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

### **RECHARGEABLE BATTERIES:**

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.





## Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point\* so all of its materials can be recycled.

Learn more at:

[www.vtech.co.uk/recycle](http://www.vtech.co.uk/recycle)

[www.vtech.com.au/sustainability](http://www.vtech.com.au/sustainability)

\* Visit [www.recyclenow.com](http://www.recyclenow.com) to see a list of collection points near you.



# PRODUCT FEATURES

## 1. ON/OFF SWITCH

To turn the unit ON, slide the switch to the ON position. To turn the unit OFF, slide the switch to the OFF position.



## 2. MICROPHONE

Speak or sing into the microphone and the built-in speaker will amplify your voice.



**Please note:** If your voice is too loud, then the microphone will temporarily lower the speaker volume in order to protect hearing.

## 3. PLAY & PAUSE BUTTON

Press the PLAY & PAUSE BUTTON to play or pause the music.





#### 4. NEXT SONG BUTTON

Press the NEXT SONG BUTTON to play the next song.



#### 5. PREVIOUS SONG BUTTON

Press the PREVIOUS SONG BUTTON to play the previous song.



#### 6. DUET BUTTON (MUSIC MODE) / FUNNY SOUND EFFECTS BUTTON (*Bluetooth*® MODE)

Press the DUET BUTTON in music mode to remove or add back in the vocal track of the 15 built-in songs.

In *Bluetooth*® mode, this button will be the FUNNY SOUND EFFECTS BUTTON. Press it to play funny sound effects.



#### 7. VOLUME UP BUTTON

Press the VOLUME UP BUTTON to increase the volume of the microphone.





## 8. VOLUME DOWN BUTTON

Press the VOLUME DOWN BUTTON to decrease the volume of the microphone.



## 9. VOICE CHANGER BUTTON

Press the VOICE CHANGER BUTTON to change your voice to different funny styles.



## 10. APPLAUSE BUTTON

Press this button to trigger applause sound effects.



## 11. *Bluetooth*® BUTTON

Hold the *Bluetooth*® BUTTON to connect to your own battery powered external music player. When the microphone is pairing, the *Bluetooth*® light will flash. When the microphone is successfully connected with a device, the *Bluetooth*® light will remain on.





## **Bluetooth® CONNECTION**

1. Hold the *Bluetooth®* button down for several seconds until the *Bluetooth®* button lights up and flashes.
2. Enter the *Bluetooth®* interface of your device and begin searching for *Bluetooth®* devices.
3. Select “VTech 5510 Microphone” when you see it displayed on your device.
4. Enter the voiced out PIN number from the microphone on the device.
5. When the *Bluetooth®* connection is successful, you will hear a sound effect and “*Bluetooth®* connected”. The *Bluetooth®* button light will remain on.
6. To exit *Bluetooth®* mode, hold the *Bluetooth®* button until you hear “*Bluetooth®* disconnected”.
7. The microphone will automatically search and connect to the last *Bluetooth®* device that it was connected to before. You do not need to enter the PIN number again.
8. The effective distance between the *Bluetooth®* device and Singing Sounds Microphone is approximately 3 metres/10 feet; The Singing Sounds Microphone may disconnect when the *Bluetooth®* device exceeds 3 metres/10 feet.

## **AUTOMATIC SHUT-OFF**

To preserve battery life, the Singing Sounds Microphone will automatically shut off after several minutes without any button or voice input. The microphone can be turned on again by pressing the Play/Pause Button or sliding the On/Off Switch.

## **LOW BATTERIES**

The microphone will flash a red light a few times and power off when the batteries are weak.



# ACTIVITIES

## 1. SING WITH ME

Sing along to the 15 built-in songs in music mode with or without the vocal.

## 2. YOUR FAVOURITE SONG

Connect your battery powered external music device with the microphone via *Bluetooth*®. Let's play your favourite song!

## 3. PARTY TIME

Have fun speaking or singing with 5 different voice effects! You can also hear applause sound effects at any time by pressing the applause button.



# SING-ALONG SONG LYRICS

### SONG 1: BINGO

There was a farmer who had a dog,  
And Bingo was his name-o!  
B-I-N-G-O,  
B-I-N-G-O,  
B-I-N-G-O,  
And Bingo was his name-o!

### SONG 2: LONDON BRIDGE

London Bridge is falling down,  
Falling down, falling down,  
London Bridge is falling down,  
My fair lady,





### SONG 3: MUFFIN MAN

Oh, do you know the muffin man,  
The muffin man, the muffin man,  
Oh, do you know the muffin man,  
That lives on Drury Lane?

Oh, yes, I know the muffin man,  
The muffin man, the muffin man,  
Oh, yes, I know the muffin man,  
That lives on Drury Lane.

### SONG 4: ONE MAN WENT TO MOW A MEADOW

One man went to mow,  
Went to mow a meadow,  
One man and his dog,  
Went to mow a meadow.

Two men went to mow,  
Went to mow a meadow,  
Two men, one man and his dog,  
Went to mow a meadow.

### SONG 5: SKIP TO MY LOU

Lou, Lou, skip to my Lou,  
Lou, Lou, skip to my Lou,  
Lou, Lou, skip to my Lou,  
Skip to my Lou, my darlin'!

Flies in the sugarbowl, shoo, shoo, shoo!  
Flies in the sugarbowl, shoo, shoo, shoo!  
Flies in the sugarbowl, shoo, shoo, shoo!  
Skip to my Lou, my darlin'!



### SONG 6: TWINKLE TWINKLE LITTLE STAR

Twinkle, twinkle, little star,  
How I wonder what you are,  
Up above the world so high,  
Like a diamond in the sky,  
Twinkle, twinkle, little star,  
How I wonder what you are.

### SONG 7: LOOBY LOO

Here we go looby loo,  
Here we go looby light,  
Here we go looby loo,  
All on a Saturday night!  
You put your right hand in,  
You take your right hand out,  
You give your hand a shake, shake, shake!  
And turn yourself about!

### SONG 8: WHEELS ON THE BUS

The wheels on the bus go round and round,  
Round and round,  
Round and round.  
The wheels on the bus go round and round,  
All 'round the town.  
  
The wipers on the bus go swish, swish, swish!  
Swish, swish, swish!  
Swish, swish, swish!  
The wipers on the bus go swish, swish, swish!  
All 'round the town.



### SONG 9: POLLY PUT THE KETTLE ON

Polly put the kettle on,  
Polly put the kettle on,  
Polly put the kettle on,  
We'll all have tea.

Sukey take it off again,  
Sukey take it off again,  
Sukey take it off again,  
They've all gone away.

### SONG 10: A-TISKET A-TASKET

A-tisket a-tasket,  
A green and yellow basket,  
I wrote a letter to my love,  
And on the way I dropped it.

I dropped it, I dropped it,  
Yes, on the way I dropped it,  
A little girl picked it up,  
And put it in her pocket.

### SONG 11: HEY DIDDLE DIDDLE

Hey, diddle, diddle, the cat and the fiddle,  
The cow jumped over the moon,  
The little dog laughed to see such fun,  
And the dish ran away with the spoon!



## SONG 12: HOT CROSS BUNS

Hot cross buns,  
Hot cross buns,  
One a penny,  
Two a penny,  
Hot cross buns.

Give them to your daughters,  
Give them to your sons,  
One a penny,  
Two a penny,  
Hot cross buns.

## SONG 13: AIKEN DRUM

There was a man lived in the moon,  
lived in the moon,  
lived in the moon,  
There was a man lived in the moon,  
And his name was Aiken Drum.

And he played upon a ladle,  
a ladle,  
a ladle,  
And he played upon a ladle,  
and his name was Aiken Drum.





#### SONG 14: MULBERRY BUSH

Here we go 'round the mulberry bush,  
The mulberry bush,  
The mulberry bush,  
Here we go 'round the mulberry bush,  
On a cold and frosty morning.  
This is the way we wash our face,  
Wash our face,  
Wash our face,  
This is the way we wash our face,  
On a cold and frosty morning.

#### SONG 15: OLD MACDONALD

Old MacDonald had a farm,  
E-I-E-I-O!  
And on his farm he had a cow,  
E-I-E-I-O!  
With a moo moo here!  
And a moo moo there!  
Here a moo, there a moo,  
Everywhere a moo moo!  
Old MacDonald had a farm,  
E-I-E-I-O!



## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play with again.
5. If the unit still does not work, install a brand new set of batteries.

If there is a *Bluetooth*® connection problem, please follow these steps:

1. Delete “VTech 5510 Microphone” from your device’s list of paired *Bluetooth*® devices.
2. If applicable, select to forget the pair code of the Microphone.
3. Reconnect the microphone to your device by selecting “VTech 5510 Microphone” from the list of available *Bluetooth*® devices on your device.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.



## **Bluetooth® STATEMENT**

The *Bluetooth®* word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by **VTech®** is under license.

## **DECLARATION OF CONFORMITY**

Hereby, VTech Electronics Europe BV declares that the radio equipment type 5510 is in compliance with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following internet address:

[www.vtech.com/re-directive](http://www.vtech.com/re-directive)

Frequency Band: 2402MHz – 2480MHz

Maximum RF power: 0.000912W (-0.4dBm)

## **DECLARATION OF CONFORMITY**

Hereby, VTech Electronics Europe Plc declares that the radio equipment type 5510 is in compliance with The Radio Equipment Regulations 2017 (2017 No.1206). The full text of the Declaration of Conformity is available at the following internet address:

[www.vtech.com/re-directive](http://www.vtech.com/re-directive)

Frequency Band: 2402MHz – 2480MHz

Maximum RF power: 0.000912W (-0.4dBm)





## CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

### **UK Customers:**

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: [www.vtech.co.uk/support](http://www.vtech.co.uk/support)

### **Australian Customers:**

Phone: 1800 862 155

Website: [support.vtech.com.au](http://support.vtech.com.au)

### **NZ Customers:**

Phone: 0800 400 785

Website: [support.vtech.com.au](http://support.vtech.com.au)

## PRODUCT WARRANTY/ CONSUMER GUARANTEES

### **UK Customers:**

Read our complete warranty policy online at [vtech.co.uk/warranty](http://vtech.co.uk/warranty).

### **Australian Customers:**

**VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES**

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [vtech.com.au/consumerguarantees](http://vtech.com.au/consumerguarantees) for further information.



**Visit our website for more  
information about our products,  
downloads, resources and more.**

***[www.vtech.co.uk](http://www.vtech.co.uk)***  
***[www.vtech.com.au](http://www.vtech.com.au)***



© 2021 VTech.  
All rights reserved.  
IM-551000-000  
Version:3