

vtech®

User's Manual

Swim & Splash Dolphin



© 2016 VTech
Printed in China
91-003214-003 (M)

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

Pre-School

Interactive toys to develop their imagination and encourage language development

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

Birth-36 months



3-6 years



4-10 years

 


To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTech® Swim & Splash Dolphin** learning toy.

The **VTech® Swim & Splash Dolphin** is a playful bath toy that likes to spray water. Twist the starfish to activate fun sounds, phrases and music. Pour water on the dolphin or dive the dolphin under the water for fun responses and to see water spray out of its snorkel.

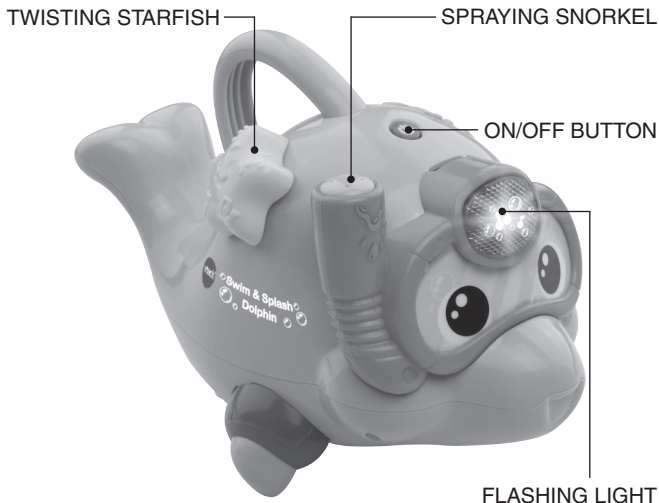

INCLUDED IN THIS PACKAGE

- One VTech® Swim & Splash Dolphin learning toy
- One user's manual

 
WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please keep user's manual as it contains important information.

Unlock the packaging locks:

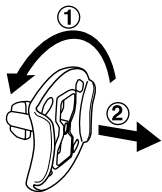


① Rotate the packaging locks 90 degrees counter-clockwise.

② Pull out the packaging locks.

GETTING STARTED

BATTERY INSTALLATION

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw.
3. Install 3 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.
5. When closing the battery cover ensure that the screw is securely tightened. This will avoid any water leakage.

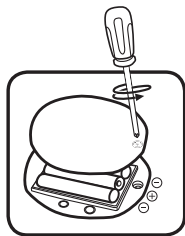

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

 
www.recycle-more.co.uk

www.recyclenow.com

PRODUCT FEATURES

1. ON/OFF BUTTON

To turn the unit **ON**, press the **ON/OFF BUTTON**. To turn the unit **OFF**, press the **ON/OFF BUTTON** a second time.

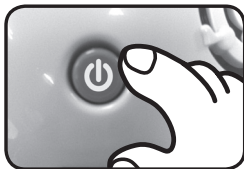

2. WATER SENSOR

The **WATER SENSOR** is located on the top of the dolphin's head. To activate the water spraying effect, pour water on the dolphin's head, just above the mask, when the unit is first turned on.



Please note the following:

- Adult supervision is recommended when the spraying water is activated.
- Keep the speaker above the water for optimal sound quality. When the speaker is submerged in the water the sound will be muffled.
- The bottom of the dolphin must be submerged in the water to activate the motor that sprays the water.
- Do not submerge the water sensor in the water. If the water sensor is submerged, it will not work properly.

3. SPRAYING SNORKEL

The **SPRAYING SNORKEL** is located next to the light-up mask. For the spraying to work properly, the snorkel must be above the water. If the snorkel is submerged or covered, it will not spray water.



 
4. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Swim & Splash Dolphin** will automatically power-down after approximately one minute without input. The unit can be turned on again by pressing any button.


Note: If the unit repeatedly powers down or the light flashes then fades out, we suggest changing the batteries.

ACTIVITIES

1. Press the **on/off button** to turn the unit on. You will hear fun sounds, a song and a phrase. The light will flash with the sounds.

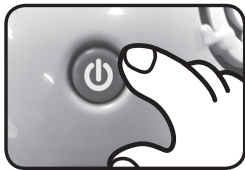

 2. Twist the **starfish** to hear fun phrases, sounds, songs and melodies. When a melody is playing, pour water on the dolphin's head to activate the water sensor and hear fun sounds play over the melody. The light will flash with the sounds.

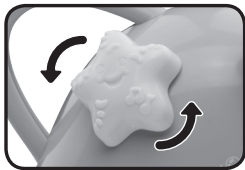

3. When the dolphin is floating on the water, pour water on the dolphin's head to activate the **water sensor** and hear fun sounds and watch the water spray out of the snorkel. The light will flash with the sounds.



4. Dive the dolphin under the water for more than two seconds, then bring it back up to the surface of the water to hear playful phrases and melodies. The light will flash with the sounds.

MELODY LIST

1. Row, Row, Row Your Boat
2. It's raining it's pouring
3. My Bonnie Lies Over the Ocean
4. Sailing, Sailing
5. Down by the Riverside
6. What shall we do with the drunken sailor
7. I've Been Working on the Railroad
8. Jack and Jill
9. I'm a little teapot
10. Old King Cole
11. Humpty Dumpty
12. Pat-a-Cake
13. Froggy Went a Courtin'
14. Little Boy Blue
15. Alouette
16. Ring Around the Rosy
17. Three Little Kittens
18. Take Me Out to the Ball Game
19. Twinkle, Twinkle Little Star
20. Ta-ra-ra Boom De-Ay

SING-ALONG SONG LYRICS

SONG 1

I'm a dolphin, I live in the ocean,
I swim, I leap and cause a commotion.

SONG 2

Hear me whistle,
Hear me giggle,
Now watch me splash.

SONG 3

I love the bath, I like to splish and splash.
Water, water, everywhere!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Make sure you empty the water out of all the elements of the unit and rinse thoroughly before drying so no sediment or cleaning products are left on the unit.
5. Make sure to dry all the elements of the unit before storing.
6. Do not drop the unit on hard surfaces.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing VTech® products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.

CLASS 1
LED PRODUCT



Join the VTech club online at www.vtech.co.uk



vtech®

PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.



1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
Please include details of the fault together with your name and address.
9. To keep an online record of your warranty, please register your product online at www.vtech.co.uk/warranty

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

