

**vtech®**

# Instruction Manual



## Repair Centre



**VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...**

## **vtech** Baby

**Toys that will stimulate their interest in different textures, sounds and colours**

### **I am...**

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

**Birth-36 months**



## **Pre-School**

**Interactive toys to develop their imagination and encourage language development**

### **I want...**

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

**3-6 years**



## **Electronic Learning Computers**

**Cool, aspirational and inspiring computers for curriculum related learning**

### **I need...**

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

**4-10 years**

 


To learn more about this and other VTech® products, visit [www.vtech.co.uk](http://www.vtech.co.uk)

# INTRODUCTION

Thank you for purchasing the **VTech® Toot-Toot Drivers®** Repair Centre.

Lift, fix and learn with the **Toot-Toot Drivers®** Repair Centre. Including a repair base with a movable mechanical arm, controlled with an easy-to-use joystick. Move around the play set to interact with a fun tyre roller and role play car wash. 3 SmartPoint™ locations add to the fun as they trigger fun phrases when driven over.

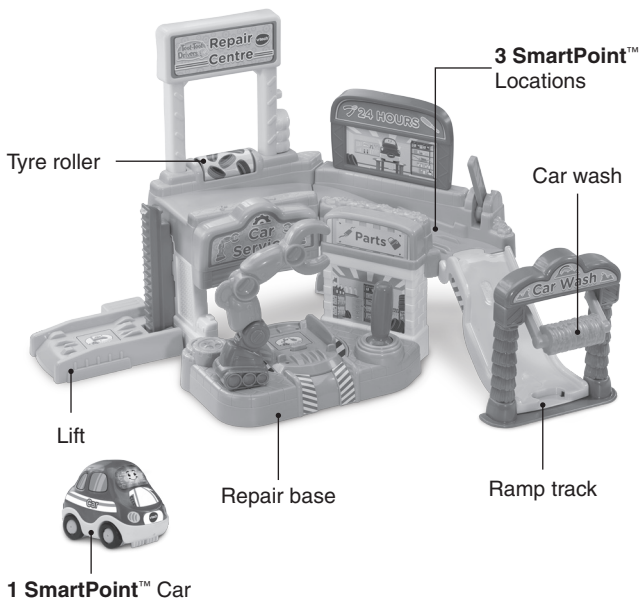

# INCLUDED IN THE PACKAGE



One **SmartPoint™**  
car



One repair base



One base track A



One base track B



 
One track support A



One track support B




One ramp track

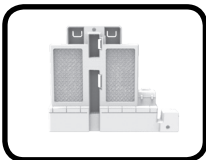

One lift wall



 One lift board

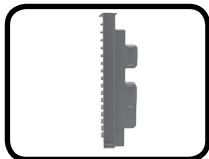

One lift track



 
One sign board



One tyre roller




One display plate

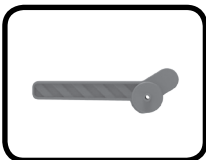

One gate



 
One car wash door

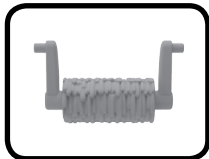

One car wash roller



 One Quick Start Guide

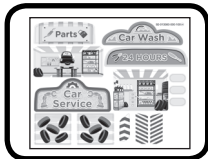

One label sheet

## WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

## NOTE

Please save this Instruction Manual as it contains important information.

 
# INSTRUCTIONS

## WARNING:

Adult assembly required for battery installation.  
Keep batteries out of reach of children.

## Battery Removal and Installation – Car

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

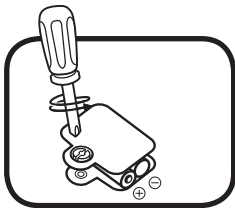

## **IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## **RECHARGEABLE BATTERIES**

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.



Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point\* so all of its materials can be recycled.

Learn more at:

[www.vtech.co.uk/recycle](http://www.vtech.co.uk/recycle)

 
[www.vtech.com.au/sustainability](http://www.vtech.com.au/sustainability)

 
 
\* Visit [www.recyclenow.com](http://www.recyclenow.com) to see a list of collection points near you.



# LABEL APPLICATION

Please stick the labels to the play set securely as indicated on the following page:

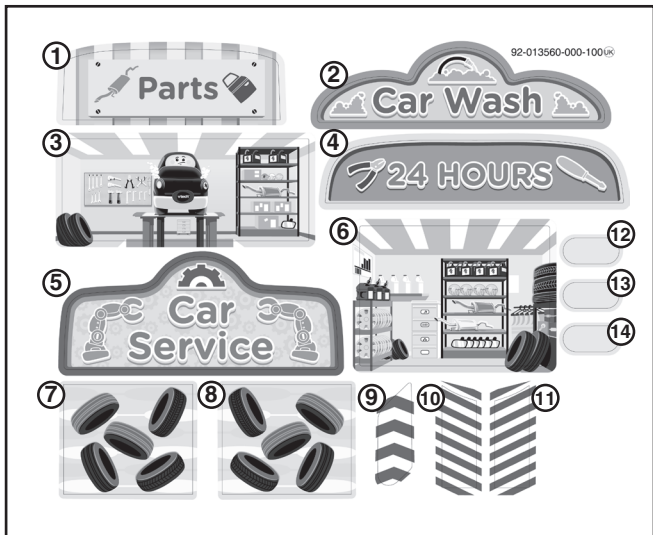

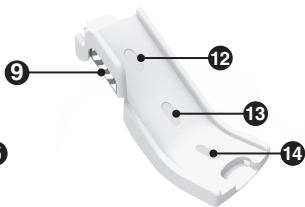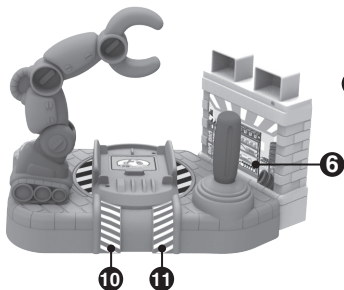


# ASSEMBLY INSTRUCTIONS




With the **VTech® Toot-Toot Drivers® Repair Centre**, safety comes first. To ensure your child's safety, adult assembly is required.

1. Assemble and attach the base track to the track supports and repair base following the steps below:


 
**A.** Attach the base track A with base track B. A clicking sound will confirm they are firmly connected.

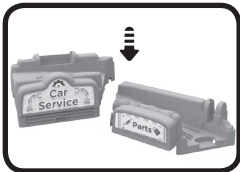

  
 
**B.** With the base track assembly upside down, insert the lift wall, base support A and base support B into the slots on the base track. A clicking sound will confirm they are firmly connected.

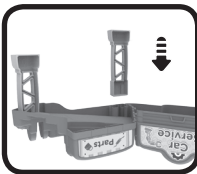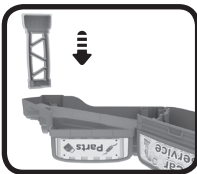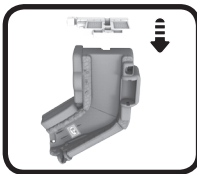

 
 
**C.** Attach the repair base to the base track assembly by inserting the repair base wall into the slots on the base track. Then, insert one end of the lift wall into the slot on the repair base. A clicking sound will confirm they are firmly connected.

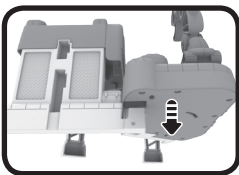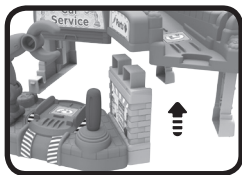


  2. Assemble the lift by attaching the lift track into the slots on the lift wall, and then slide the lift board down the lift track.

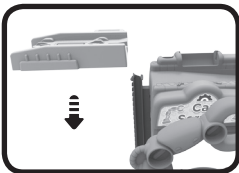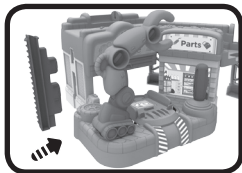


   3. Insert the sign board, tyre roller, display plate, gate and ramp track into the slots on the base track.

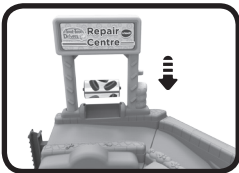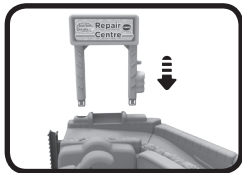

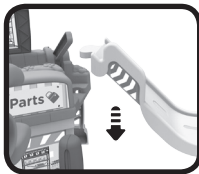

 4. Insert the car wash roller onto the car wash door, and connect the car wash door assembly to the bottom of the ramp track.

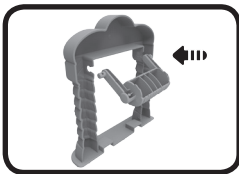



Once you've completed the above steps, you are ready to play! You can also connect the **Repair Centre play set** to other **Toot-Toot Drivers®** play sets (each sold separately).




# PRODUCT FEATURES
 
## Car

### 1. On/Off Switch

To turn the unit **On**, slide the **On/Off Switch** to the **On** (  ) position. To turn the unit **Off**, slide the **On/Off Switch** to the **Off** (  ) position.

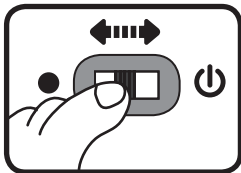

### 2. Automatic Shut-Off

To preserve battery life, the Car will automatically power down after approximately 60 seconds without input. The unit can be turned on again by pressing the light up button, pushing the Car quickly or triggering a SmartPoint™ location.

**Note:** This product is in Try-Me mode in the packaging. After opening the package, turn the vehicle off and on again to proceed with normal play. If the unit repeatedly powers down while playing, please install a new set of batteries.

 
## ACTIVITIES

## Car

1. Press the Light Up Button to hear fun phrases, songs, sounds and melodies. While a melody is playing, continue pushing the Car to add fun sounds on top of the melody. The light will flash with the sounds.



2. Push the Car to hear fun sounds and phrases. The light will flash with the sounds.
3. Place the Car on one of the play set's three SmartPoint™ locations to see the Car's light flash and to hear fun sounds, short tunes and phrases. The Car also interacts with other Toot-Toot Drivers® play sets (each play set sold separately).

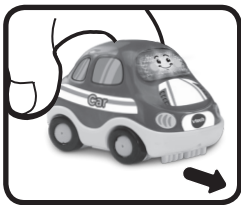

## ACTIVITIES

### Repair Centre

 
1. Place the Car or any SmartPoint™ vehicle (each sold separately) on any of the play set's three SmartPoint™ locations to hear fun sounds, music and phrases.
2. Place the Car on the lift board SmartPoint™ to hear fun sounds and phrases. Lift the board to the top and release the Car to run down the track.



3. Block the Car with the gate to hear fun sounds and phrases, lift up the gate to let the Car run down through the car wash.



4. Place the Car on the repair base, push and pull the joystick to move the Car and mechanical arm up and down. Move the joystick left and right to move the repair base and mechanical arm right and left.

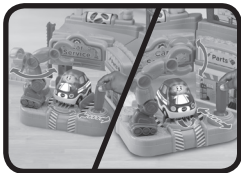

## MELODY LIST

1. Alphabet Song
2. Bicycle Built for Two
3. Blue Danube Waltz
4. Humpty Dumpty
5. Lazy Mary Will You Get Up?
6. Yankee Doodle

## SONG LIST

### Song 1

Hey, friends, where do you wanna go?  
Take a ride, adventure, let's all go!  
Vroom, Vroom, move, cruise and roll along,  
We'll make it fun everyday!



## Song 2

I need a little tune-up,  
So I can drive all around,  
Turn the spanner just here,  
and add the petrol there.

## Song 3

Toot-Toot Drivers!  
I'm a Toot-Toot Drivers Car.  
Heading off on a long road trip. (Toot! Toot!)  
Speedy, swift and confident.  
Let's Toot! Toot! And see! (Toot! Toot!)

# CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play with again.
5. If the unit is not working properly, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department, and a service representative will be happy to help you.

# CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## **UK Customers:**

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)  
Website: [www.vtech.co.uk/support](http://www.vtech.co.uk/support)

## **Australian Customers:**

Phone: 1800 862 155  
Website: [support.vtech.com.au](http://support.vtech.com.au)

## **NZ Customers:**

Phone: 0800 400 785  
Website: [support.vtech.com.au](http://support.vtech.com.au)

# PRODUCT WARRANTY/ CONSUMER GUARANTEES

## **UK Customers:**

Read our complete warranty policy online at [vtech.co.uk/warranty](http://vtech.co.uk/warranty).

## **Australian Customers:**

**VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –  
CONSUMER GUARANTEES**

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [vtech.com.au/consumerguarantees](http://vtech.com.au/consumerguarantees) for further information.

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***www.vtech.co.uk***  
***www.vtech.com.au***

