

DREAMWORKS
**GABBY'S
DOLLHOUSE**



Instruction Manual

Cat-tacular Tablet



DreamWorks Gabby's Dollhouse
© DreamWorks Animation LLC.
All rights reserved.

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



4-10 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTech® Gabby's Dollhouse: Cat-tacular Tablet!** Magical colour changing borders brighten playtime and learning with the Cat-tacular Tablet! Featuring 10 activities with playful animations, enhance your skills in language, maths, music and more with Gabby and her friends.



INCLUDED IN THIS PACKAGE

 
- One **VTech® Gabby's Dollhouse: Cat-tacular Tablet**
- Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE: Please save this Instruction Manual as it contains important information.

Unlock the packaging locks:

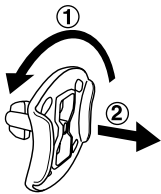

- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks.

 
INSTRUCTIONS

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new 1.5V AA (LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

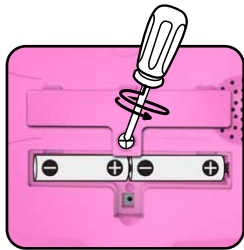

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.

- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product

The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.



Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES

1. ON/OFF BUTTON

Press the **On/Off Button** to turn on the toy. To turn the toy off, press the same button again.

2. LIGHT UP BORDERS

The glowing borders illuminate in red, blue, pink, and purple during play.



3. BACKLIT SCREEN

The colour of the screen backlight can be changed from red to blue, purple or pink.



4. SLIDER

Move the **Slider** to choose among the 4 Apps.

5. 6 CHARACTER ACTIVITY BUTTONS

Press one of the **Character Activity Buttons** to choose one of the 6 learning activities.



6. 26 LETTER BUTTONS

Press the **Letter Buttons** to learn the letters, phonics, or to type words and answer questions in letter related activities.



7. 10 PIANO/NUMBER BUTTONS

Press the **Piano/Number Buttons** to discover numbers, answer questions, or to play melodies.



8. ARROW BUTTONS

Press the **Arrow Buttons** to navigate on the screen or select an option.

9. OK BUTTON

Press the **OK Button** to confirm a selection.

10. BACKLIGHT CONTROL BUTTON

Press the **Backlight Control Button** to change the background colour of the screen (red, blue, pink, or purple) or to turn off the backlight.

11. SETTINGS BUTTON

Press this button to adjust the screen contrast and volume, or turn the border lights on/off. There are 3 steps to adjust the screen contrast and 5 steps to adjust the volume level. Use the **Arrow Buttons** to adjust, and then press the **OK Button** to confirm.

 
12. MUSIC ON/OFF BUTTON

Press this button to turn the background music on or off.

13. AUTOMATIC SHUT OFF

To preserve battery life, the **VTech® Gabby's Dollhouse: Categorical Tablet** will automatically turn off after several minutes of inactivity. The unit can be turned on again by pressing the **On/Off Button**.

The unit will also automatically turn off when the batteries are very low. A warning will be displayed on screen as a reminder to change the batteries.

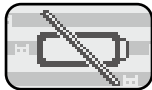

NOTE

If the unit powers down while playing, we suggest changing the batteries.

TO BEGIN PLAY

- Press the **On/Off Button** to turn the unit On. A short animation will play and you will be asked to select an activity.
- To select an activity, move the **Slider** to choose among the 4 Apps or press one of the 6 **Character Activity Buttons** to play.

APPS & ACTIVITIES

 
1. Letter & Number Show

Welcome to the Gabby Cat Gameshow!
Press the **Letter Buttons** to learn about letters, phonics, words and objects. Press the **Number buttons** to learn about numbers and counting.



2. Music Fun

Let's enjoy making music! Use the **Arrow Buttons** and **OK Button** to choose an instrument, and then press the **Piano/Number Buttons** to play.

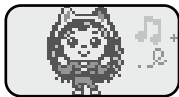

Press the **Letter Buttons** to add other fun sounds and press the **Arrow Buttons** to switch to another instrument.

3. Meow Mail

Gabby is checking her messages. Help her type replies using the **Letter Buttons**. Use the **Arrow Buttons** and **OK Button** to send emojis.



4. Dollhouse Calendar

Checkout the Dollhouse calendar and see what the weather forecast is. Press the **Arrow Buttons** to flip the calendar, then press the **OK Button** to choose a day.



5. Cat Maze

Where is Gabby's cat, Floyd? Doors with matching pictures connect to one another. Press the **Arrow Buttons** to move Gabby to a door, and then press the **OK Button** to enter the door.

There are three levels. The difficulty level will change depending on your progress.



6. Tea Party Counting

It's time for a Cat-tastic tea party!

In level 1, use the **Arrow Buttons** and **OK Button** to choose the correct number of teacups.



In level 2, press the **OK button** to pour the correct number of drinks.



In level 3, add up the total number of cakes. Press the **Number Buttons** to answer.



7. Spelling Game



Let's play a spelling game. Press the **Letter Buttons** to spell the words.

There are three levels. The difficulty level will change depending on your progress.



8. DJ Class



Let's learn to play songs. Follow the falling numbers to play a song. Press the **Piano/Number Buttons** before they hit the bottom.

There are three levels. The difficulty level will change depending on your progress.



9. Bubble Popping



Bubbles, Bubbles, Bubbles! Guess which letter or number is covered by bubbles. Press the **Letter Buttons** or **Number Buttons** to answer.

There are three levels. The difficulty level will change depending on your progress.



10. Box Cats Match



Can you match the pattern with the Box Cats outfit? Press the **Arrow Buttons** to choose a pattern, and then press the **OK Button** to confirm.

There are three levels. The difficulty level will change depending on your progress.



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech**[®] products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

