




User's Manual

Lullaby Lights Bear



© 2016 VTech
Printed in China
91-003141-001-006 

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

Pre-School

Interactive toys to develop their imagination and encourage language development

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

 
4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTech® Lullaby Lights Bear** learning toy! Soothe baby into a peaceful sleep with the **Lullaby Lights Bear**. Baby will relax with a soothing image that projects onto the ceiling while soft melodies, nature sounds and white noise play. The chunky button on the bear's tummy rotates the melodies and sounds.

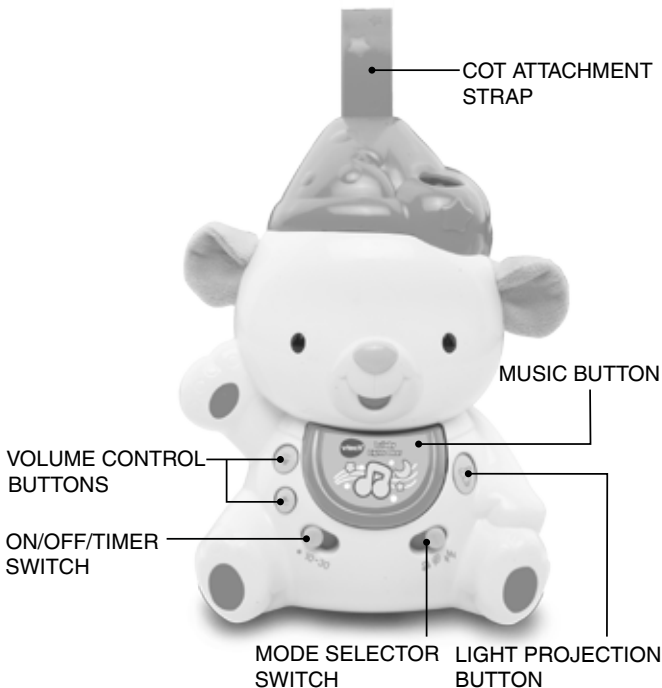


INCLUDED IN THIS PACKAGE

- One VTech® Lullaby Lights Bear
- One attachment strap
- One user's manual

WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this user's manual as it contains important information.

 Unlock the packaging locks:

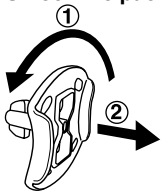


- ① Rotate the packaging locks 90 degrees counter-clockwise.
- ② Pull out the packaging locks.

GETTING STARTED

BATTERY INSTALLATION

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw.
3. Install 3 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
4. Replace the battery cover and tighten the screw to secure.

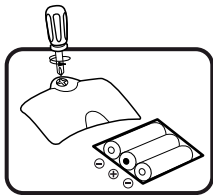

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.



Disposal of batteries and product

The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

NOTE:

With the **VTech® Lullaby Lights Bear** safety comes first.

To ensure your child's safety, the assembly of this product is an adult activity, not a child's activity. Please ensure that the cot attachment strap is securely locked into position to avoid injury. Follow the instructions below carefully and make sure the final assembly is correct. Attach only to cots with sturdy rails and spindles. Do not attach to playpens with mesh walls.

Please make sure the cot attachment strap is out of reach from children when placed in the cot. Please ensure the cot light is positioned in the upright position with the projection light facing directly upwards. Please remove the cot attachment strap from the unit if it is going to be used outside the cot.

ASSEMBLY INSTRUCTIONS

 
1. Place the unit in the cot bringing the strap over the top rail. Slip the top of the strap under the slot on the back of the strap and secure. You can adjust the hanging height by choosing the appropriate hole on the top of the strap.
2. Pull slightly on the unit to make sure the strap has been securely fastened. The unit should be snug against the cot rail. Please check the unit frequently to ensure it is still secure.



PRODUCT FEATURES

1. ON/OFF/TIMER SWITCH

To turn the unit **ON**, slide the **ON/OFF/TIMER SWITCH** to the 10 minute or 30 minute position. To turn the unit **OFF**, slide the **ON/OFF/TIMER SWITCH** to the **OFF** position.

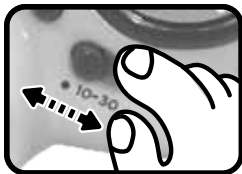

2. MODE SELECTOR SWITCH

Slide the **MODE SELECTOR SWITCH** to the music mode, nature sounds mode or white noise mode position.



3. VOLUME CONTROL BUTTONS

To adjust the volume, press the **VOLUME** (🔊) and **VOLUME** (🔊) buttons.



4. LIGHT PROJECTION BUTTON

Press the **LIGHT PROJECTION BUTTON** to turn the projection light on or off. To preserve battery life, the projection light will automatically turn off after 10 minutes.



5. SOUND SENSOR

 
The **VTech® Lullaby Lights Bear** is equipped with a special sound sensor. Once the selected time setting has ended, the unit will automatically power-down. The sensor will reactivate the program when it detects baby's cry for approximately 4 seconds without interruption. The unit will reactivate and play lullabies, nature sounds or white noise depending on the selected mode.

6. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Lullaby Lights Bear** will automatically power-down after the selected time has ended. The unit can be turned on again by pressing any button.

ACTIVITIES

1. Slide the **on/off/timer switch** to turn the unit on. You will hear a soothing phrase followed by music or sounds related to the selected mode.
2. Press the **music button** to change to the next melody, song or white noise sound.

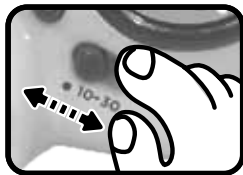

MELODY LIST:

1. Sweet and Low
2. Toyland
3. To a Wild Rose
4. Spring Song
5. Sailing, Sailing
6. Moonlight Sonata
7. Minuet in G
8. Air for the G String
9. Bicycle Built for Two
10. Eine Kleine Nachtmusik
11. Cradle Song
12. Blue Danube Waltz
13. Beautiful Dreamer
14. Fur Elise
15. Waltz of the Flowers
16. Sleeping Beauty Waltz
17. White Coral Bells
18. The Four Seasons (Winter)
19. The Four Seasons (Fall)
20. The Four Seasons (Spring)
21. The Four Seasons (Summer)
22. Shenandoah
23. Serenade
24. Minuet
25. Grandfather's Clock
26. Clair de lune
27. Piano Sonata C 1st Movement
28. All the Pretty Little Horses
29. Brahms Lullaby
30. Au Claire de la lune

SUNG SONG LYRICS

SONG 1

Good night, baby. Good night, baby.
Good night, baby, It's time to go to bed.
Merrily, we roll along, roll along, roll along.
Merrily, we roll along, it's off to sleep we go.

SONG 2

Twinkle, twinkle little star,
How I wonder what you are.
Up above the world so high,
Like a diamond in the sky.
Twinkle, twinkle little star,
How I wonder what you are.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.

5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 01235 546810 (from UK) and +44 1235 546810 (outside UK), and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 01235 546810 (from UK) and +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.

**CLASS 1
LED PRODUCT**



PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
Please include details of the fault together with your name and address.
9. To keep an online record of your warranty, please register your product online at www.vtech.co.uk/warranty

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

