

vtech[®]
Baby

User's Manual

2-in-1 Tri' to Bike



© 2015 VTech
Printed in China
91-003093-001 

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTech® 2-in-1 Tri' to Bike** learning toy!

Zoom around with the **2-in-1 Tri' to Bike**. This 2-in-1 bike grows with your child and transforms from a tricycle into a two-wheel balance bike. It also features an interactive dashboard that introduces objects, colours and road safety.

SHAPE BUTTONS

ARROW
BUTTONS

SPEEDOMETER
DIAL

ON/OFF/VOLUME
CONTROL SWITCH

MODE
SELECTOR DIAL



TWO BACK WHEELS

INCLUDED IN THIS PACKAGE

- One VTech® 2-in-1 Tri' to Bike Interactive dashboard



- One vehicle body



- Two back wheels




- One instruction manual

WARNING: All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy and should be discarded for your child's safety.

NOTE: Please keep user's manual as it contains important information.

GETTING STARTED


Unlock the packaging locks:

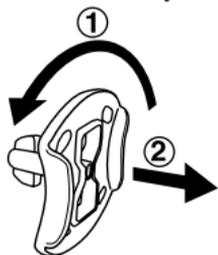

- ① Rotate the packaging locks 90 degrees counter-clockwise.
- ② Pull out the packaging locks.

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the dashboard. Use a coin or a screwdriver to loosen the screw.
3. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new, alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

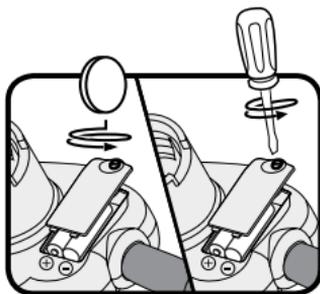

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product

The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.



Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com





Please stick the labels to the vehicle body securely as indicated below:

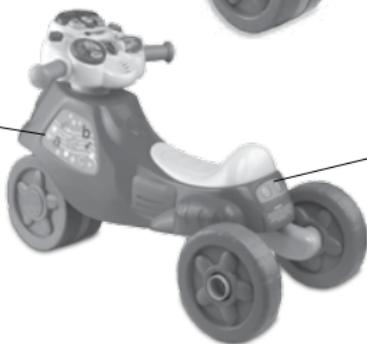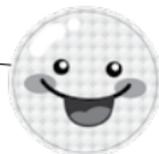

ASSEMBLY INSTRUCTIONS

With the **VTech® 2-in-1 Tri' to Bike** safety comes first. To ensure your child's safety, adult assembly is required.

1. Insert the interactive dashboard into the slot on the top of the vehicle body. You will hear it click into place when it is inserted correctly.
2. To assemble the back wheels in the tricycle position, insert each of the wheels into the slot on the bottom of the vehicle body so the tricycle labels are visible. You will hear the wheels click into place when they are inserted correctly.
3. To assemble the back wheels in the balance bike position, insert each of the wheels into the slot on the bottom of the vehicle body so the motorcycle labels are visible. You will hear the wheels click into place when they are inserted correctly.
4. To remove the wheels, slide the wheel locks inward to unlock the wheels.

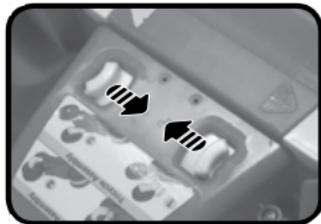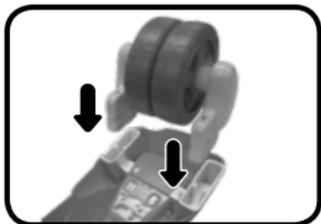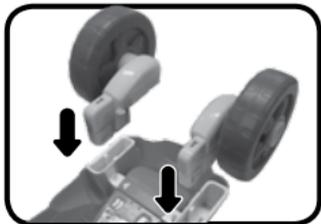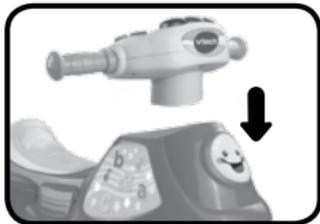

PRODUCT FEATURES

1. ON/OFF/VOLUME CONTROL SWITCH

To turn the unit **ON**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **LOW VOLUME** () or **HIGH VOLUME** () position. To turn the unit **OFF**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **OFF** () position.



2. MODE SELECTOR DIAL

Turn the **MODE SELECTOR DIAL** to select the **LEARNING MODE** () or the **RIDE-ON MODE** ().



3. AUTOMATIC SHUT-OFF




To preserve battery life, the **VTech® 2-in-1 Tri® to Bike** will automatically power-down after approximately 60 seconds without input. The unit can be turned on again by pressing any button.

WARNING: Not to be used by children over 36 months.
Insufficient strength. 20 Kilograms Max.

Regularly check for signs of wear or tear on the snap in or locking devices. If damaged do not use until repaired or replaced. Only to be used under the direct supervision of a competent adult.

ACTIVITIES

1. Slide the **on/off/volume control switch** to turn the unit on. You will hear a playful sound, a song and fun phrase. The lights will flash with the sounds.
2. Press the **shape buttons** to learn shapes and hear playful songs in the learning mode. In the ride-on mode you will learn objects and hear fun phrases and answer simple questions. The lights will flash with the sounds.
3. Press the **arrow buttons** to learn colours and hear fun phrases and music in the learning mode. In the ride-on mode you will learn colours and hear fun phrases. The lights will flash with the sounds.
4. Press the **speedometer button** to hear music in the learning mode and sounds in the ride-on mode. The lights will flash with the sounds.

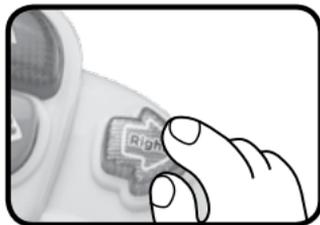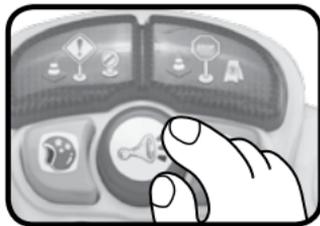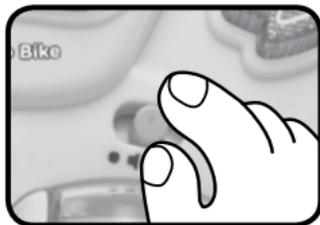

5. Turn the **speedometer** to hear music notes in the learning mode and sounds in the ride-on mode. The lights will flash with the sounds.



6. Activate the **motion sensor** to hear melodies in the learning mode and fun motorbike sounds in the ride-on mode. The lights will flash with the sounds.

ATTENTION!

This toy should be played with in a safe area indoors.

Please ensure young children are supervised by an adult. Please also ensure your child is positioned correctly on the seat when the product is being used as a ride-on toy.

This toy should be used with caution to avoid falls or collisions that could cause injury to your child or others.

MELODY LIST

1. I've Been Working on the Railroad
2. Jack and Jill
3. London Bridge
4. Muffin Man
5. Ride of the Valkyries
6. Camptown Races
7. Pat-a-Cake
8. Three Blind Mice
9. Ride a Cock Horse to Banbury Cross
10. Turkey in the Straw

11. Did You Ever See a Lassie?
12. Glow Worm
13. Clementine
14. Take Me Out to the Ball Game
15. Shoo Fly Don't Bother Me

Sing-Along Song Lyrics

SONG 1

Riding on my motorbike,
With the wind in my hair.
Riding on the open road,
I love fresh air!

SONG 2

Red means stop,
Yellow means slow,
And green means we can go!

SONG 3

Jacket, gloves and helmet,
Keep me warm and safe when driving!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK), with any problems and/or suggestions that you might have. A service

**CLASS 1
LED PRODUCT**

WARNING:
Adult assembly required.



PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
Please include details of the fault together with your name and address.
9. To keep an online record of your warranty, please register your product online at www.vtech.co.uk/warranty

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

